

# **Dell Pro Tower Essential**

## **QVT1260**

### Owner's Manual

## Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

# Contents

<b>Chapter 1: Views of Dell Pro Tower Essential QVT1260.....</b>	<b>6</b>
Front.....	6
Back.....	7
Back panel.....	8
<b>Chapter 2: Set up your computer.....</b>	<b>10</b>
<b>Chapter 3: Specifications of Dell Pro Tower Essential QVT1260.....</b>	<b>14</b>
Dimensions and weight.....	14
Processor.....	14
Chipset.....	15
Operating system.....	15
Memory.....	16
External ports and slots.....	16
Internal slots.....	17
Ethernet.....	17
Wireless module.....	17
Audio.....	18
Storage.....	18
Power ratings.....	18
Power supply connector.....	19
GPU—Integrated.....	19
Video port and resolution matrix.....	20
Hardware security.....	20
Environmental.....	20
Regulatory compliance.....	20
Operating and storage environment.....	21
<b>Chapter 4: Working inside your computer.....</b>	<b>22</b>
Safety instructions.....	22
Before working inside your computer.....	22
Safety precautions.....	23
Electrostatic discharge—ESD protection.....	23
ESD Field Service kit .....	24
Transporting sensitive components.....	25
After working inside your computer.....	25
BitLocker.....	25
Recommended tools.....	25
Screw list.....	26
Major components of Dell Pro Tower Essential QVT1260.....	27
<b>Chapter 5: Left-side cover.....</b>	<b>29</b>
Removing the left-side cover.....	29
Installing the left-side cover.....	30

<b>Chapter 6: Coin-cell battery cover.....</b>	<b>33</b>
Removing the coin-cell battery cover.....	33
Installing the coin-cell battery.....	33
<b>Chapter 7: Coin-cell battery.....</b>	<b>35</b>
Removing the coin-cell battery.....	35
Installing the coin-cell battery.....	35
<b>Chapter 8: Removing and installing Customer Replaceable Units (CRUs).....</b>	<b>37</b>
Front cover .....	37
Removing the front cover.....	37
Installing the front cover.....	38
Memory.....	39
Removing the memory.....	39
Installing the memory.....	39
Solid state drive.....	40
Removing the M.2 2230 solid-state drive.....	40
Installing the M.2 2230 solid-state drive.....	41
Graphics card.....	42
Removing the graphics card.....	42
Installing the graphics card.....	43
Wireless card.....	44
Removing the wireless card.....	44
Installing the wireless card.....	45
Drive bay.....	47
Removing the drive bay.....	47
Installing the drive bay.....	48
Hard drive.....	51
Removing the hard drive.....	51
Installing the hard drive.....	52
Power button.....	53
Removing the power button.....	53
Installing the power button.....	53
Media-card reader.....	54
Removing the media-card reader.....	54
Installing the media-card reader.....	55
Fans.....	56
Removing the fan.....	56
Installing the fan.....	57
Serial-port module.....	59
Removing the serial-port module.....	59
Installing the serial-port module.....	60
<b>Chapter 9: Removing and installing Field Replaceable Units (FRUs).....</b>	<b>62</b>
Antenna modules.....	62
Removing the antenna modules.....	62
Installing the antenna modules.....	63
Power-supply unit.....	65

Removing the power-supply unit.....	65
Installing the power-supply unit.....	67
Processor fan and heat-sink assembly.....	70
Removing the processor fan and heat-sink assembly.....	70
Installing the processor fan and heat-sink assembly.....	71
Processor.....	72
Removing the processor.....	72
Installing the processor.....	73
System board.....	74
Removing the system board.....	74
Installing the system board.....	78
<b>Chapter 10: Software.....</b>	<b>84</b>
Operating system.....	84
Drivers and downloads.....	84
<b>Chapter 11: BIOS Setup.....</b>	<b>85</b>
Entering BIOS Setup program.....	85
Navigation keys.....	85
One time boot menu.....	85
F12 One Time Boot menu.....	86
BIOS Setup options.....	86
Updating the BIOS.....	98
Updating the BIOS in Windows.....	98
Updating the BIOS in Linux and Ubuntu.....	98
Updating the BIOS using the USB drive in Windows.....	98
Updating the BIOS from the One-Time boot menu.....	99
System and setup password.....	99
Assigning a System Setup password.....	99
Deleting or changing an existing system password or setup password.....	100
Clearing CMOS settings.....	100
Clearing system and setup passwords.....	100
<b>Chapter 12: Troubleshooting.....</b>	<b>102</b>
Dell SupportAssist Pre-boot System Performance Check diagnostics.....	102
Running the SupportAssist Pre-Boot System Performance Check.....	102
Power-Supply Unit Built-in Self-Test .....	102
System-diagnostic lights.....	102
Recovering the operating system.....	103
Real-Time Clock—RTC reset.....	104
Backup media and recovery options.....	104
Network power cycle.....	104
<b>Chapter 13: Getting help and contacting Dell.....</b>	<b>105</b>
<b>Chapter 14: Revision history.....</b>	<b>106</b>

# Views of Dell Pro Tower Essential QVT1260

## Front

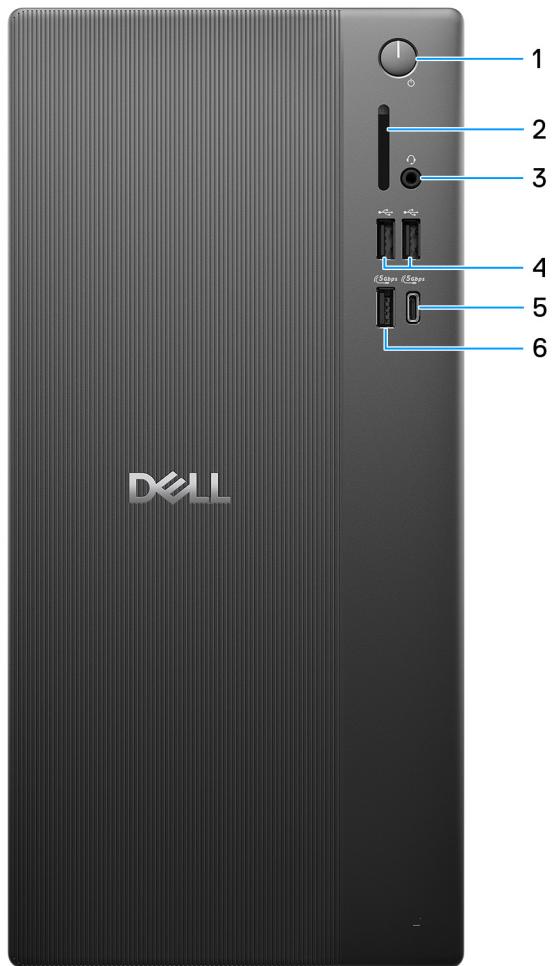


Figure 1. Front view of Dell Pro Tower Essential QVT1260

### 1. Power button with diagnostic LED

Press to turn on the computer if it is turned off, in sleep state, or in hibernate state.

When the computer is turned on, press the power button to put the computer into sleep state; press and hold the power button for four seconds to force shut-down the computer.

**(i) NOTE:** You can customize the power-button behavior in Windows.

### 2. SD-card 3.0 slot (optional)

Reads from and writes to the SD card.

### 3. Global headset jack

Connect headphones or a headset (headphone and microphone combo).

#### 4. Two USB 2.0 (480 Mbps) ports

Connect devices such as external storage devices and printers. Provides data transfer speeds of up to 480 Mbps.

#### 5. USB 3.2 Gen 1 (5 Gbps) Type-C port


Connect devices such as external storage devices and printers. Provides data transfer speeds of up to 5 Gbps.

 **NOTE:** This port does not support video/audio streaming.

#### 6. USB 3.2 Gen 1 (5 Gbps) port

Connect devices such as external storage devices and printers. Provides data transfer speeds of up to 5 Gbps.

## Back

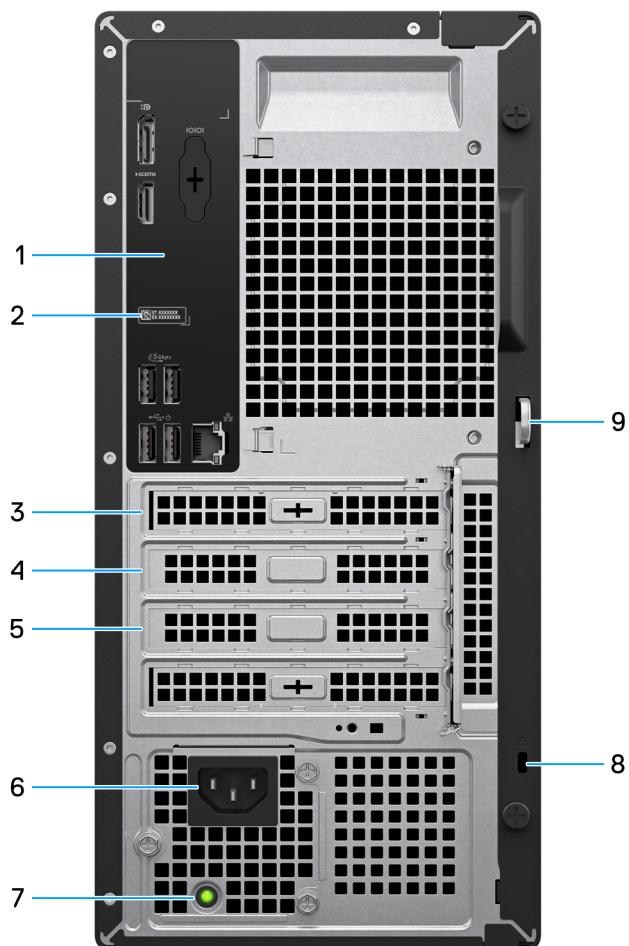

**Figure 2. Back view of Dell Pro Tower Essential QVT1260**

#### 1. Back panel

Connect USB, audio, video, and other devices.

#### 2. Service Tag label

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

#### 3. Full-height PCIe x1 slot

Connect a PCI-Express card such as an audio, or network card to enhance the capabilities of your computer.

#### 4. Full-height PCIe x1 slot

Connect a PCI-Express card such as an audio, or network card to enhance the capabilities of your computer.

#### 5. Full-height PCIe x16 expansion card slot

Connect a PCI-Express card such as graphics, audio, or network card to enhance the capabilities of your computer.

#### 6. Power-cord connector port

Connect a power cable to provide power to your computer.

#### 7. Power-supply diagnostic light

Indicates the power-supply state.


#### 8. Security-cable slot (for Kensington locks)

Connect a security cable to prevent unauthorized movement of your computer.

#### 9. Padlock ring

Attach a standard padlock to prevent unauthorized access to the interior of your computer.

## Back panel

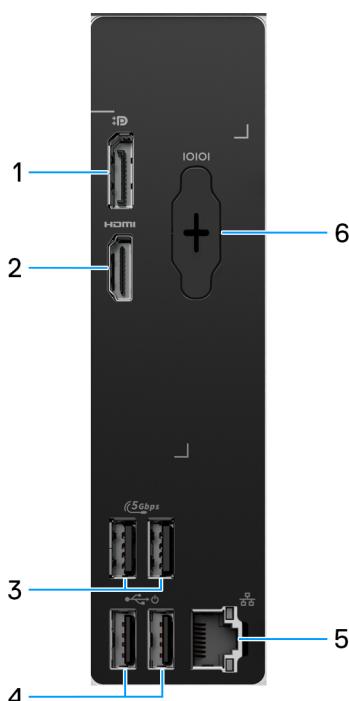

**Figure 3. Back panel view of Dell Pro Tower Essential QVT1260**

#### 1. DisplayPort 1.4a (HBR2) port

Connect an external display or a projector.

The maximum resolution that is supported by the DisplayPort 1.4a (HBR2) port is up to 4096 x 2304 at 60 Hz.

#### 2. HDMI 2.1 (TMDS) port

Connect to a TV, external display or another HDMI-in enabled device. The maximum resolution that is supported by this port is up to 4096 x 2160 at 60 Hz.

#### 3. Two USB 3.2 Gen 1 (5 Gbps) ports

Connect devices such as external storage devices and printers. Provides data transfer speeds of up to 5 Gbps.

#### 4. Two USB 2.0 (480 Mbps) with SmartPower On ports

Connect devices such as external storage devices and printers. Provides data transfer speeds of up to 480 Mbps.

 **NOTE:** When USB wake is enabled in the BIOS the computer will power on or wake from hibernation when a USB mouse or keyboard that is connected to this port is used.

#### 5. **RJ45 ethernet port (1 Gbps)**

Connect an RJ45 ethernet cable from a router or a broadband modem for network or Internet access.

#### 6. **Legacy serial port (optional)**


Connect a peripheral or device to the RS-232 serial port.

## Set up your computer

### Steps


1. Connect the keyboard and mouse.

 **NOTE:** For setup instructions, see the documentation shipped with the keyboard and mouse.

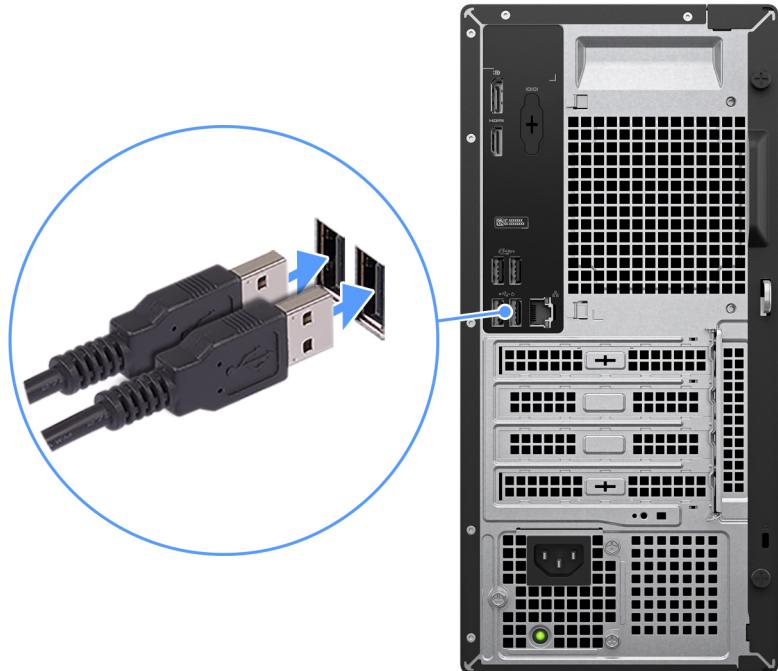

**Figure 4. Connecting the keyboard and mouse**


2. Connect to your network using a cable, or connect to a wireless network.

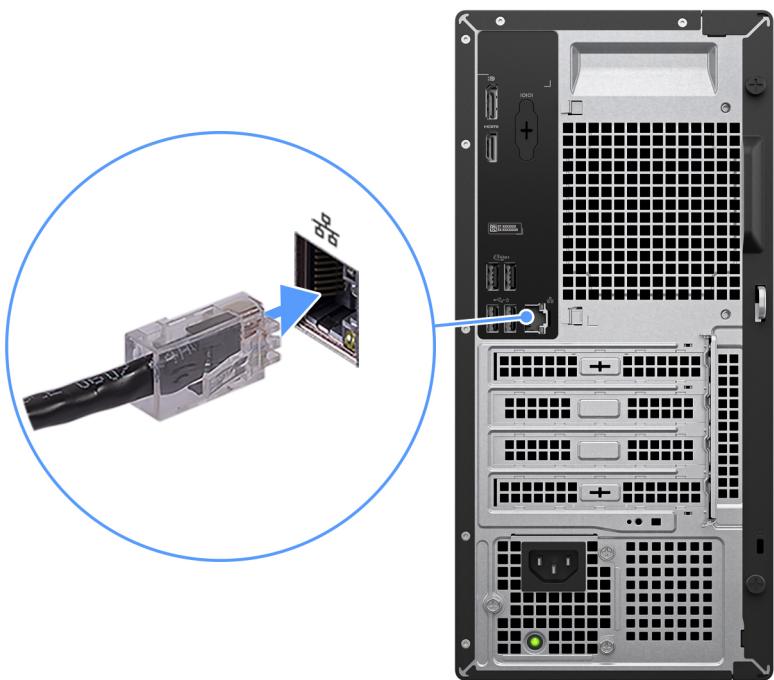

**Figure 5. Connecting the network cable**

3. Connect the display.

**(i) NOTE:** For improved graphical performance, connect the display to the display ports on the discrete graphics processing unit.

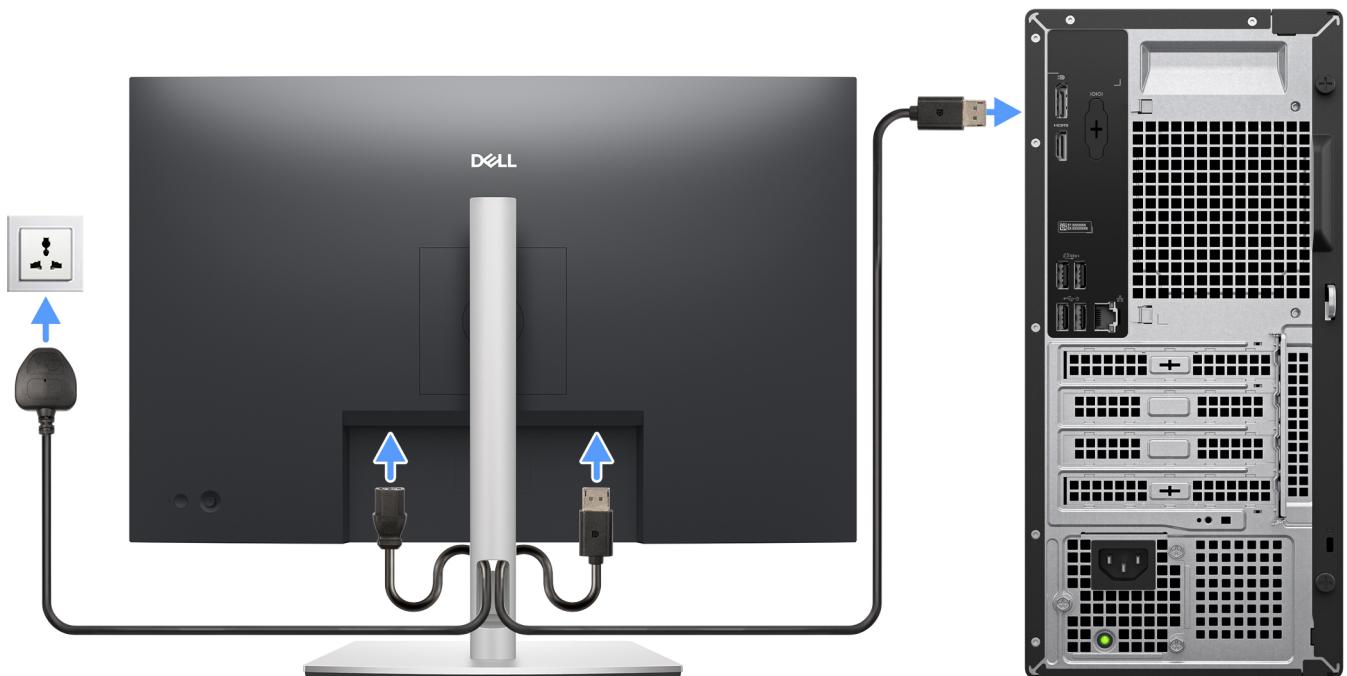

**Figure 6. Connecting the display**

4. Connect the power cable.



**Figure 7. Connecting the power cable**

5. Press the power button.



**Figure 8. Pressing the power button**

6. Finish the operating system setup.

**For Windows:**

Follow the on-screen instructions to complete the setup. When setting up, Dell Technologies recommends that you:

- Connect to a network for Windows updates.



**NOTE:** If connecting to a secured wireless network, enter the password for the wireless network access when prompted.

- If connected to the Internet, sign-in with or create a Microsoft account. If not connected to the Internet, create an offline account.
- On the **Support and Protection** screen, enter your contact details.

7. Locate and use Dell apps from the Windows Start menu—Recommended.

**Table 1. Locate Dell apps**

Resources	Description
	<p>Dell Optimizer is an application that is designed to enhance computer performance and productivity by optimizing settings for power, battery, display, collaboration touchpad, and presence detection. It also provides access to applications purchased with your new computer.</p> <p>For more information, see Dell Optimizer User's Guide at <a href="#">Dell Support Site</a>.</p>
	<p><b>Dell Product Registration</b></p> <p>Register your computer with Dell.</p>
	<p><b>Dell Help &amp; Support</b></p> <p>Access help and support for your computer.</p>
	<p><b>SupportAssist</b></p> <p>SupportAssist is a proactive and predictive technology that offers automated technical support for Dell computers. It proactively monitors both hardware and software, addressing performance issues, preventing security threats, and automating engagement with Dell Technical Support.</p> <p>For more information, see SupportAssist for Home PCs User's Guide at <a href="#">Dell Support Site</a>.</p> <p><b>NOTE:</b> In SupportAssist, click the warranty expiry date to renew or upgrade your warranty.</p>

# Specifications of Dell Pro Tower Essential QVT1260

## Dimensions and weight

The following table lists the height, width, depth, and weight of your Dell Pro Tower Essential QVT1260.

**Table 2. Dimensions and weight**

Description	Values
Height:	
Front height	324.30 mm (12.77 in.)
Rear height	324.30 mm (12.77 in.)
Width	154 mm (6.06 in.)
Depth	293 mm (11.54 in.)
Weight	<ul style="list-style-type: none"><li>• Minimum: 4.16 kg (9.17 lb)</li><li>• Maximum: 6.86 kg (15.12 lb)</li></ul>
<b>NOTE:</b> The weight of your computer depends on the configuration that you ordered.	

## Processor

The following tables list the details of the processors supported by your Dell Pro Tower Essential QVT1260.

## Processors

**Table 3. Processors**

<b>Description</b>	<b>Option one</b>	<b>Option two</b>
Processor type	Intel Core i3 14100	Intel Core i5 14400
Processor wattage	60 W	65 W
Processor total core count	4	10
Performance-cores	4	6
Efficient-cores	None	4
Processor total thread counts	8	16
<b>① NOTE:</b> Intel® Hyper-Threading Technology is only available on Performance-cores.		
Processor speed	Up to 4.70 GHz	Up to 4.7 GHz
Performance-cores frequency		
Processor base frequency	3.50 GHz	2.50 GHz
Maximum turbo frequency	4.70 GHz	4.70 GHz
Efficient-cores frequency		
Processor base frequency	Not applicable	1.80 GHz
Maximum turbo frequency	Not applicable	3.50 GHz
Processor cache	12 MB	20 MB
Integrated graphics	Intel UHD Graphics 730	Intel UHD Graphics 730

## Chipset

The following table lists the details of the chipset that is supported by your Dell Pro Tower Essential QVT1260.

**Table 4. Chipset**

<b>Description</b>	<b>Values</b>
Chipset	Intel Q670
Processor	<ul style="list-style-type: none"><li>• Intel Core i3</li><li>• Intel Core i5</li></ul>
DRAM bus width	64-bit/128-bit
Flash EPROM	32 MB RPMC + 16 MB nPRMC
PCIe bus	Up to Gen3

## Operating system

Your Dell Pro Tower Essential QVT1260 supports the following operating systems:

- Windows 11 Home
- Windows 11 Pro
- Windows 11 Home National Education

- Windows 11 Pro National Education

## Memory

The following table lists the memory specifications that are supported by your Dell Pro Tower Essential QVT1260.

**Table 5. Memory specifications**

Description	Values
Memory slots	Two UDIMM slots
Memory type	DDR5
Memory speed	4800 MT/s
Maximum memory configuration	32 GB
Minimum memory configuration	8 GB
Memory size per slot	8 GB or 16 GB
Memory configurations supported	<ul style="list-style-type: none"> <li>• 8 GB: 1 x 8 GB, single-channel DDR5, up to 4800 MT/s</li> <li>• 16 GB: 1 x 16 GB, single-channel DDR5, up to 4800 MT/s</li> <li>• 16 GB: 2 x 8 GB, dual-channel DDR5, up to 4800 MT/s</li> <li>• 32 GB: 2 x 16 GB, dual-channel DDR5, up to 4800 MT/s</li> </ul>

## External ports and slots

The following table lists the external ports and slots of your Dell Pro Tower Essential QVT1260.

**Table 6. External ports and slots**

Description	Values
Network port	One RJ45 ethernet port (1 Gbps)
USB ports	<ul style="list-style-type: none"> <li>• Two USB 2.0 (480 Mbps) ports</li> <li>• One USB 3.2 Gen 1 (5 Gbps) Type-C port</li> <li>• Three USB 3.2 Gen 1 (5 Gbps) ports</li> <li>• Two USB 2.0 (480 Mbps) with SmartPower on ports</li> </ul>
Audio port	One global headset jack
Video port(s)	<ul style="list-style-type: none"> <li>• One DisplayPort 1.4a (HBR2) port</li> <li>• One HDMI 2.1 (TMDS) port</li> </ul>
Power port	One power-cable connector
Peripheral port	One legacy serial port (optional)
Security-cable slot	<ul style="list-style-type: none"> <li>• One padlock ring</li> <li>• One security-cable slot (Kensington lock)</li> </ul>

# Internal slots

The following table lists the internal slots on your Dell Pro Tower Essential QVT1260.

**Table 7. Internal slots**

Description	Values
M.2	<ul style="list-style-type: none"><li>One M.2 2230 slot for WiFi and Bluetooth combo card</li><li>One M.2 2230/2280 slot for solid-state drive</li></ul> <p><b>(i) NOTE:</b> To learn more about the features of different types of M.2 cards, search in the Knowledge Base Resource at <a href="#">Dell Support Site</a>.</p>
SATA	One SATA 3.0 slot for 3.5-inch hard drive
PCIe	<ul style="list-style-type: none"><li>One full-height PCIe x16 slot</li><li>Two full-height PCIe x1 slots</li></ul>

# Ethernet

The following table lists the wired ethernet Local Area Network (LAN) specifications of your Dell Pro Tower Essential QVT1260.

**Table 8. Ethernet specifications**

Description	Values
Model	Realtek RTL8111KD
Transfer rate	10/100/1000 Mbps

# Wireless module

The following table lists the Wireless Local Area Network (WLAN) module specifications of your Dell Pro Tower Essential QVT1260.

**Table 9. Wireless module specifications**

Description	Option one	Option two
Model number	Intel Wi-Fi 6E AX211	MediaTek Wi-Fi 6 MT7920
Transfer rate	Up to 2400 Mbps	Up to 1200 Mbps
Frequency bands supported	2.4 GHz/5 GHz/6 GHz	2.4 GHz/5 GHz
Wireless standards	<ul style="list-style-type: none"><li>WiFi 802.11a/b/g</li><li>Wi-Fi 4 (WiFi 802.11n)</li><li>Wi-Fi 5 (WiFi 802.11ac)</li><li>Wi-Fi 6E (WiFi 802.11ax)</li></ul>	<ul style="list-style-type: none"><li>WiFi 802.11a/b/g</li><li>Wi-Fi 4 (WiFi 802.11n)</li><li>Wi-Fi 5 (WiFi 802.11ac)</li><li>Wi-Fi 6 (WiFi 802.11ax)</li></ul>
Encryption	<ul style="list-style-type: none"><li>64-bit/128-bit WEP</li><li>AES-CCMP</li><li>TKIP</li></ul>	<ul style="list-style-type: none"><li>64-bit/128-bit WEP</li><li>AES-CCMP</li><li>TKIP</li></ul>
Bluetooth wireless card	Bluetooth 5.3	Bluetooth 5.4

**Table 9. Wireless module specifications (continued)**

Description	Option one	Option two
	<b>NOTE:</b> The functionality of the Bluetooth wireless card may vary depending on the operating system that is installed on your computer.	

## Audio

The following table lists the audio specifications of your Dell Pro Tower Essential QVT1260.

**Table 10. Audio specifications**

Description	Values
Audio type	High Definition Audio
Audio controller	Realtek ALC3204
Internal audio interface	High Definition Audio (HDA) interface
External audio interface	One global headset jack

## Storage

This section lists the storage options on your Dell Pro Tower Essential QVT1260.

Your Dell Pro Tower Essential QVT1260 supports a combination of the following storage configurations:

- One 3.5-inch hard drive + drive bay
- One M.2 2230/2280 solid-state drive

**NOTE:** The drive bay is only shipped on computers with a 3.5-inch hard drive installed.

The primary drive of your Dell Pro Tower Essential QVT1260 is the the M.2 solid-state drive installed on your computer.

**Table 11. Storage specifications**

Storage type	Interface type	Capacity
3.5-inch hard drive	SATA AHCI, up to 6 Gbps	Up to 2 TB
M.2 2230 QLC solid-state drive, Class 25	PCIe Gen3x4 NVMe, up to 32 GT/s	Up to 2 TB
M.2 2230 TLC solid-state drive, Class 35	PCIe Gen3x4 NVMe, up to 32 GT/s	Up to 256 GB

## Power ratings

The following table lists the power rating specifications of Dell Pro Tower Essential QVT1260.

**Table 12. Power ratings**

Description	Option one	Option two
Type	180 W, Bronze	360 W, Platinum
Input voltage	90 VAC–264 VAC	90 VAC–264 VAC
Input frequency	47 Hz–63 Hz	47 Hz–63 Hz

**Table 12. Power ratings (continued)**

Description	Option one	Option two
Input current (maximum)	3 A	5 A
Output current (continuous)	<b>Operating:</b> <ul style="list-style-type: none"> <li>12 VA: 16 A</li> <li>12 VB: 14 A</li> </ul> <b>Storage:</b> <ul style="list-style-type: none"> <li>12 VA: 1.50 A</li> <li>12 VB: 3.30 A</li> </ul>	<b>Operating:</b> <ul style="list-style-type: none"> <li>12 VA: 18 A</li> <li>12 VB: 18 A</li> <li>12 VC: 13 A</li> </ul> <b>Storage:</b> <ul style="list-style-type: none"> <li>12 VA: 1.50 A</li> <li>12 VB: 3.30 A</li> <li>12 VC: 3.30 A</li> </ul>
Rated output voltage	12 VDC	12 VDC
Temperature range:		
Operating	5°C to 45°C (41°F to 113°F)	5°C to 45°C (41°F to 113°F)
Storage	-40°C to 70°C (-40°F to 158°F)	-40°C to 70°C (-40°F to 158°F)

## Power supply connector

The following table lists the Power supply connector specifications of your Dell Pro Tower Essential QVT1260.

**Table 13. Power supply connector**

Power supply	Connectors
180 W internal power supply unit (PSU), 80 Plus Bronze	<ul style="list-style-type: none"> <li>Two 4-pin connectors for processor</li> <li>One 8-pin connector for system board</li> </ul>
360 W internal power supply unit (PSU), 80 Plus Platinum	<ul style="list-style-type: none"> <li>Two 4-pin connectors for processor</li> <li>One 8-pin connector for system board</li> <li>One 8-pin connector for graphics card</li> </ul> <p><b>NOTE:</b> An 8-pin power cable is only included on configurations with a discrete graphics card that requires it.</p>

## GPU—Integrated

The following table lists the specifications of the integrated Graphics Processing Unit (GPU) supported by your Dell Pro Tower Essential QVT1260.

**Table 14. GPU—Integrated**

Controller	Memory size	Processor
Intel UHD Graphics 730	Shared system memory	Intel Core i3/i5

## Video port and resolution matrix

The following table lists the Video port and resolution matrix of your Dell Pro Tower Essential QVT1260.

**NOTE:** DisplayPort Multi-Stream Technology is a feature that allows you to connect up to four displays to a single DisplayPort port on your device using a daisy chain. This enables you to use multiple displays simultaneously, increasing your productivity and workspace efficiency.

**Table 15. Video port and resolution matrix**

Port type	DisplayPort 1.4a (HBR2)	HDMI 2.1 (TDMS)
Maximum resolution—single display	4096 x 2304 at 60 Hz	4096 x 2160 at 60 Hz
Maximum resolution—dual MST	2560 x 1600 at 60 Hz	Not applicable
Maximum resolution—triple MST	2560 x 1440 at 60 Hz	Not applicable
Maximum resolution—quadruple MST	1920 x 1080 at 60 Hz	Not applicable

## Hardware security

The following table lists the hardware security of your Dell Pro Tower Essential QVT1260.

**Table 16. Hardware security**

Hardware security
Security-cable slot (Kensington lock)
Padlock ring
Safely including Trusted Platform Module (TPM) 2.0
Trusted Platform Module TPM 2.0

## Environmental

The following table lists the environmental specifications of your Dell Pro Tower Essential QVT1260.

**NOTE:** Wood-based fiber packaging contains a minimum of 35% recycled content by total weight of wood-based fiber. Packaging that contains without wood-based fiber can be claimed as Not Applicable. The anticipated required criteria for EPEAT 2018.

## Regulatory compliance

The following table lists the regulatory compliance of your Dell Pro Tower Essential QVT1260.

**Table 17. Regulatory compliance**

Regulatory compliance
<a href="#">Product Safety, EMC and Environmental Datasheets</a>
<a href="#">Dell Regulatory Compliance Home page</a>
<a href="#">Responsible Business Alliance policy</a>

# Operating and storage environment

This table lists the operating and storage specifications of your Dell Pro Tower Essential QVT1260.

**Airborne contaminant level:** G1 as defined by ISA-S71.04-1985

**Table 18. Computer environment**

Description	Operating	Storage
Temperature range	10°C to 35°C (50°F to 95°F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	10% to 90% (non-condensing)	0% to 95% (non-condensing)
Vibration (maximum)*	0.26 GRMS	1.37 GRMS
Shock (maximum)	40 G†	105 G†
Altitude range	-15.2 m to 3048 m (-49.87 ft to 10000 ft)	-15.2 m to 10668 m (-49.87 ft to 35000 ft)

 **CAUTION:** Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.

\* Measured using a random vibration spectrum that simulates the user environment.

† Measured using a 2 ms half-sine pulse.

# Working inside your computer

## Safety instructions

Use the following safety guidelines to protect your computer from potential damage and to ensure your personal safety. Unless otherwise noted, each procedure in this document assumes that you have read the safety information that shipped with your computer.

- ⚠ WARNING: Before working inside your computer, read the safety information that is shipped with your computer. For more safety best practices, see [Dell Regulatory Compliance Home Page](#).**
- ⚠ WARNING: Disconnect your computer from all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting your computer to an electrical outlet.**
- ⚠ WARNING: For laptops, discharge the battery completely before removing it. Disconnect the AC power adapter from the computer and operate the computer solely on battery power—the battery is fully discharged when the computer no longer turns on when the power button is pressed.**
- ⚠ CAUTION: To avoid damaging the computer, ensure that the work surface is flat, dry, and clean.**
- ⚠ CAUTION: You should only perform troubleshooting and repairs as authorized or directed by the Dell technical support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty.**
- ⚠ CAUTION: Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity which could harm internal components.**
- ⚠ CAUTION: To avoid damaging the components and cards, handle them by their edges, and avoid touching the pins and the contacts.**
- ⚠ CAUTION: When you disconnect a cable, pull it by its connector or its pull tab, not the cable itself. Some cables have connectors with locking tabs or thumbscrews that you must disengage before disconnecting the cable. When disconnecting cables, keep them evenly aligned to avoid bending the connector pins. When connecting cables, ensure that the connector on the cable is correctly oriented and aligned with the port.**
- ⚠ CAUTION: Press and eject any installed card from the media-card reader.**

## Before working inside your computer

### About this task

- i NOTE: The images in this document may differ from your computer depending on the configuration you ordered.**

### Steps

1. Save and close all open files and exit all open applications.
2. Shut down your computer. For Windows operating system, click **Start > ⏪ Power > Shut down**.  
**i NOTE: If you are using a different operating system, see the documentation of your operating system for shut-down instructions.**
3. Turn off all the attached peripherals.
4. Disconnect your computer from the electrical outlet.

5. Disconnect all attached network devices and peripherals, such as keyboard, mouse, and monitor from your computer.

 **CAUTION:** To disconnect a network cable, unplug the cable from your computer.

6. Remove any media card and optical disc from your computer, if applicable.

## Safety precautions

This section details the primary steps to be followed before disassembling any device or component.

Observe the following safety precautions before any installation or break-fix procedures involving disassembly or reassembly:

- Turn off the computer and all attached peripherals.
- Disconnect the computer from AC power.
- Disconnect all network cables and peripherals from the computer.
- Use an ESD field service kit when working inside your computer to avoid electrostatic discharge (ESD) damage.
- Place the removed component on an anti-static mat after removing it from the computer.
- Press and hold the power button for 15 seconds to discharge the residual power in the system board.

## Bonding

Bonding is a method for connecting two or more grounding conductors to the same electrical potential. This is done by using a field service electrostatic discharge (ESD) kit. When connecting a bonding wire, ensure that it is connected to bare metal and never to a painted or nonmetal surface. Ensure that the wrist strap is secure and in full contact with your skin. Remove all jewelry, watches, bracelets, or rings before grounding yourself and the equipment.

## Electrostatic discharge—ESD protection

ESD is a major concern when you handle electronic components, especially sensitive components such as expansion cards, processors, memory modules, and system boards. A slight charge can damage circuits in ways that may not be obvious, such as intermittent problems or a shortened product life span. As the industry pushes for lower power requirements and increased density, ESD protection is an increasing concern.

Two recognized types of ESD damage are catastrophic and intermittent failures.

- **Catastrophic** – Catastrophic failures represent approximately 20 percent of ESD-related failures. The damage causes an immediate and complete loss of device functionality. An example of catastrophic failure is a memory module that has received a static shock and immediately generates a "No POST/No Video" symptom with a beep code that is emitted for missing or nonfunctional memory.
- **Intermittent** – Intermittent failures represent approximately 80 percent of ESD-related failures. The high rate of intermittent failures means that most of the time when damage occurs, it is not immediately recognizable. The memory module receives a static shock, but the tracing is merely weakened and does not immediately produce outward symptoms that are related to the damage. The weakened trace may take weeks or months to melt, and in the meantime may cause degradation of memory integrity, intermittent memory errors, and so on.

Intermittent failures that are also called latent or "walking wounded" are difficult to detect and troubleshoot.

Perform the following steps to prevent ESD damage:

- Use a wired ESD wrist strap that is properly grounded. Wireless anti-static straps do not provide adequate protection. Touching the chassis before handling parts does not ensure adequate ESD protection on parts with increased sensitivity to ESD damage.
- Handle all static-sensitive components in a static-safe area. If possible, use anti-static floor pads and workbench pads.
- When unpacking a static-sensitive component from its shipping carton, do not remove the component from the anti-static packing material until you are ready to install the component. Before unwrapping the anti-static packaging, use the anti-static wrist strap to discharge the static electricity from your body.

 **NOTE:** You can protect against ESD and discharge static electricity from your body by touching a metal-grounded object before you interact with anything electronic, for example, an unpainted metal surface on your computer's I/O panel. When connecting a peripheral (including handheld digital assistants) to your computer, you should always ground both yourself and the peripheral before connecting it to the computer. In addition, as you work inside the computer, periodically touch a metal-grounded object to remove any static charge that your body may have accumulated.

For more information about the wrist strap and ESD wrist strap tester, see [Components of an ESD Field Service Kit](#).

- Before transporting a static-sensitive component, place it in an anti-static container or packaging.

## ESD Field Service kit

The unmonitored field service kit is the most commonly used service kit. Each Field Service kit includes three main components: anti-static mat, wrist strap, and bonding wire.

 **CAUTION:** It is critical to keep ESD-sensitive devices away from internal parts that are insulated and often highly charged, such as plastic heat sink casings.

### Working environment

Before the ESD Field Service kit is deployed, conduct an evaluation of the site to ensure proper setup and readiness. For example, deploying the kit for a server environment is different than for a desktop or laptop environment. Servers are typically installed in a rack within a data center; desktops or laptops are typically placed on office desks or cubicles. Always look for a large open flat work area that is free of clutter and large enough to deploy the ESD kit with additional space to accommodate the type of computer that is being repaired. The workspace should also be free of insulators that can cause an ESD event. On the work area, insulators such as styrofoam and other plastics should always be moved at least 12 inches or 30 centimeters away from sensitive parts before physically handling any hardware components.

### ESD packaging

All ESD-sensitive devices must be shipped and received in static-safe packaging. Metal, static-shielded bags are preferred. However, you should always return the damaged component using the same ESD bag and packaging that the new part arrived in. The ESD bag should be folded over and taped shut and all the same foam packing material should be used in the original box that the new part arrived in. ESD-sensitive devices should be removed from packaging only at an ESD-protected work surface, and parts should never be placed on top of the ESD bag because only the inside of the bag is shielded. Always place parts in your hand, on the anti-static mat, in the computer, or inside an ESD bag.

## Components of an ESD Field Service kit

The components of an ESD Field Service kit are:

- **Anti-Static Mat** – The anti-static mat is dissipative and parts can be placed on it during service procedures. When using an anti-static mat, your wrist strap should be snug and the bonding wire should be connected to the anti-static mat and to any bare metal on the computer being worked on. Once deployed properly, service parts can be removed from the ESD bag and placed directly on the anti-static mat. ESD-sensitive items are safe in your hand, on the anti-static mat, in the computer, or inside an ESD bag.
- **Wrist Strap and Bonding Wire** – If an anti-static mat is not being used, the wrist strap and bonding wire should be connected directly between your wrist and an exposed metal part of the hardware. If you are using an anti-static mat, connect the wrist strap and bonding wire to the anti-static mat to ensure protection for any hardware placed on the mat. The physical connection of the wrist strap and bonding wire between your skin, the anti-static mat, and the hardware is known as bonding. Use only Field Service kits with a wrist strap, anti-static mat, and bonding wire. Never use wireless wrist straps. Always be cautious that the internal wires of a wrist strap are prone to damage from normal wear and tear, and must be checked regularly with a wrist strap tester in order to avoid accidental ESD hardware damage. It is recommended to test the wrist strap and bonding wire at least once per week.
- **ESD Wrist Strap Tester** – The wires inside an ESD strap are prone to damage over time. When using an unmonitored ESD kit, it is recommended to test the wrist strap regularly—ideally before each service session, and at a minimum, once per week. The most reliable method for testing is with a wrist strap tester. To perform the test, connect the bonding wire of the wrist strap to the tester while wearing the strap. Press the test button to initiate the check. A green LED indicates a successful test, while a red LED and audible alarm signal a failure.

 **NOTE:** It is recommended to always use the traditional wired ESD grounding wrist strap and protective anti-static mat when servicing Dell products. In addition, it is critical to keep sensitive parts separate from all insulator parts while servicing the computer.

## Transporting sensitive components

When transporting ESD sensitive components such as replacement parts or parts to be returned to Dell, it is critical to place these parts in anti-static bags for safe transport.

### Lifting equipment

Adhere to the following guidelines when lifting heavy equipment:

 **CAUTION:** Do not lift greater than 50 pounds. Always obtain additional resources or use a mechanical lifting device.

1. Get a firm balanced footing. Keep your feet apart for a stable base, and point your toes out.
2. Tighten stomach muscles. Abdominal muscles support your spine when you lift, offsetting the force of the load.
3. Lift with your legs, not your back.
4. Keep the load close. The closer it is to your spine, the less force it exerts on your back.
5. Keep your back upright, whether lifting or setting down the load. Do not add the weight of your body to the load. Avoid twisting your body and back.
6. Follow the same technique in reverse to set the load down.

## After working inside your computer

### About this task

 **CAUTION:** Leaving stray or loose screws inside your computer may severely damage your computer.

### Steps

1. Replace all screws and ensure that no stray screws remain inside your computer.
2. Connect any external devices, peripherals, or cables you removed before working on your computer.
3. Replace any media cards, discs, or any other components that you removed before working on your computer.
4. Connect your computer and all attached devices to their electrical outlets.
5. Turn on your computer.

## BitLocker

When updating the BIOS on a computer with BitLocker enabled, consider the following precautions.

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the BitLocker key will not be recognized the next time that you reboot the computer. You are prompted to enter the recovery key to progress, and the computer displays a prompt for the recovery key on each reboot. If the recovery key is not known, this can result in data loss or an operating system reinstall. For more information, see Knowledge Article: [updating the BIOS on Dell computers with BitLocker enabled](#).

The installation of the following components triggers BitLocker:

- Hard disk drive or solid state drive
- System board

## Recommended tools

The procedures in this document may require the following tools:

- Phillips screwdriver #1
- Plastic scribe

# Screw list

- i NOTE:** When removing screws from a component, it is recommended to note the screw type and the quantity of screws, and then place them in a screw storage box. This is to ensure that the correct number of screws and correct screw type is restored when the component is replaced.
- i NOTE:** Some computers have magnetic surfaces. Ensure that the screws are not left attached to such surfaces when replacing a component.
- i NOTE:** Screw color may vary depending on the configuration ordered.


**Table 19. Screw list**

Component	Screw type	Quantity	Screw image
Side cover	6-32#	2	
M.2 2230 solid-state drive	M2x3.5	1	
Wireless card	M2x3.5	1	
Hard drive	6-32#	4	
Media-card reader	6-32#	1	
Serial-port module	M3	2	
Antenna modules	6-32#	1	
Power-supply unit	6-32#	3	
Processor fan and heat-sink assembly	Captive screw	4	
Front I/O-bracket	6-32#	1	
System board	6-32#	6	
	6-32#, screw mount	1	

# Major components of Dell Pro Tower Essential QVT1260

The following image shows the major components of Dell Pro Tower Essential QVT1260.

**NOTE:** The availability of some of the major components in your Dell Pro Tower Essential QVT1260 is dependent on the configuration ordered.

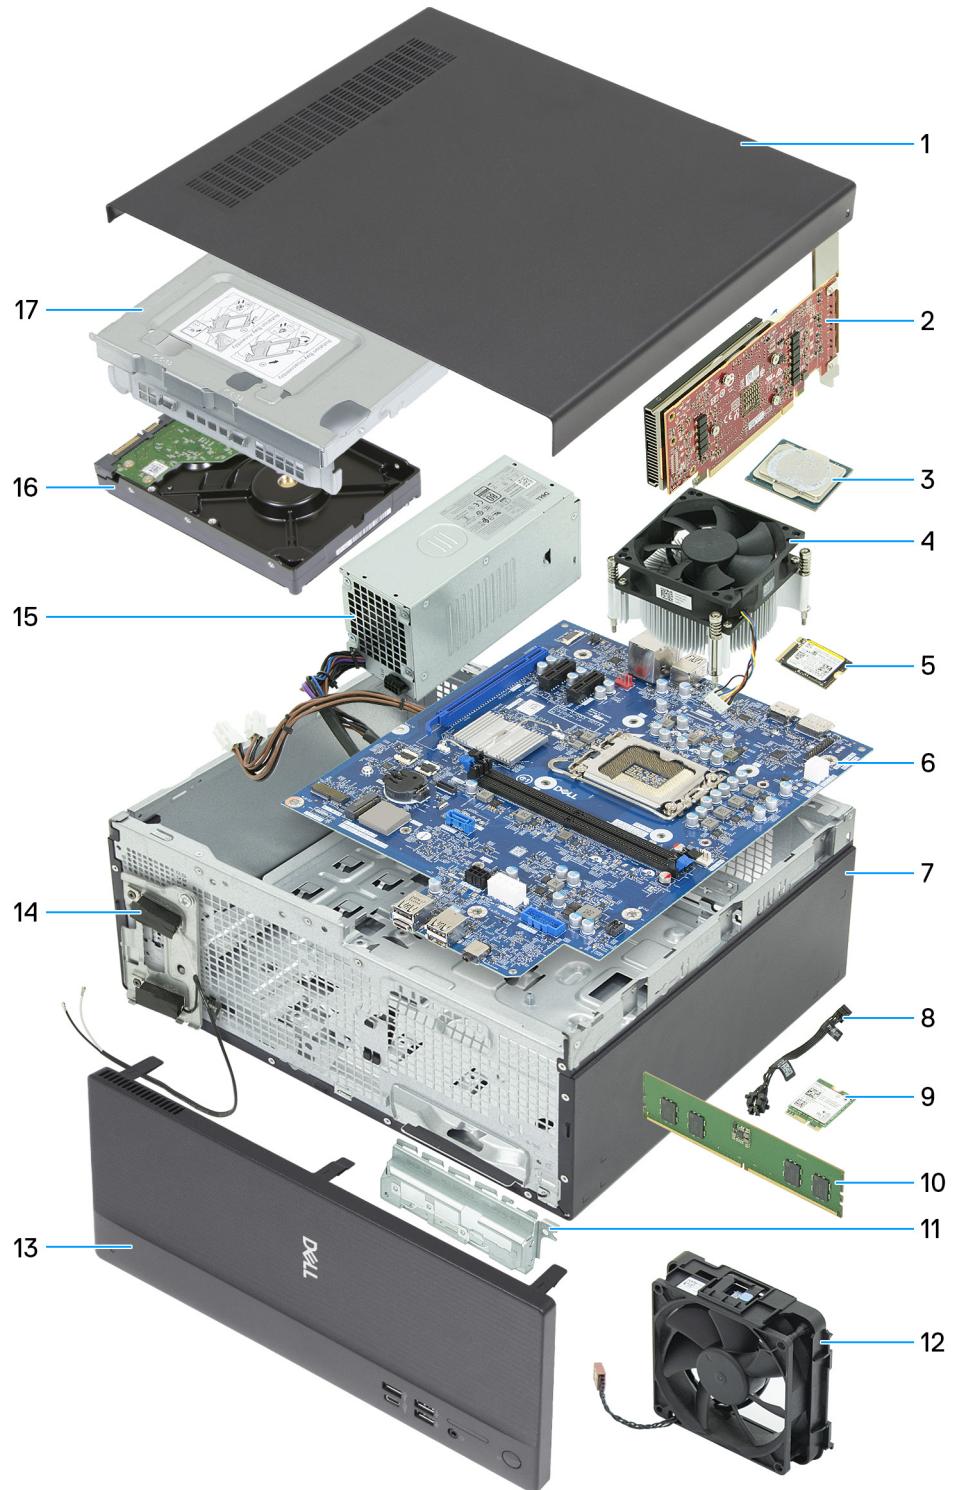

**Figure 9. Major Components of Dell Pro Tower Essential QVT1260**

1. Left-side cover
2. Graphics card
3. Processor
4. Processor fan and heat-sink assembly
5. M.2 2230 solid-state drive
6. System board
7. Chassis
8. Power-button module
9. Wireless card
10. Memory module
11. Front I/O bracket
12. Fan
13. Front cover
14. Antenna modules
15. Power-supply unit
16. Hard drive
17. Drive bay

**i NOTE:** Dell Technologies provides a list of components and their part numbers for the original system configuration purchased. These parts are available according to warranty coverages purchased by the customer. Contact your Dell sales representative for purchase options.

## Left-side cover

### Removing the left-side cover

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).


#### About this task

The following images indicate the location of the left-side cover and provide a visual representation of the removal procedure.




2x

6-32#

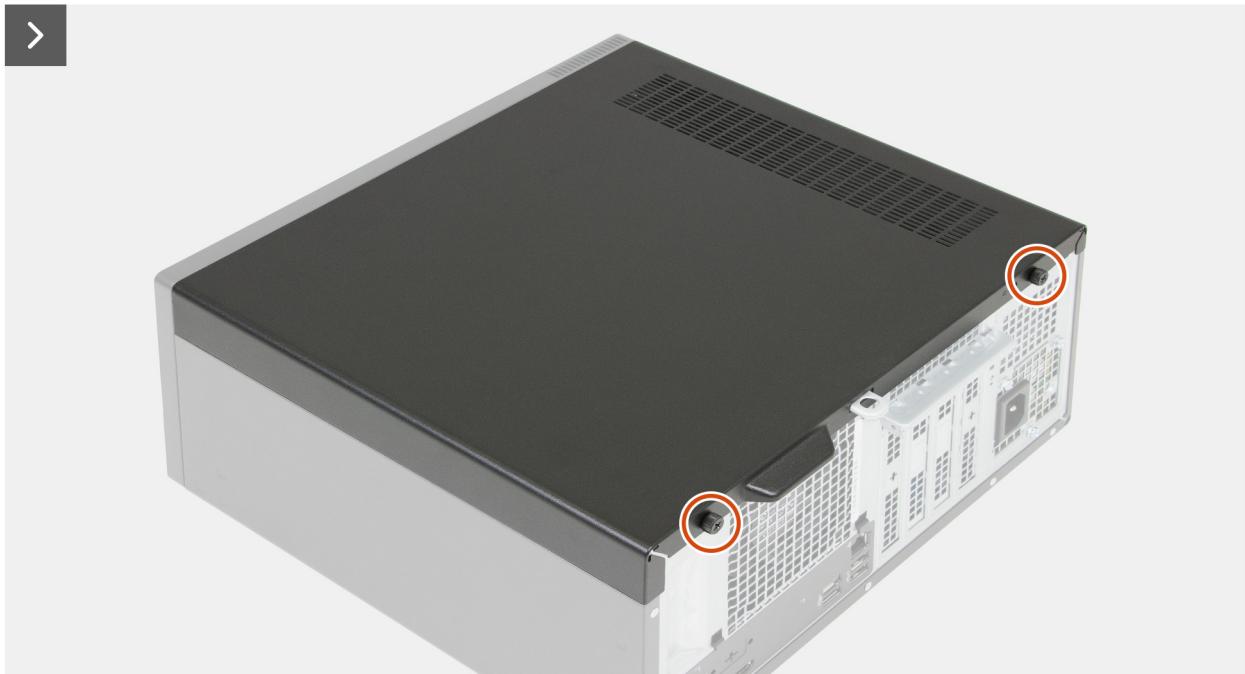

**Figure 10.** Removing the left-side cover

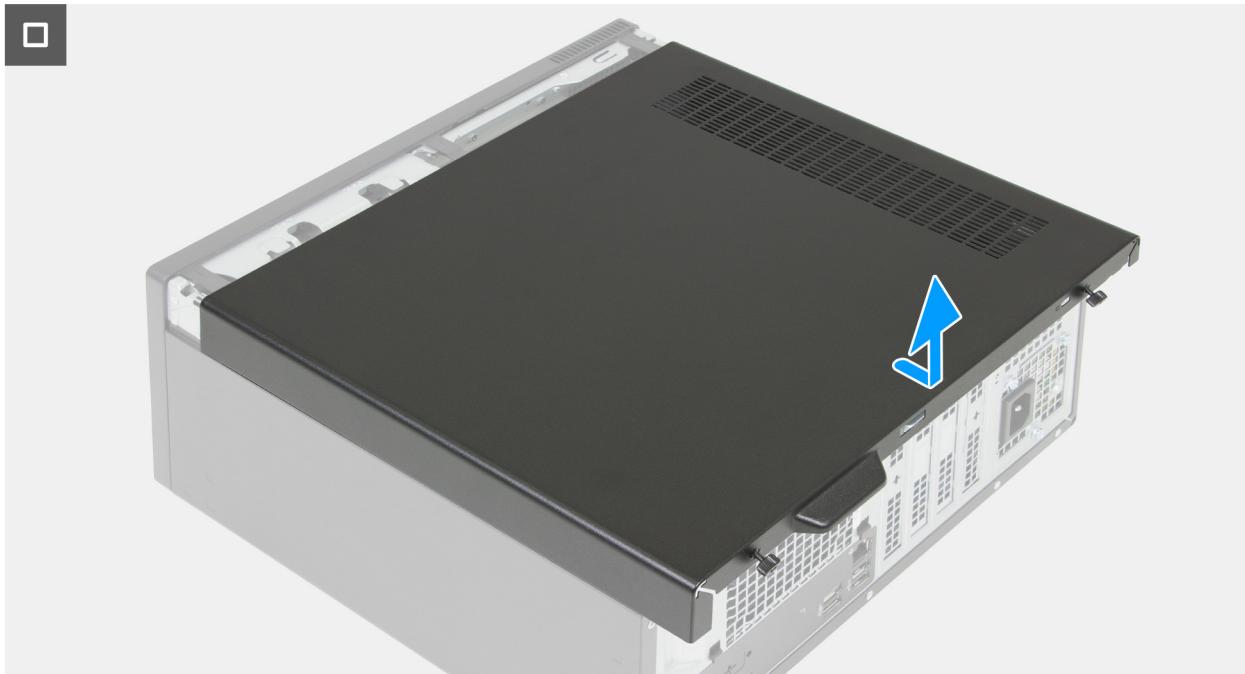

**Figure 11. Removing the left-side cover**

#### Steps

1. Place the computer on its side with the left-side facing up.
2. Remove the two screws (6-32#) that secure the left-side cover to the chassis.
3. Hold the tab on the left-side cover firmly, then slide and remove the left-side cover from the chassis.

## Installing the left-side cover

#### Prerequisites


If you are replacing a component, remove the existing component before performing the installation process.

#### About this task


The following images indicate the location of the left-side cover and provide a visual representation of the installation procedure.



**2x**  
6-32#

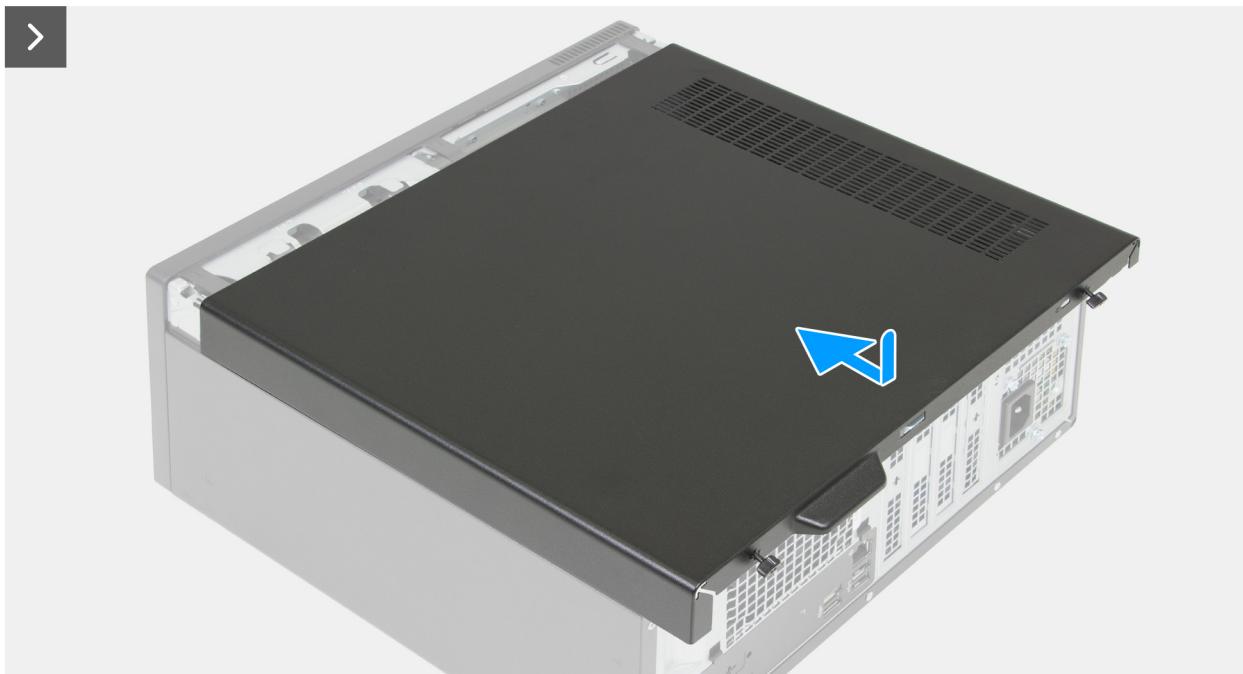

**Figure 12. Installing the left-side cover**

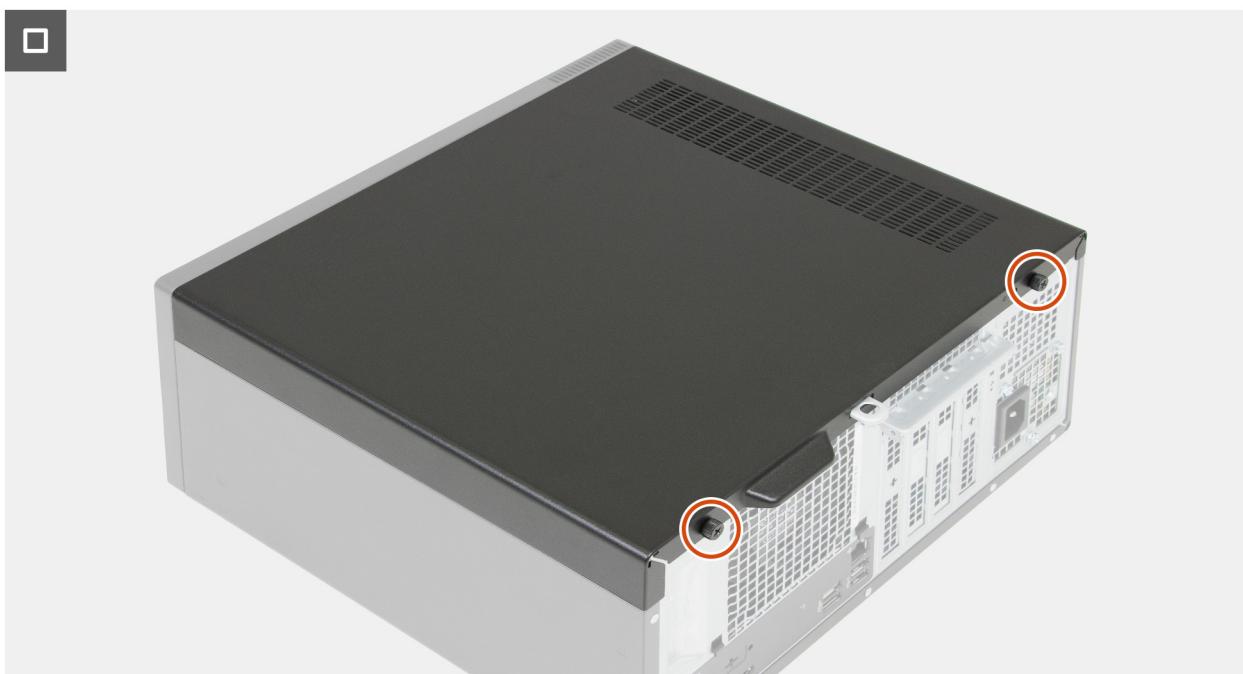

**Figure 13. Installing the left-side cover**

## Steps

1. Hold the left-side cover firmly on both sides, then slide it into the chassis towards the front of the computer.
2. Replace the two screws (6-32#) that secure the left-side cover to the chassis.
3. Place the computer in an upright position.

## Next steps

1. Follow the procedure in [After working inside your computer](#).

## Coin-cell battery cover


### Removing the coin-cell battery cover

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [left-side cover](#).

#### About this task

The following image indicates the location of the coin-cell battery cover and provides a visual representation of the removal procedure.

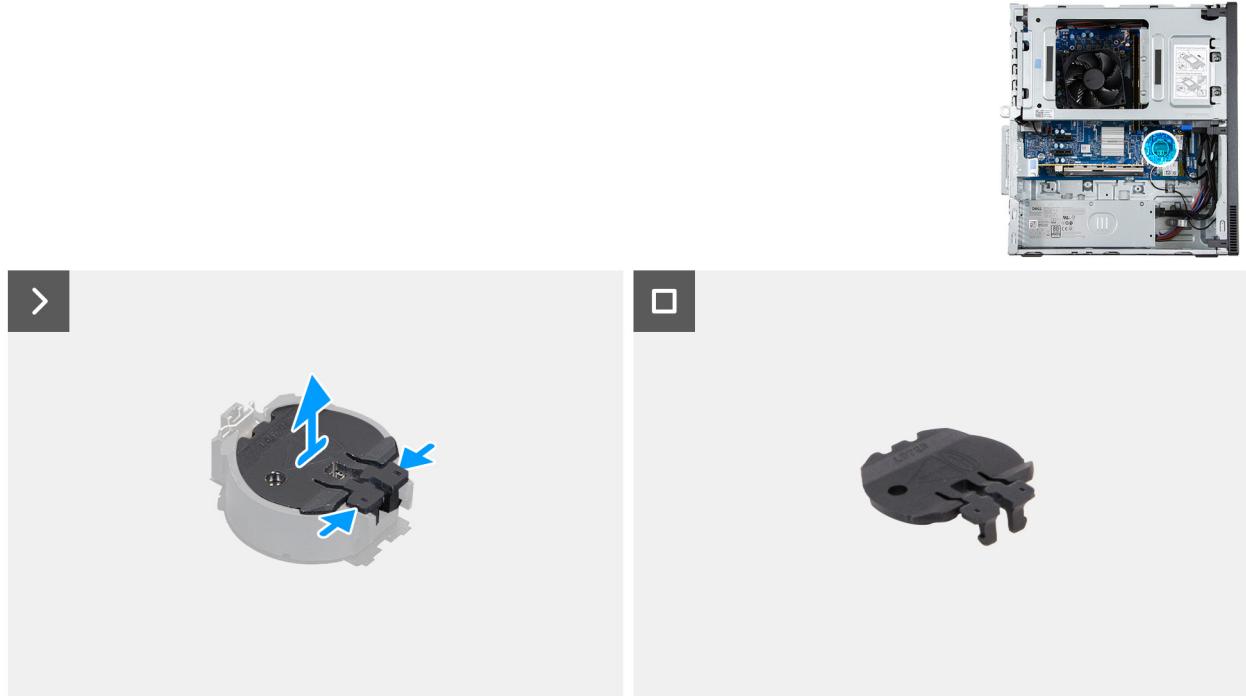

**Figure 14. Removing the coin-cell battery cover**

#### Steps

1. Pinch the securing tabs on the coin-cell cover to release the coin-cell cover from the coin-cell battery socket (RTC).
2. Lift the coin-cell cover off the battery socket.


### Installing the coin-cell battery cover

#### Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

## About this task

The following image indicates the location of the coin-cell battery cover and provides a visual representation of the installation procedure.

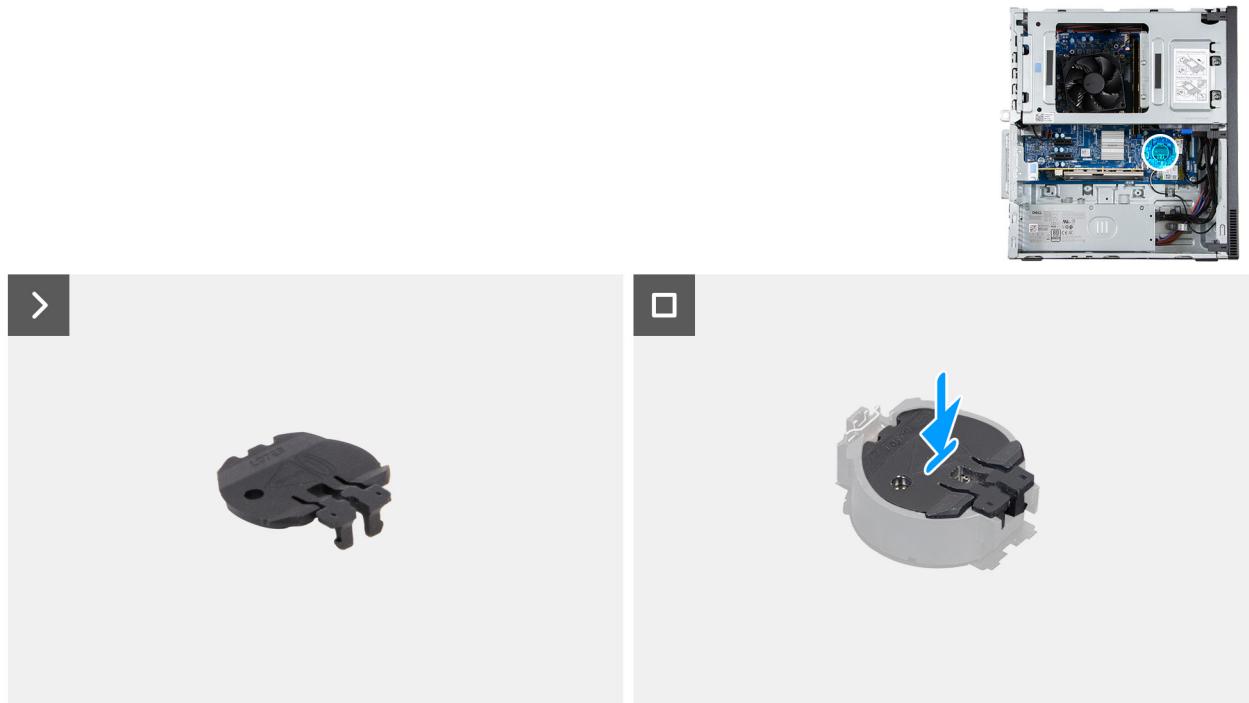

**Figure 15. Installing the coin-cell battery cover**

## Steps

Align the coin-cell battery cover with the battery socket (RTC) and press it into place.

## Next steps

1. Install the [left-side cover](#).
2. Follow the procedure in [After working inside your computer](#).

# Coin-cell battery

## Removing the coin-cell battery


### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [left-side cover](#).
3. Remove the [coin-cell battery cover](#).

### About this task

 **CAUTION:** Removing the coin-cell battery will clear the CMOS and will reset BIOS settings.

The following image indicates the location of the coin-cell battery and provides a visual representation of the removal procedure.

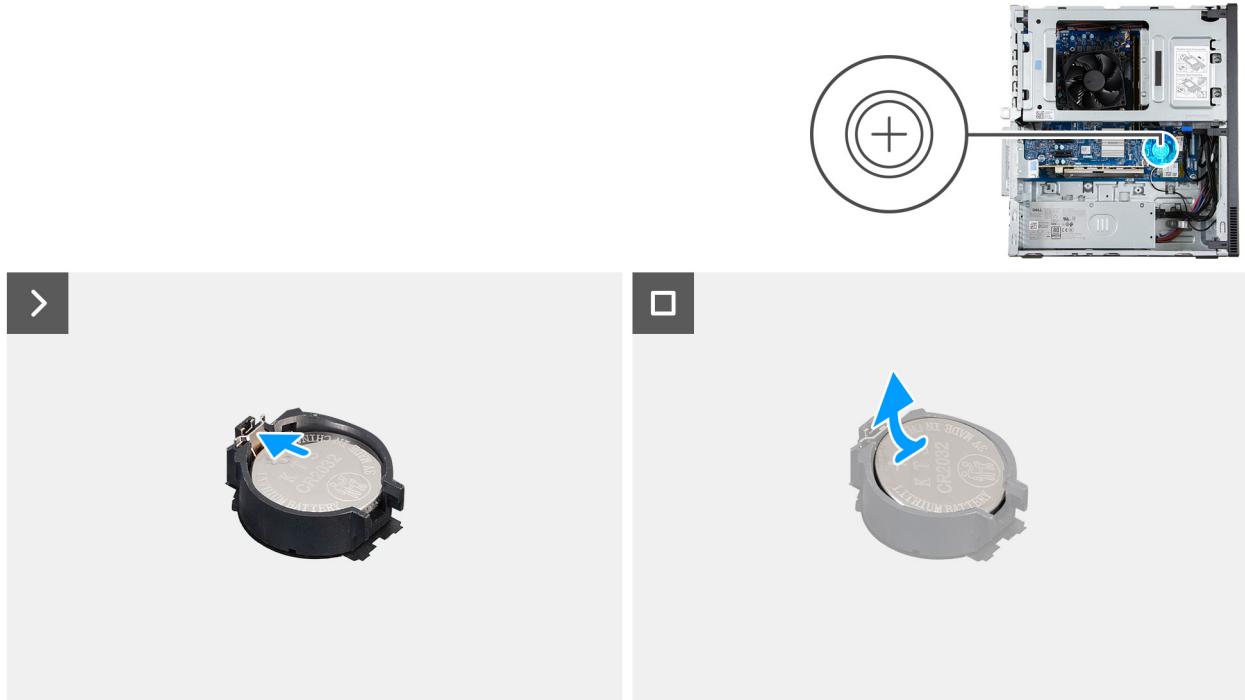

**Figure 16. Removing the coin-cell battery**

### Steps

1. Push the release lever on the coin-cell battery socket to release the coin-cell battery out of the socket (RTC).
2. Lift the coin-cell battery from the coin-cell battery socket.


## Installing the coin-cell battery

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

## About this task

The following image indicates the location of the coin-cell battery and provides a visual representation of the installation procedure.

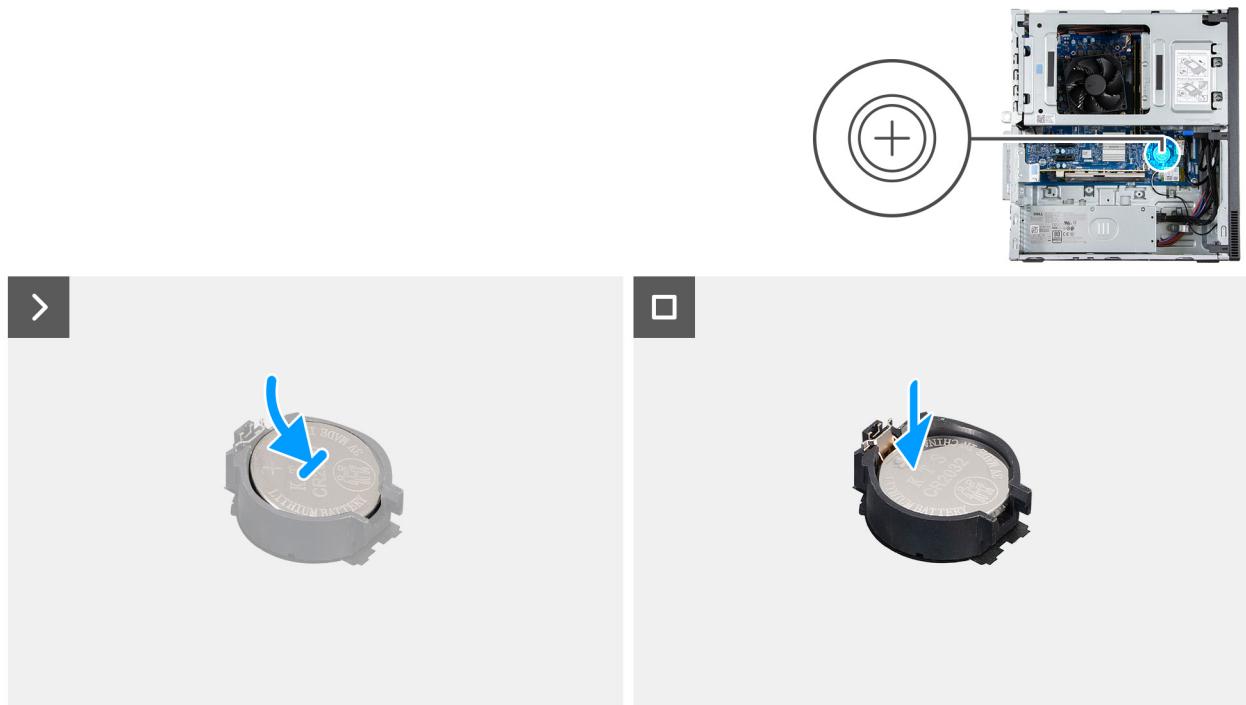

**Figure 17. Installing the coin-cell battery**

## Steps

With the positive side (+) facing up, insert the coin-cell battery into the battery socket (RTC) on the system board and snap the battery into place.

## Next steps

1. Install the [coin-cell battery cover](#).
2. Install the [left-side cover](#).
3. Follow the procedure in [After working inside your computer](#).

# Removing and installing Customer Replaceable Units (CRUs)

The replaceable components in this chapter are Customer Replaceable Units (CRUs).

**CAUTION:** Customers can replace only the Customer Replaceable Units (CRUs) following the safety precautions and replacement procedures.

**NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

## Front cover

### Removing the front cover

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [left-side cover](#).

#### About this task

The following image indicates the location of the front cover and provides a visual representation of the removal procedure.

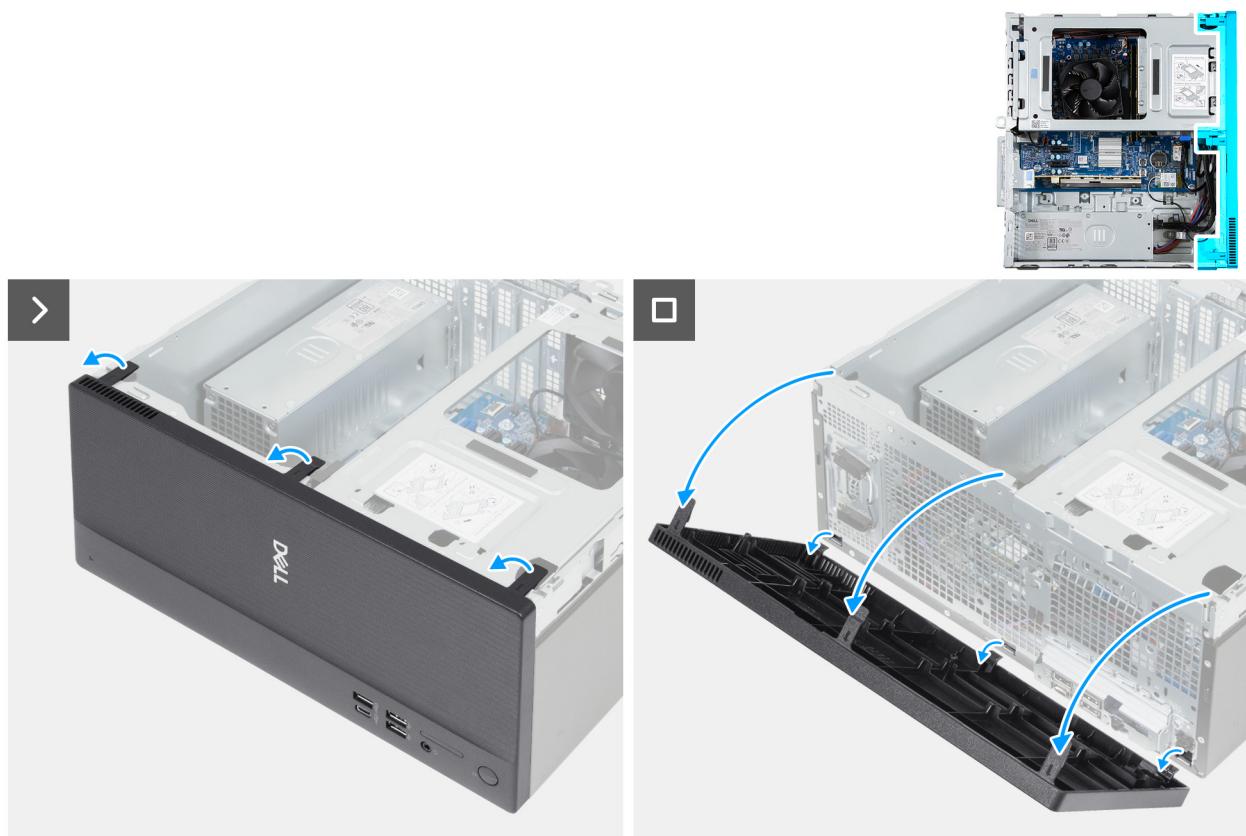


Figure 18. Removing the front cover

## Steps

1. Gently pry and release the tabs that secure the front-cover to the chassis.
2. Rotate the front cover outwards and lift it away from the chassis.

## Installing the front cover

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

### About this task

The following image indicates the location of the front cover and provides a visual representation of the installation procedure.



**Figure 19. Installing the front cover**

## Steps

1. Align and insert the front-cover tabs into the slots on the right side of the chassis.
2. Rotate the front cover towards the chassis and press it into place.

### Next steps

1. Install the [left-side cover](#).
2. Follow the procedure in [After working inside your computer](#).

# Memory

## Removing the memory

### Prerequisites


1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [left-side cover](#).
3. Remove the [front cover](#).
4. Remove the [drive bay](#).

### About this task

**i** **NOTE:** This computer may have up to two memory modules installed.

**⚠ CAUTION:** To prevent damage to the memory module, hold the memory module by the edges. Do not touch the components or metallic contacts on the memory module as electrostatic discharge (ESD) can inflict severe damage on the components. To read more about ESD protection, see [ESD protection](#).

The following image indicates the location of the memory and provides a visual representation of the removal procedure.

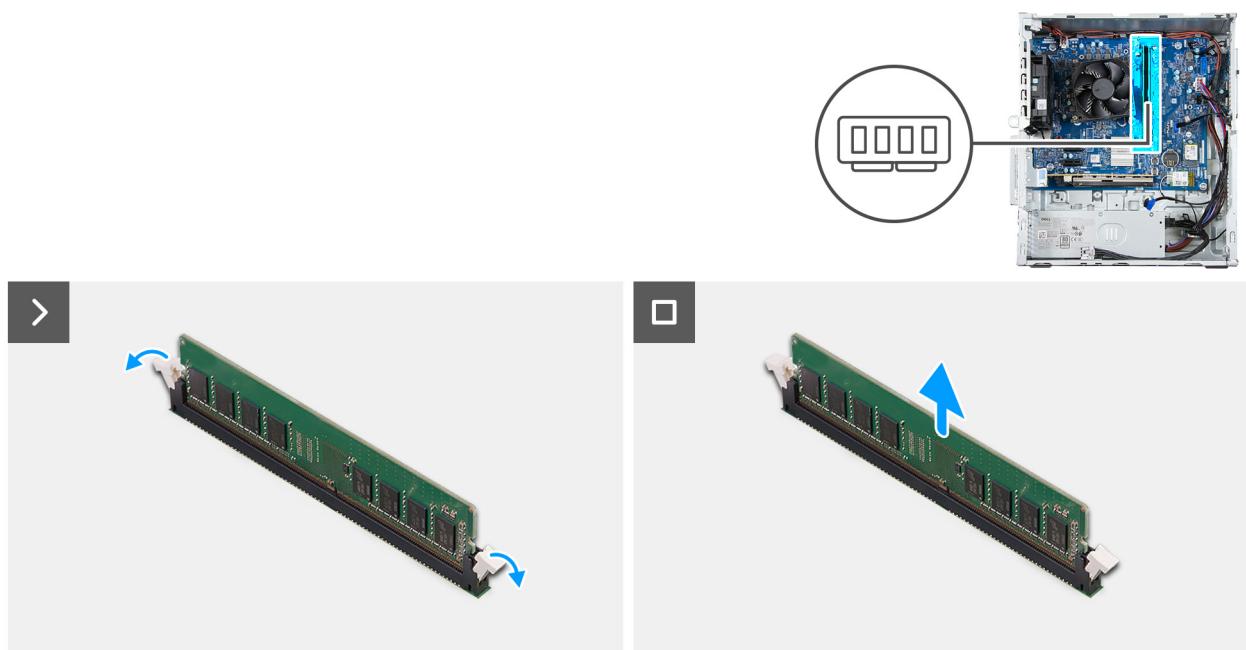

**Figure 20. Removing the memory**

### Steps

1. Carefully spread apart the securing-clips on each end of the memory-module slot (DIMM1/DIMM2).
2. Grasp the memory module near the securing clip, and then gently ease the memory module out of the memory-module slot.

**i** **NOTE:** Repeat steps 2 to 3 for each memory module installed on your computer.

## Installing the memory

### Prerequisites


If you are replacing a component, remove the existing component before performing the installation process.

## About this task

**NOTE:** Up to two memory modules may be installed into this computer.

**CAUTION:** To prevent damage to the memory module, hold the memory module by the edges. Do not touch the components or metallic contacts on the memory module as electrostatic discharge (ESD) can inflict severe damage on the components. To read more about ESD protection, see [ESD protection](#).

The following image indicates the location of the memory and provides a visual representation of the installation procedure.

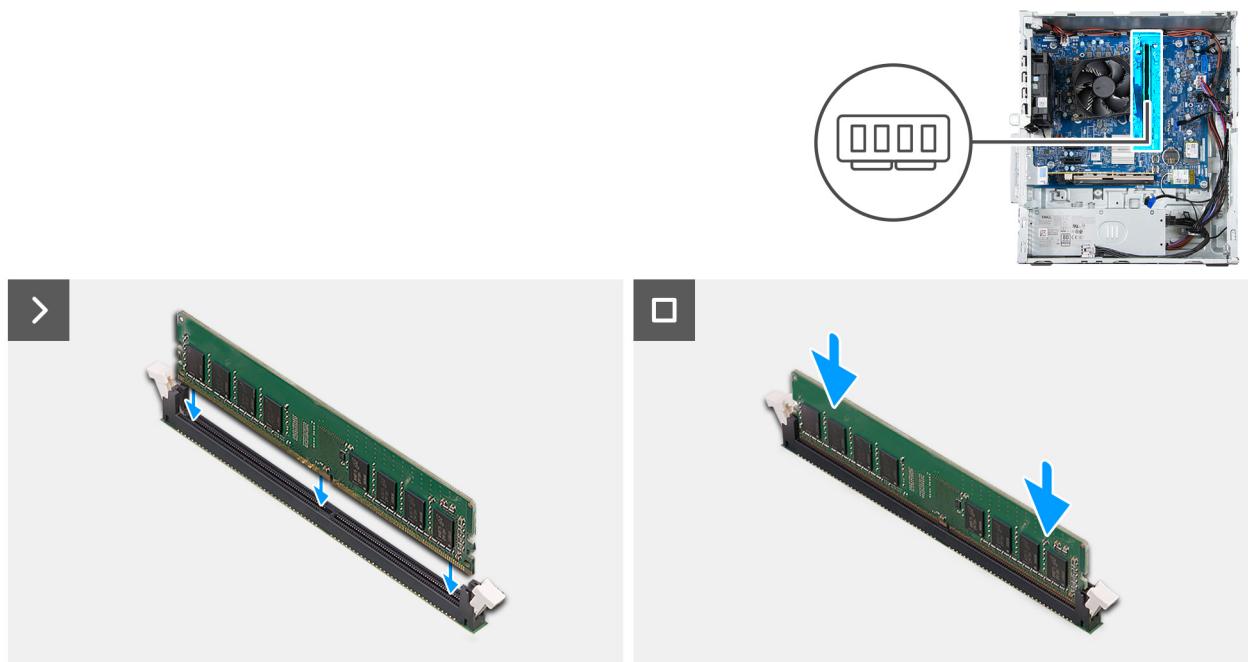

**Figure 21. Installing the memory**

## Steps

1. Align the notch on the memory module with the tab on the memory-module slot (DIMM1/DIMM2).
2. Insert the memory module into the memory-module slot.
3. Press down on the memory module until the securing clips lock in place.

**NOTE:** Repeat steps 1 to 3 for each memory module to be installed on your computer.

## Next steps

1. Install the [drive bay](#).
2. Install the [front cover](#).
3. Install the [left-side cover](#).
4. Follow the procedure in [After working inside your computer](#).

## Solid state drive

### Removing the M.2 2230 solid-state drive

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [left-side cover](#).
3. Remove the [front cover](#).
4. Remove the [drive bay](#).

## About this task

**(i) NOTE:** This procedure only applies if there is an M.2 2230 solid-state drive installed in M.2 solid-state drive slot 0 (M.2 PCIe SSD - 0)

The following image indicates the location of the M.2 2230 solid-state drive and provides a visual representation of the removal procedure.



**Figure 22. Removing the M.2 2230 solid-state drive**

## Steps

1. Remove the screw (M2x3) that secures the solid-state drive to the system board.
2. Slide and lift the solid-state drive from the M.2 solid-state drive slot (M.2 PCIe SSD - 0) on the system board.

## Installing the M.2 2230 solid-state drive

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.



## About this task

**(i) NOTE:** This procedure only applies for installing an M.2 2230 solid-state drive into M.2 solid-state drive slot 0 (M.2 PCIe SSD - 0)

The following image indicates the location of the M.2 2230 solid-state drive and provides a visual representation of the installation procedure.



1x  
M2x3.5

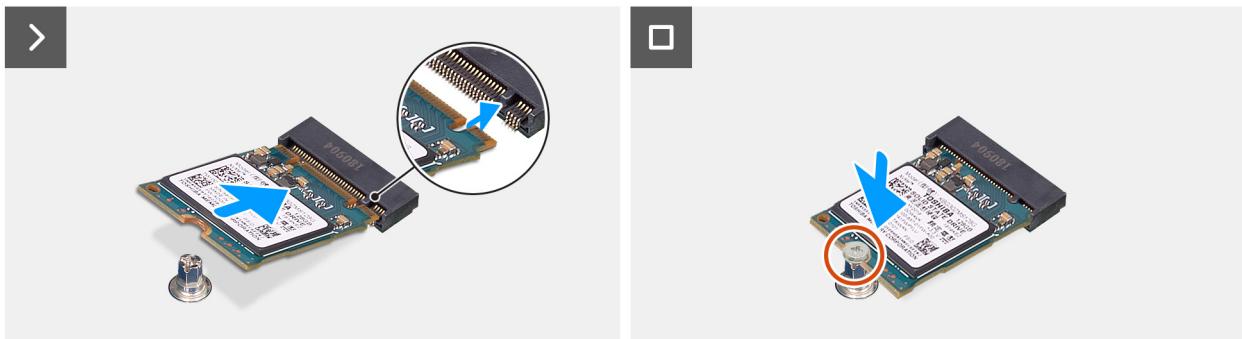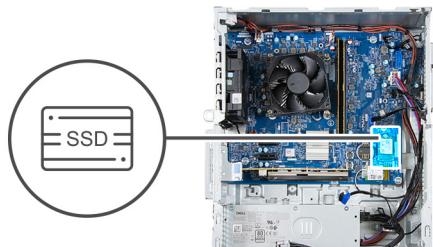

**Figure 23. Installing the M.2 2230 solid-state drive**

#### Steps

1. Align the notch on the solid-state drive with the tab on the M.2 solid-state drive slot (M.2 PCIe SSD - 0).
2. Slide the solid-state drive into the slot on the system board.
3. Replace the screw (M2x3) that secures the solid-state drive to the system board.

#### Next steps

1. Install the [drive bay](#).
2. Install the [front cover](#).
3. Install the [left-side cover](#).
4. Follow the procedure in [After working inside your computer](#).

## Graphics card

### Removing the graphics card


#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [left-side cover](#).

#### About this task

 **NOTE:** Depending on the configuration ordered, your computer may not have a discrete graphics card installed.

The following image indicates the location of the graphics card and provides a visual representation of the removal procedure.

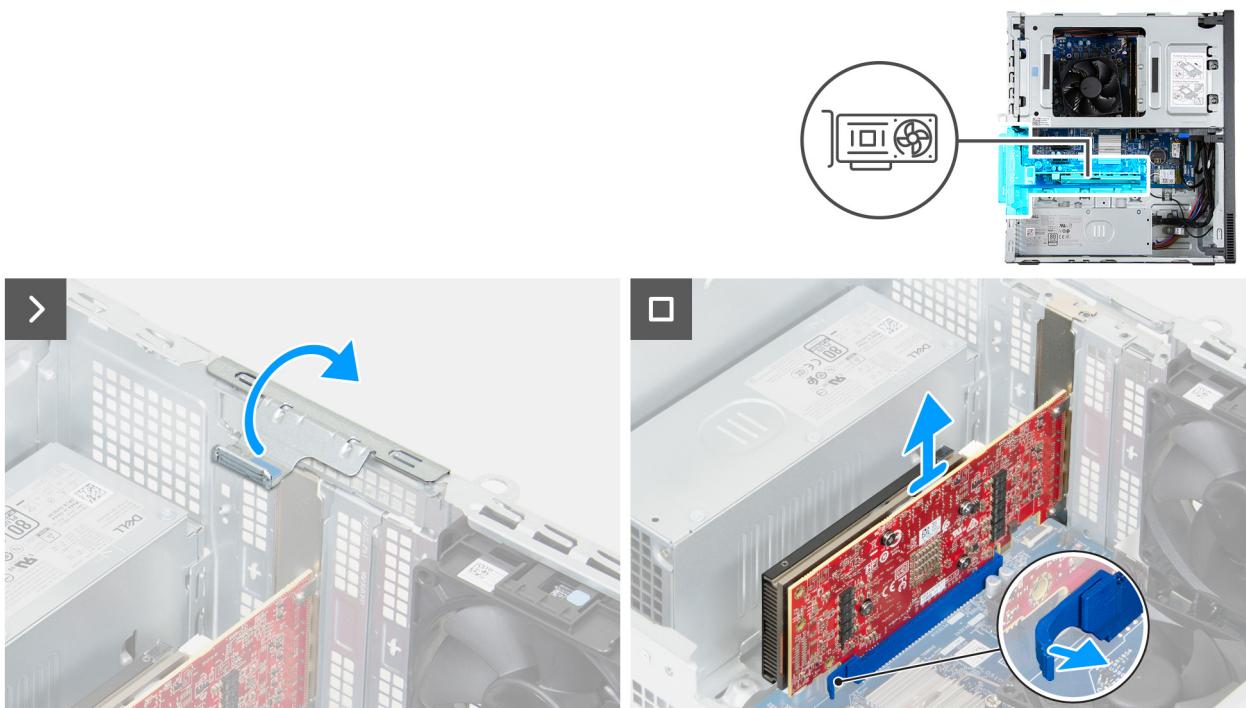

**Figure 24. Removing the graphics card**

### Steps

1. Lift the tab to open the card-retention bracket.
2. Disconnect the graphics-card power cable from the graphics card.
3. Push and hold the securing tab on the PCIe x16 slot (SLOT3), releasing the graphics card from the slot.
4. Lift the graphics card off the system board.


## Installing the graphics card

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

### About this task

The following image indicates the location of the graphics card and provides a visual representation of the installation procedure.

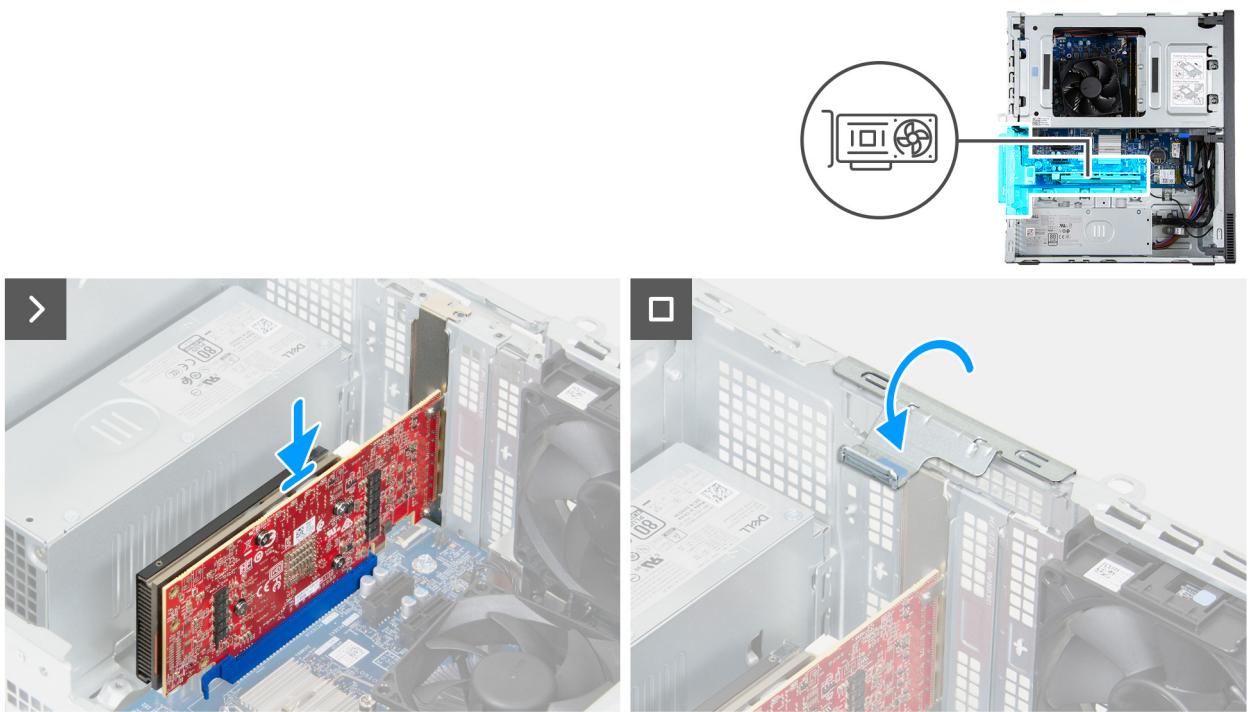

**Figure 25. Installing the graphics card**

#### Steps

1. Align the graphics card with the PCIe x16 slot (SLOT3) on the system board.
2. Place the graphics card into the PCIe x16 slot and press down firmly until you see the securing tab lock into place.
3. Connect the graphics-card power cable to the graphics card.
4. Rotate the card retention bracket towards the chassis until it snaps into place.

#### Next steps

1. Install the [left-side cover](#).
2. Follow the procedure in [After working inside your computer](#).

## Wireless card


### Removing the wireless card

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [left-side cover](#).

#### About this task

The following image indicates the location of the wireless card and provides a visual representation of the removal procedure.

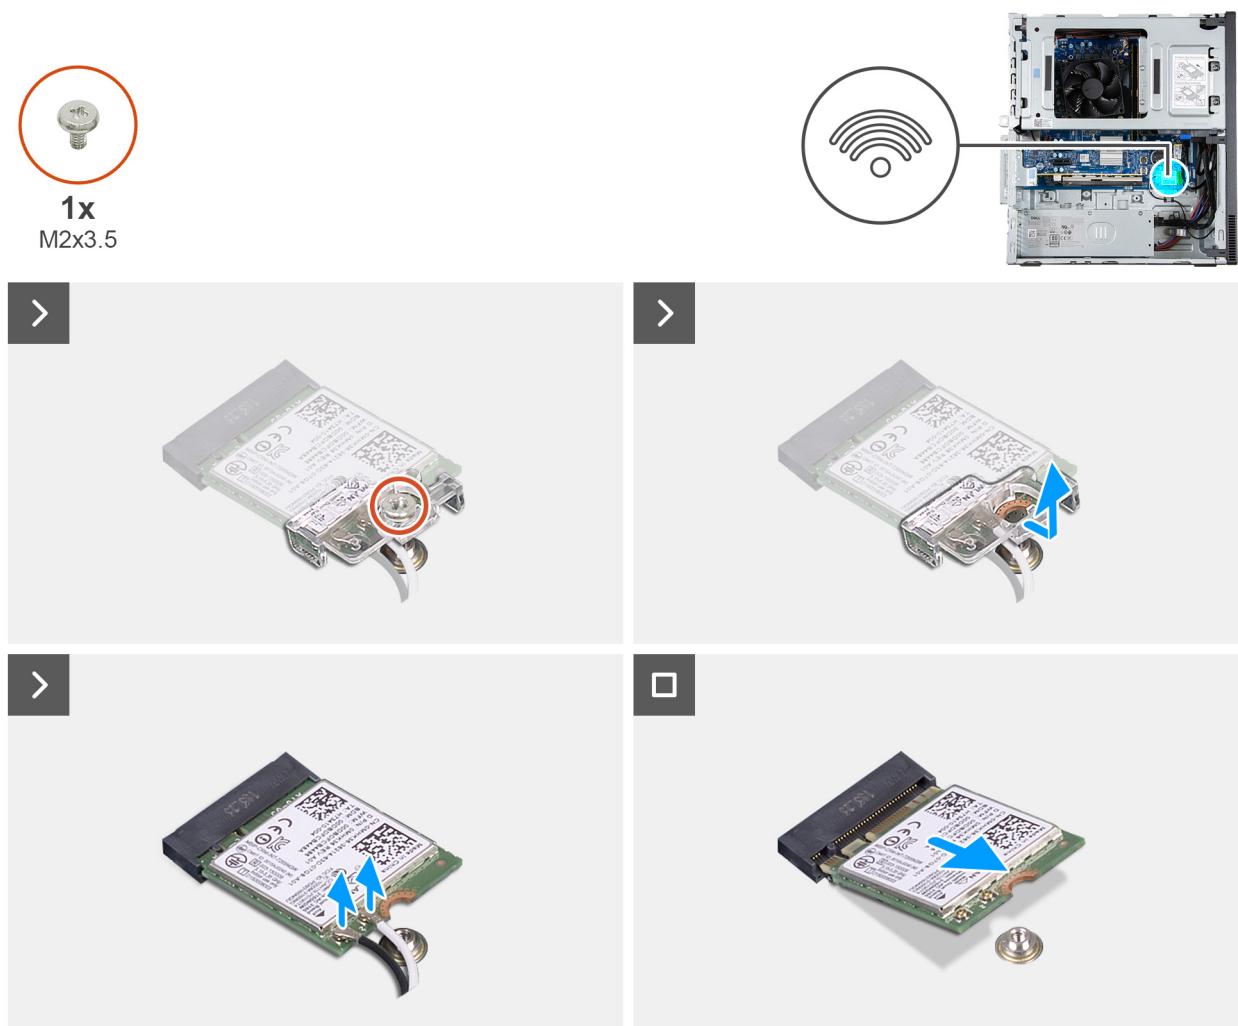

**Figure 26. Removing the wireless card**

### Steps

1. Remove the screw (M2x3.5) that secures the wireless card to the system board.
2. Slide and lift the wireless-card bracket off the wireless card.
3. Disconnect the antenna cables from the wireless card.
4. Slide and remove the wireless card at an angle from the wireless-card slot (M.2 WLAN).


## Installing the wireless card

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

### About this task

The following image indicates the location of the wireless card and provides a visual representation of the installation procedure.

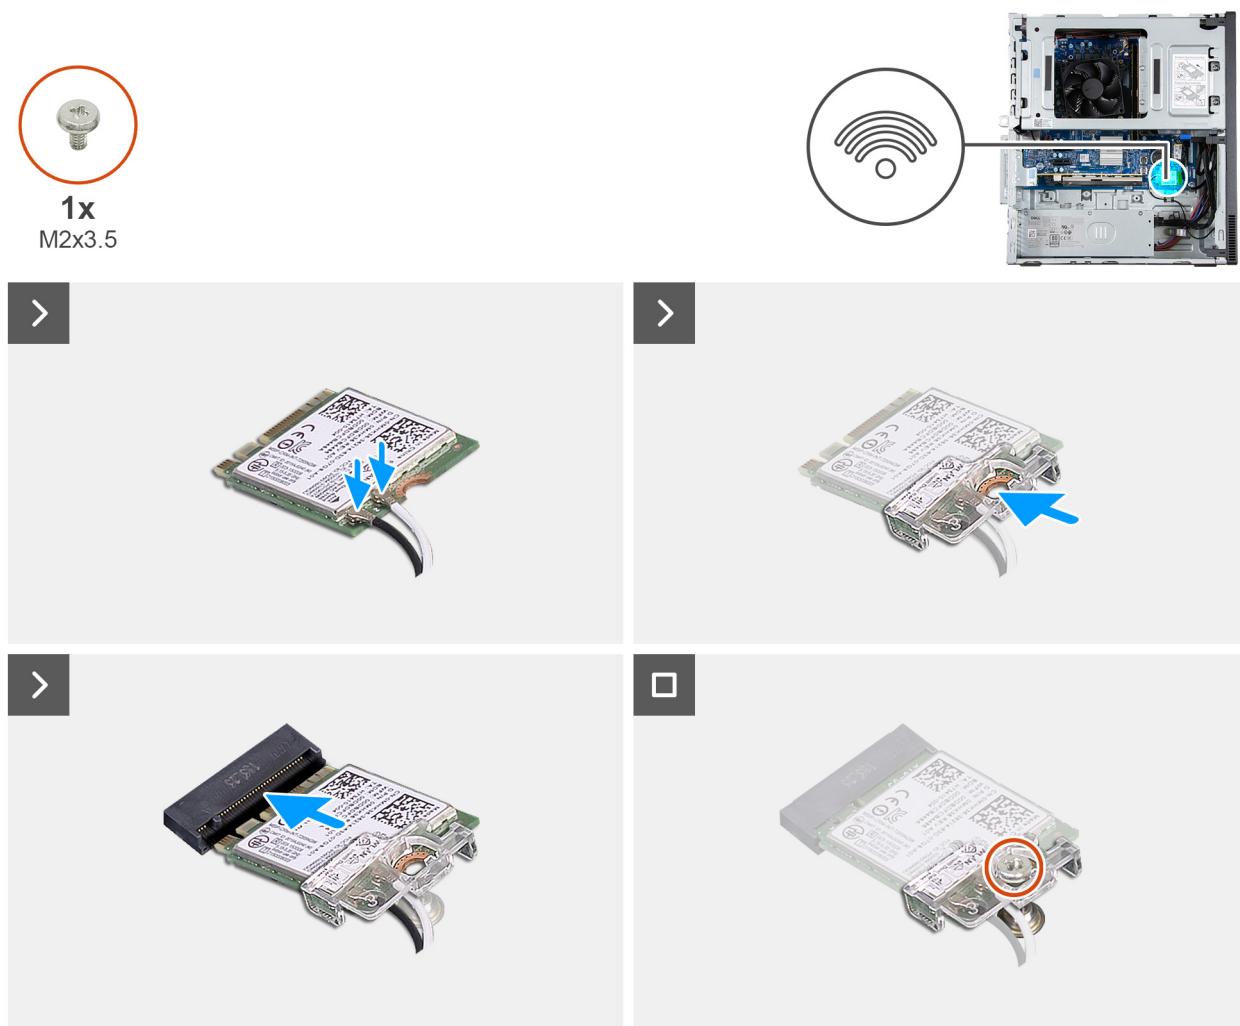

**Figure 27. Installing the wireless card**

### Steps

1. Connect the antenna cables to the wireless card.

**Table 20. Antenna-cable color scheme**

Connector on the wireless card	Antenna-cable color	Silkscreen marking	
Main	White	MAIN	△ (white triangle)
Auxiliary	Black	AUX	▲ (black triangle)

2. Slide and place the wireless-card bracket on the wireless card.
3. Align the notch on the wireless card with the tab on the wireless-card slot (M.2 WLAN).
4. Slide the wireless card at an angle into the wireless-card slot.
5. Replace the screw (M2x3.5) that secures the wireless card to the system board.

### Next steps

1. Install the [left-side cover](#).
2. Follow the procedure in [After working inside your computer](#).

# Drive bay

## Removing the drive bay

### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [left-side cover](#).
3. Remove the [front cover](#).


### About this task

**(i) NOTE:** The drive bay is only available in computers shipped with a hard drive.

The following images indicate the location of the drive bay and provide a visual representation of the removal procedure.



**Figure 28. Removing the drive bay**

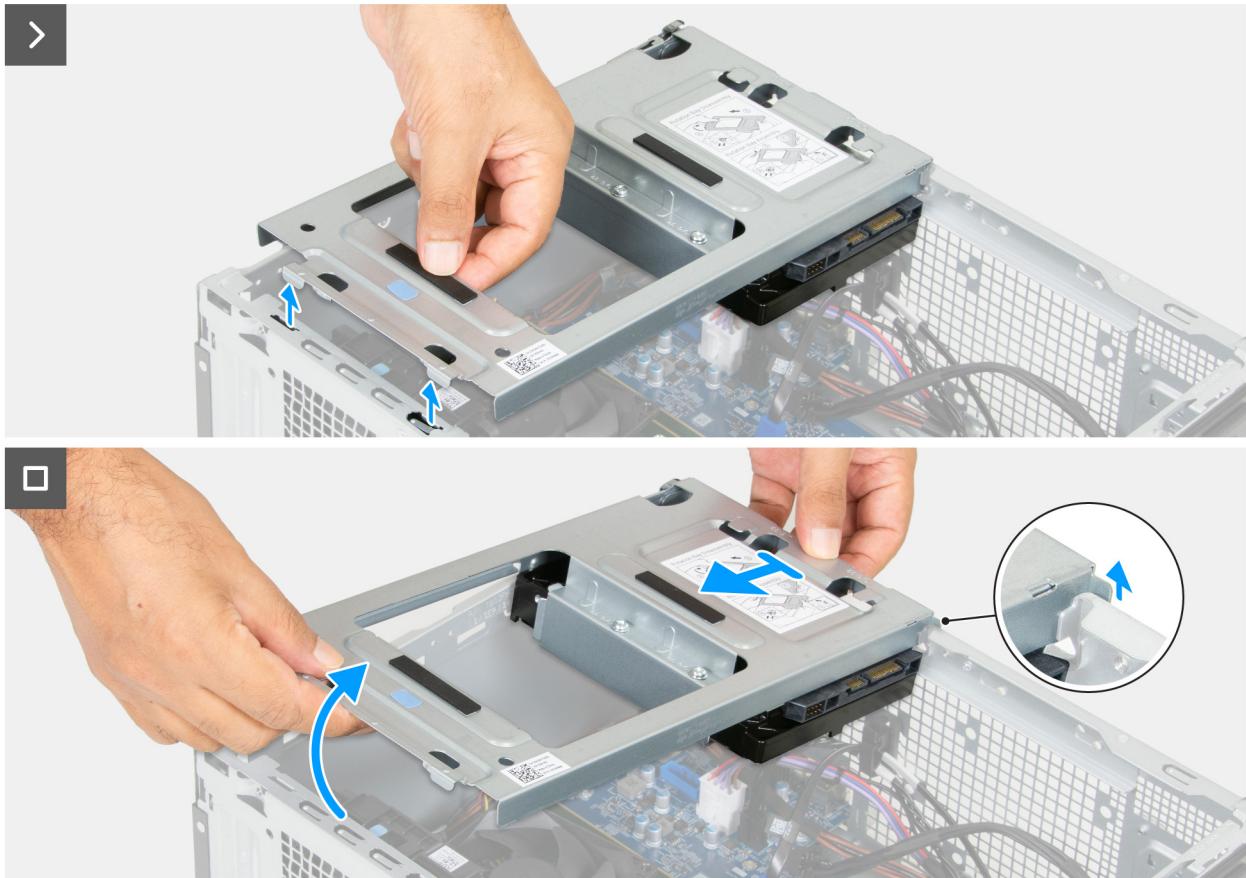

**Figure 29. Removing the drive bay**

### Steps

1. Disconnect the hard-drive data and power cables from the hard drive.
2. Lift the drive bay at an angle to release the tabs from the chassis.
3. Hold the drive bay firmly with both hands, then slide and remove the drive bay from the chassis.

## Installing the drive bay

### Prerequisites


If you are replacing a component, remove the existing component before performing the installation process.

### About this task


**i** **NOTE:** To install the drive bay into a computer that did not have one previously installed, contact Dell to purchase a drive bay.

**i** **NOTE:** Steps 1 to 6 are only applicable when installing a new drive bay purchased from Dell.


The following images indicate the location of the drive bay and provide a visual representation of the installation procedure.

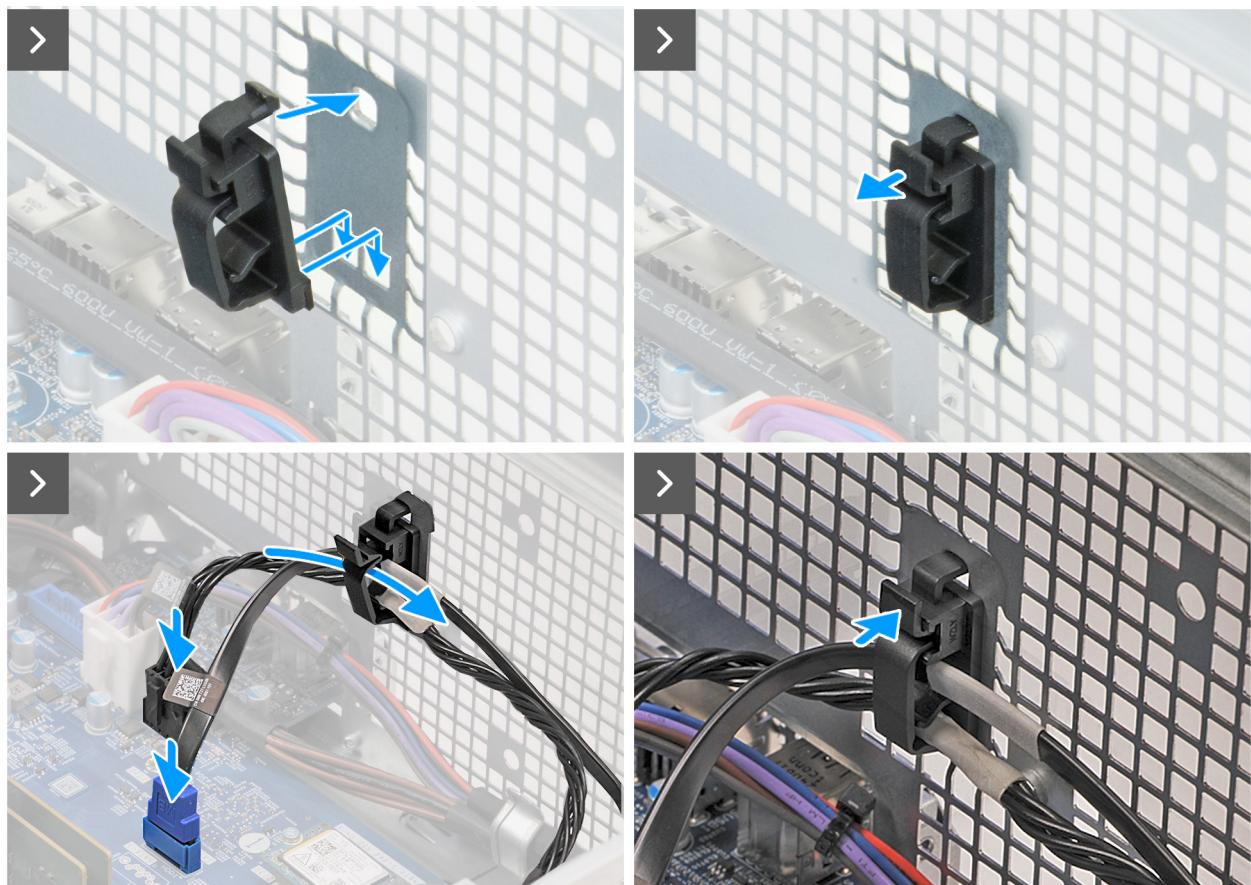

**Figure 30. Installing the drive bay**

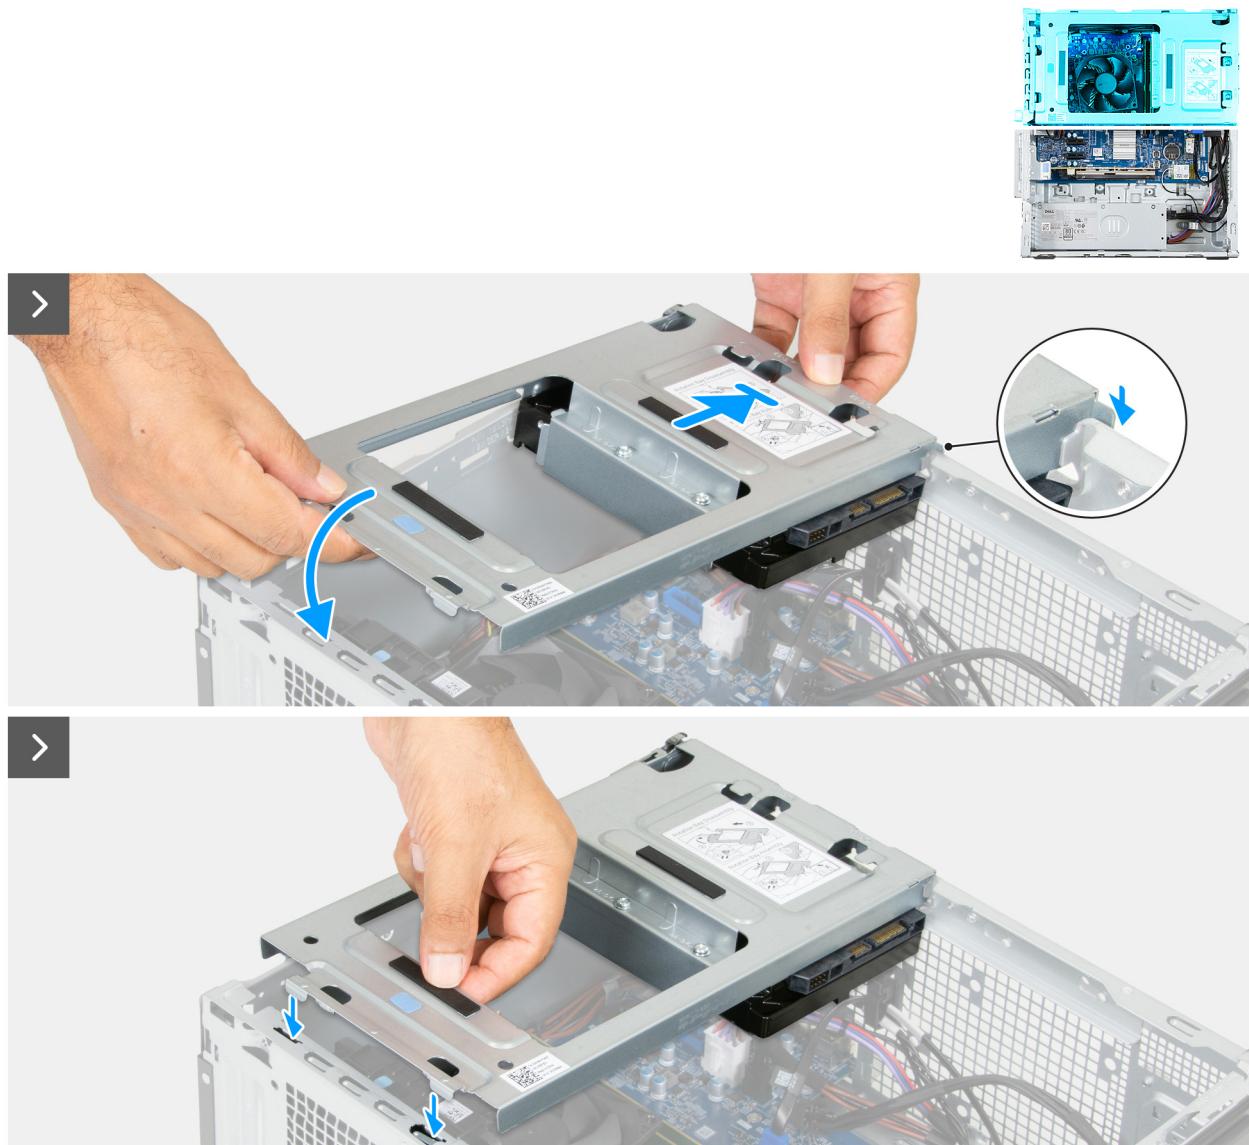

**Figure 31. Installing the drive bay**

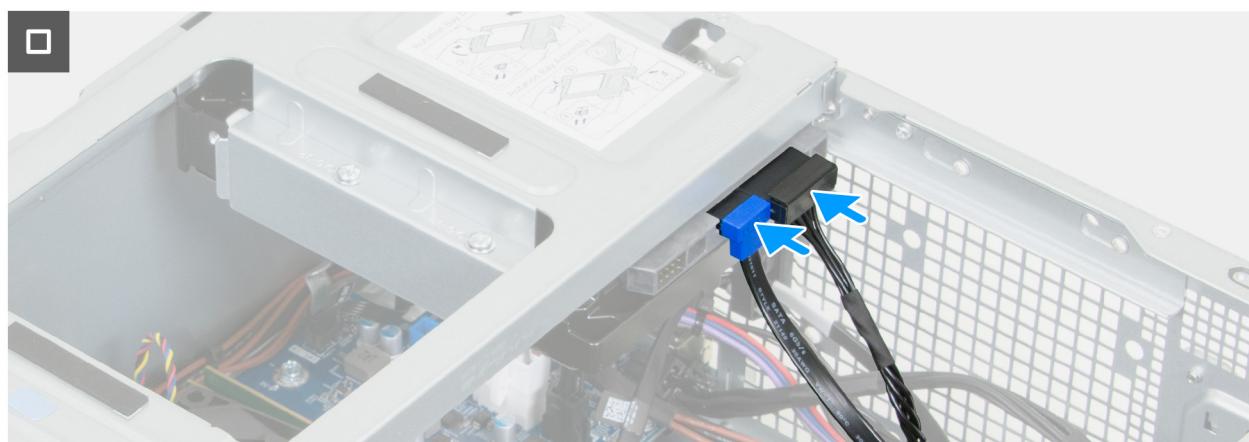

**Figure 32. Installing the drive bay**

### Steps

1. Insert the tabs on the cable clip through the slots on the chassis and press the cable clip into place.

2. Connect the hard-drive power cable to its connector (SATA PWR) on the system board.
3. Connect the hard-drive data cable to its connector (SATA - 0) on the system board.
4. Open the cable clip.
5. Route the hard-drive power and data cables through the cable clip on the chassis.
6. Close the cable clip.
7. Install the [hard drive](#).
8. Holding the drive bay firmly with both hands, slide and secure the hard drive side of the drive bay to the chassis.
9. Press down the other end of the drive bay securing the tabs on the drive bay with the slots on the chassis.
10. Connect the hard-drive data cable and power cables to the hard drive.

#### Next steps

1. Install the [front cover](#).
2. Install the [left-side cover](#).
3. Follow the procedure in [After working inside your computer](#).

## Hard drive

### Removing the hard drive

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [left-side cover](#).
3. Remove the [front cover](#).
4. Remove the [drive bay](#), if applicable.

#### About this task

 **NOTE:** The hard drive may not be present in the computer depending on the configuration ordered.

The following image indicates the location of the hard drive and provides a visual representation of the removal procedure.



**Figure 33. Removing the hard drive**

## Steps

1. Remove the four screws (6-32#) that secure the drive bay to the hard drive.
2. Flip over the drive bay.
3. Slide and remove the hard drive from the drive bay.

## Installing the hard drive


### Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

### About this task

 **NOTE:** To install the hard drive into a computer that did not have a hard drive previously installed, contact Dell to purchase the drive bay.

The following image indicates the location of the hard drive and provides a visual representation of the installation procedure.

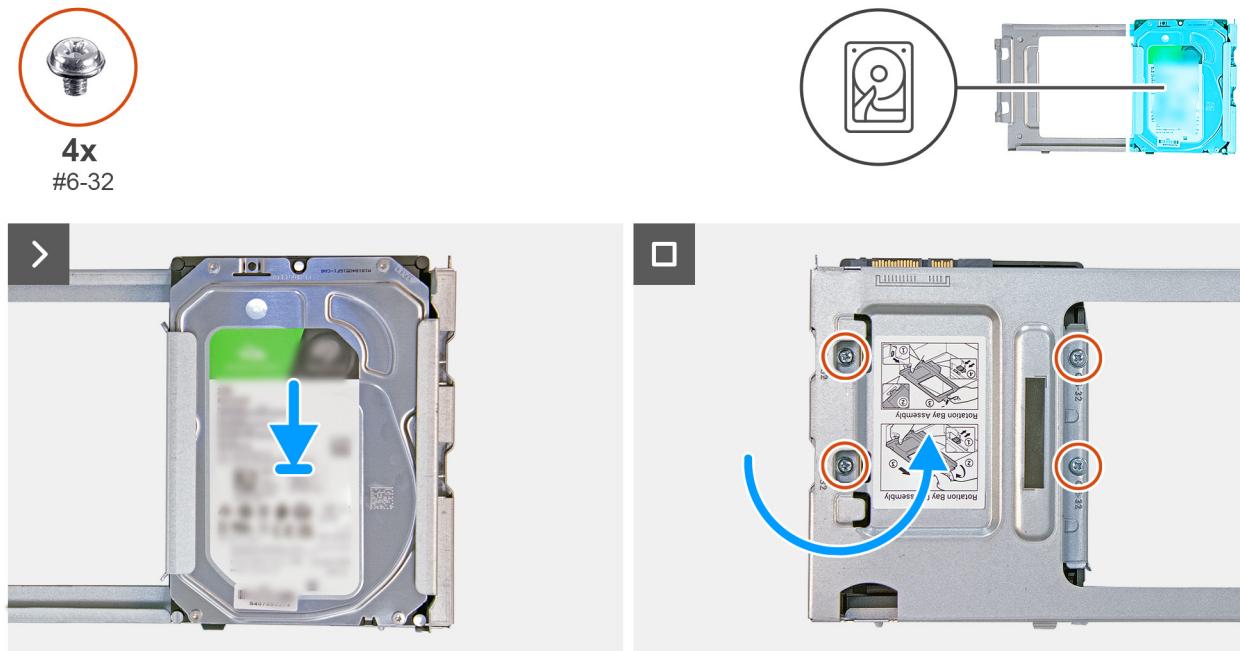

**Figure 34. Installing the hard drive**

## Steps

1. Slide the hard drive into place between the grooves in the drive bay.
2. Flip over the drive bay.
3. Replace the four screws (6-32#) that secure the drive bay to the hard drive.

### Next steps

1. Install the [drive bay](#), if applicable.
2. Install the [front cover](#).
3. Install the [left-side cover](#).
4. Follow the procedure in [After working inside your computer](#).

# Power button

## Removing the power button

### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [left-side cover](#).
3. Remove the [front cover](#).
4. Remove the [drive bay](#), if applicable.

### About this task

The following image indicates the location of the power button and provides a visual representation of the removal procedure.



**Figure 35. Removing the power button**

### Steps

1. Disconnect the power-button cable from its connector (PWR SW) on the system board.
2. Pinch release tabs on the power button to release it from the slot on the chassis.
3. Route the power button along with its cable through the slot on the chassis.
4. Remove the power button and its cable from the front of the chassis.


## Installing the power button

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

### About this task

The following image indicates the location of the power button and provides a visual representation of the installation procedure.

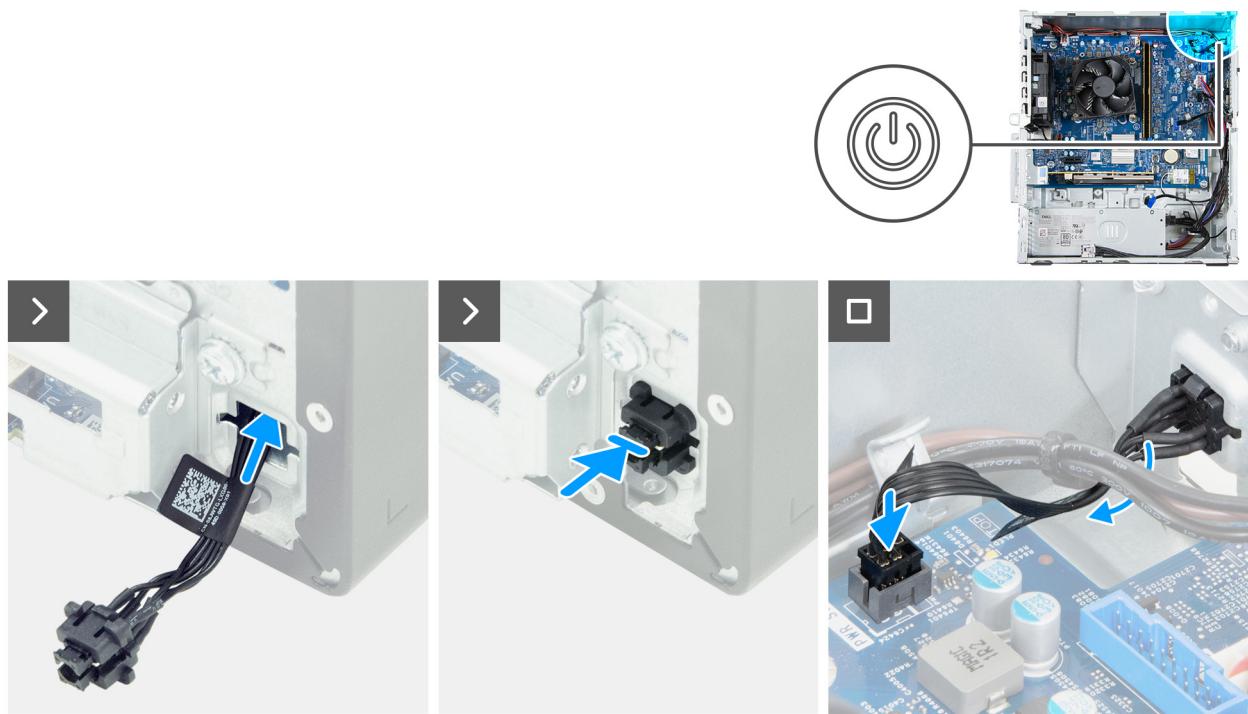

**Figure 36. Installing the power button**

#### Steps

1. Thread the power-button module cable through the slot on the front of the chassis.
2. Align the tabs on the side of the power button with the cutouts on the slot in the chassis.
3. Press the power-button module into its slot on the chassis.
4. Connect the power-button cable to its connector (PWR SW) on the system board.

#### Next steps

1. Install the [drive bay](#), if applicable.
2. Install the [front cover](#).
3. Install the [left-side cover](#).
4. Follow the procedure in [After working inside your computer](#).

## Media-card reader


### Removing the media-card reader

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [left-side cover](#).
3. Remove the [front cover](#).
4. Remove the [drive bay](#), if applicable.
5. Remove the [fan](#).

#### About this task

The following image indicates the location of the media-card reader and provides a visual representation of the removal procedure.

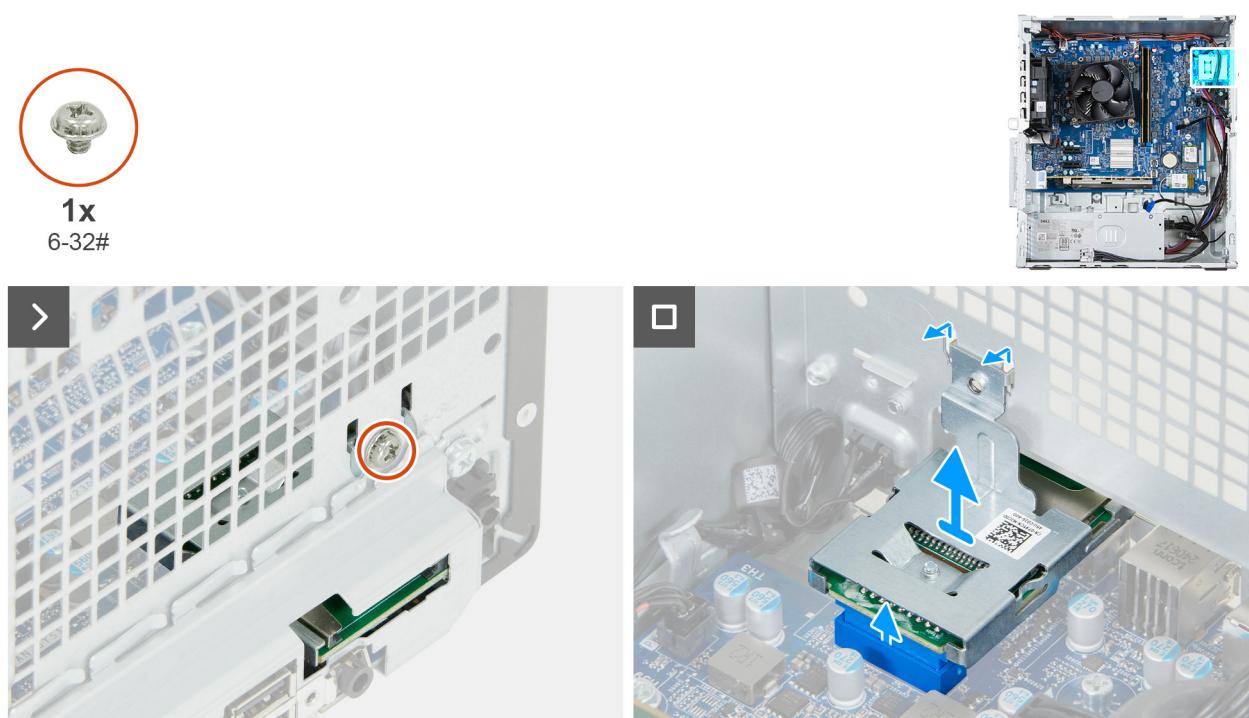

**Figure 37. Removing the media-card reader**

#### Steps

1. Remove the screw (6-32#) that secures the media-card reader bracket to the chassis.
2. Lift the media-card reader to disconnect it from its connector (SD CARD) on the system board.
3. Unhook the tabs on the media-card reader from the slots on the chassis and remove the media-card reader from the chassis.


## Installing the media-card reader

#### Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

#### About this task

The following image indicates the location of the media-card reader and provides a visual representation of the installation procedure.

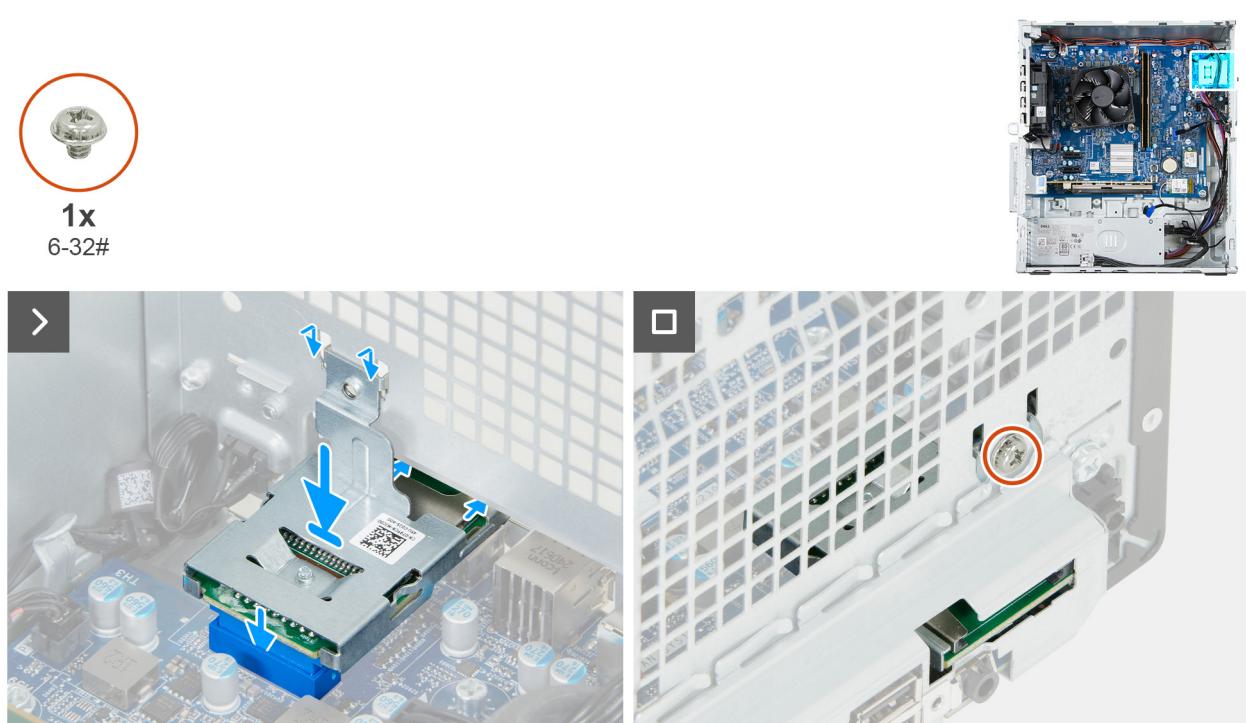

**Figure 38. Installing the media-card reader**

### Steps

1. Place the tabs on the media-card reader through the slots on the chassis and rotate the media-card reader towards the system board.
2. Align the media-card reader connector to its connector (SD CARD) on the system board.
3. Push down on the media-card reader to connect it to its connector on the system board.
4. Align the screw hole on the media-card reader bracket with the screw hole on the chassis.
5. Replace the screw (6-32#) that secures the media-card reader bracket to the chassis.

### Next steps

1. Install the [fan](#).
2. Install the [drive bay](#), if applicable.
3. Install the [front cover](#).
4. Install the [left-side cover](#).
5. Follow the procedure in [After working inside your computer](#).

## Fans


### Removing the fan

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [left-side cover](#).
3. Remove the [front cover](#).
4. Remove the [drive bay](#), if applicable.

#### About this task

The following image indicates the location of the fan and provides a visual representation of the removal procedure.

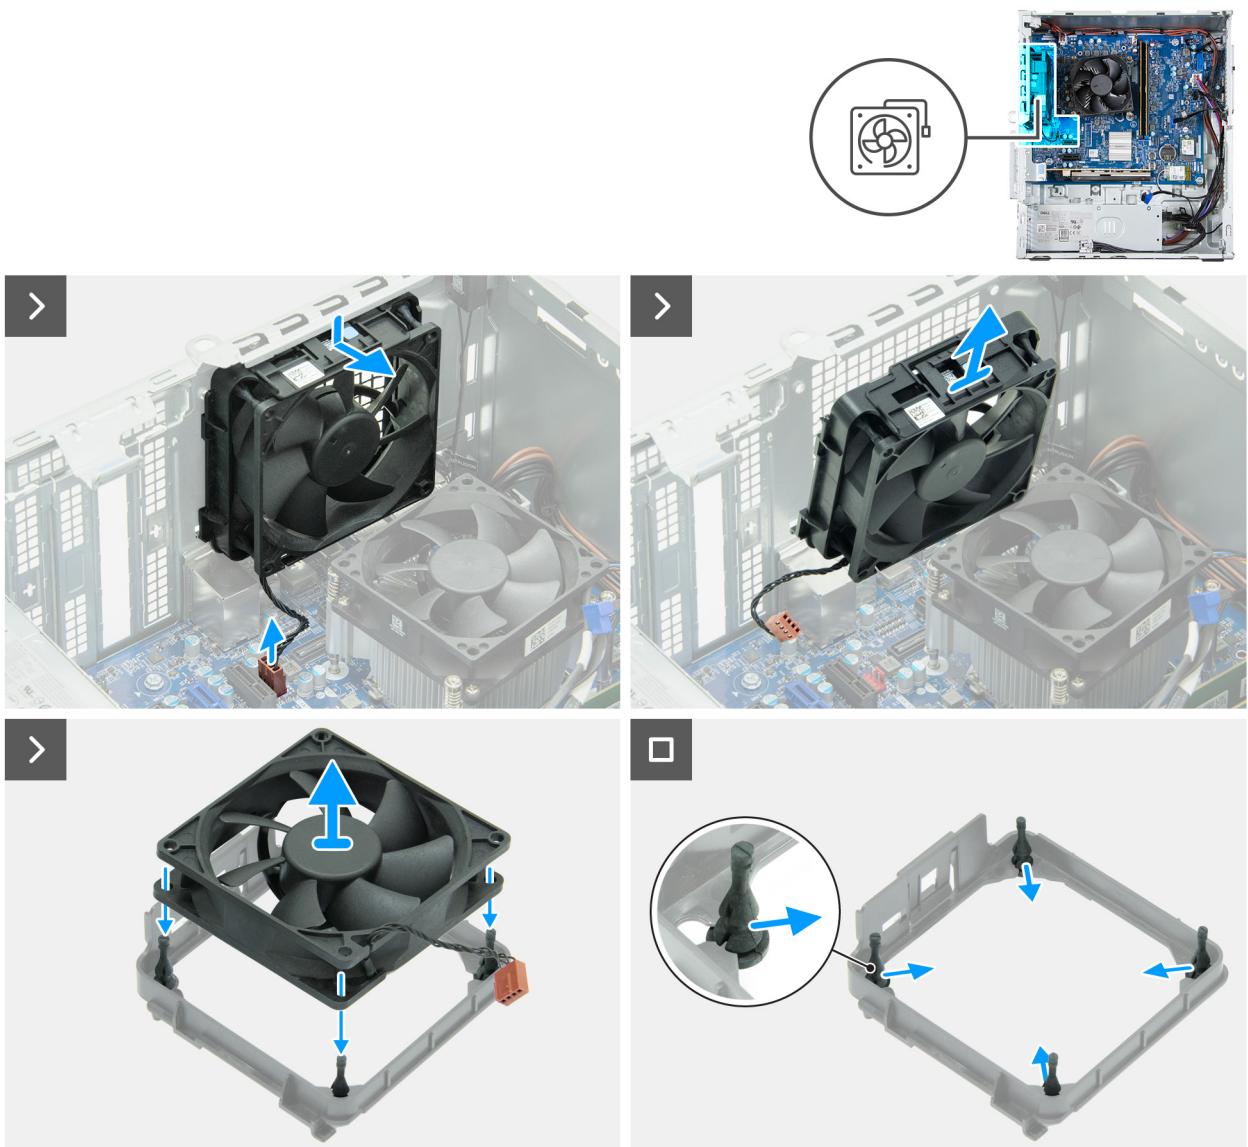

**Figure 39. Removing the fan**

#### Steps

1. Disconnect the fan cable from its connector (FAN SYS2) on the system board.
2. Push the fan down and lift the fan off the chassis.
3. Lift the fan off the fan bracket.
4. Remove the four rubber mounts from the fan bracket.


## Installing the fan

#### Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

#### About this task

The following image indicates the location of the fan and provides a visual representation of the installation procedure.

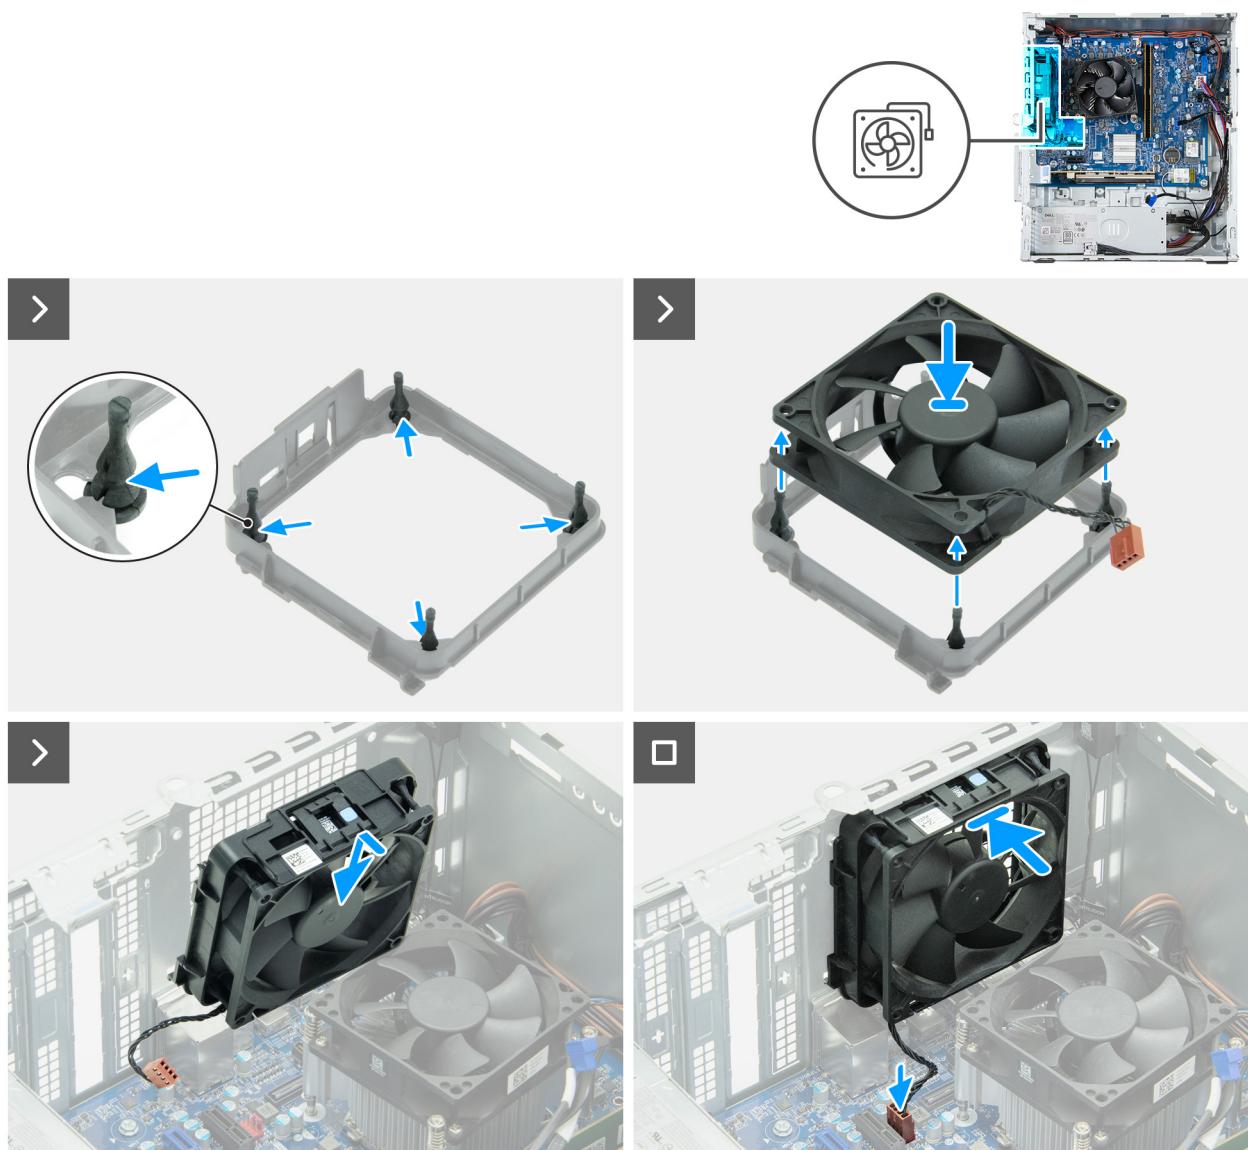

**Figure 40. Installing the fan**

### Steps

1. Place the four rubber mounts on the fan bracket.
2. Align the screw holes on the fan to the rubber mounts on the fan bracket, then push the fan into place.
3. Align the tabs on the fan to the slots on the chassis and place the fan into its slot on the chassis.
4. Connect the fan cable to its connector (FAN SYS2) on the system board.

### Next steps

1. Install the [drive bay](#), if applicable.
2. Install the [front cover](#).
3. Install the [left-side cover](#).
4. Follow the procedure in [After working inside your computer](#).

# Serial-port module

## Removing the serial-port module


### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [left-side cover](#).
3. Remove the [front cover](#).
4. Remove the [drive bay](#), if applicable.
5. Remove the [fan](#).

### About this task

The serial-port module is an optional component and may not be installed in your computer.

The following image indicates the location of the serial-port module and provides a visual representation of the removal procedure.

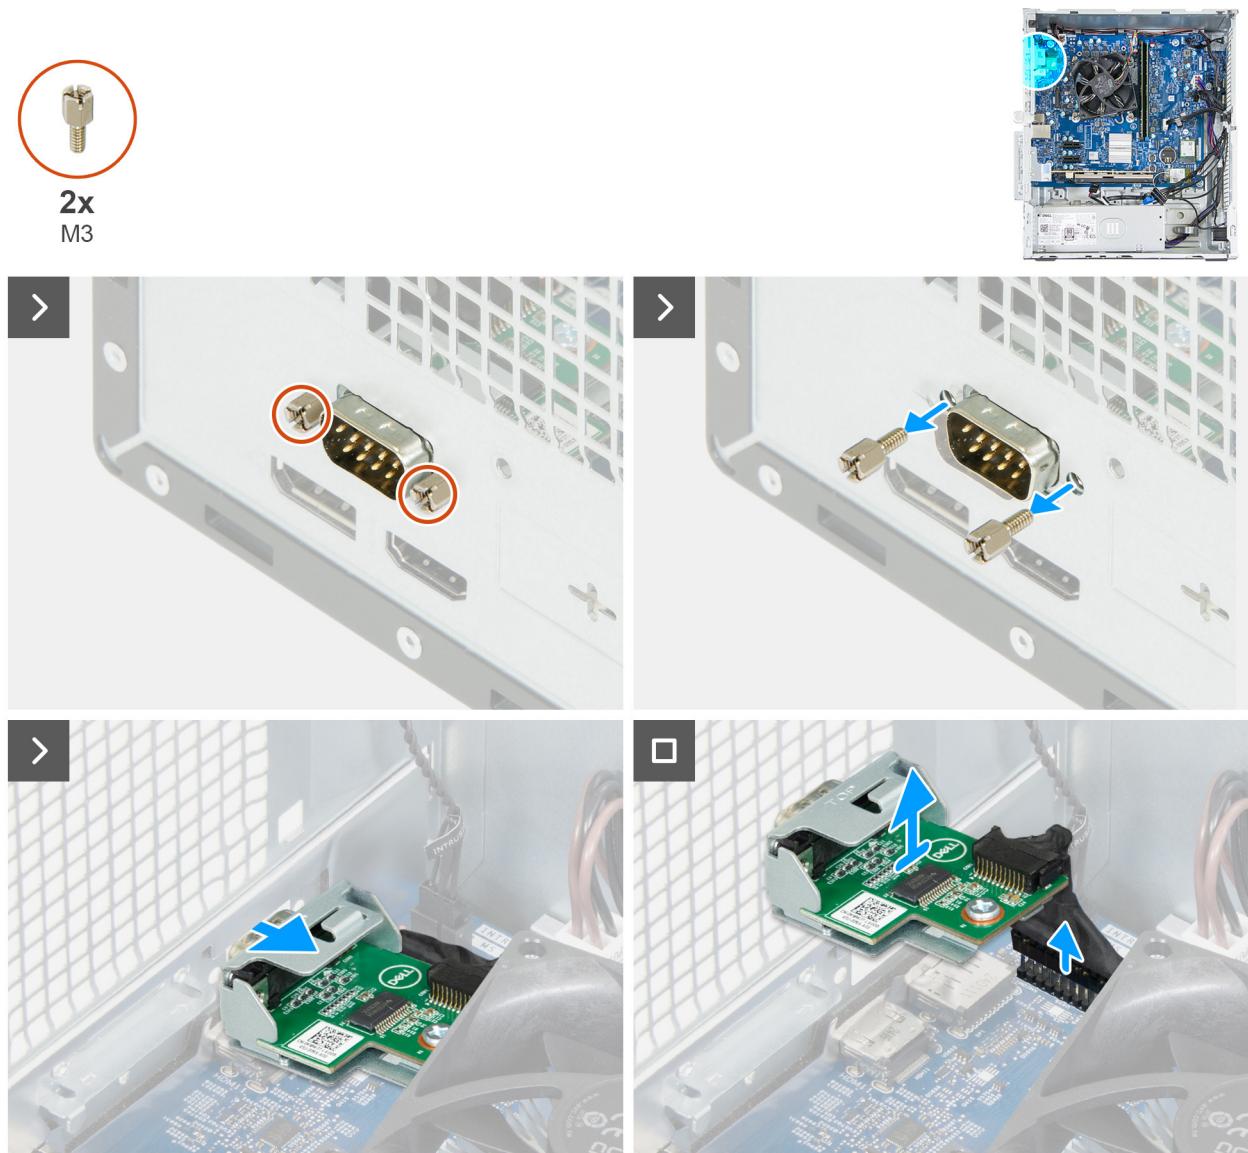

**Figure 41. Removing the serial-port module**

## Steps

1. Remove the two screws (M3) that secure the optional serial module to the chassis.
2. Push the serial port through its slot on the chassis.
3. Disconnect the serial-port module cable from the connector (KB MS SERIAL) on the system board.
4. Lift the serial-port module off the system board.


## Installing the serial-port module

### Prerequisites


If you are replacing a component, remove the existing component before performing the installation process.

### About this task

The following images indicate the location of the serial-port module and provide a visual representation of the installation procedure.

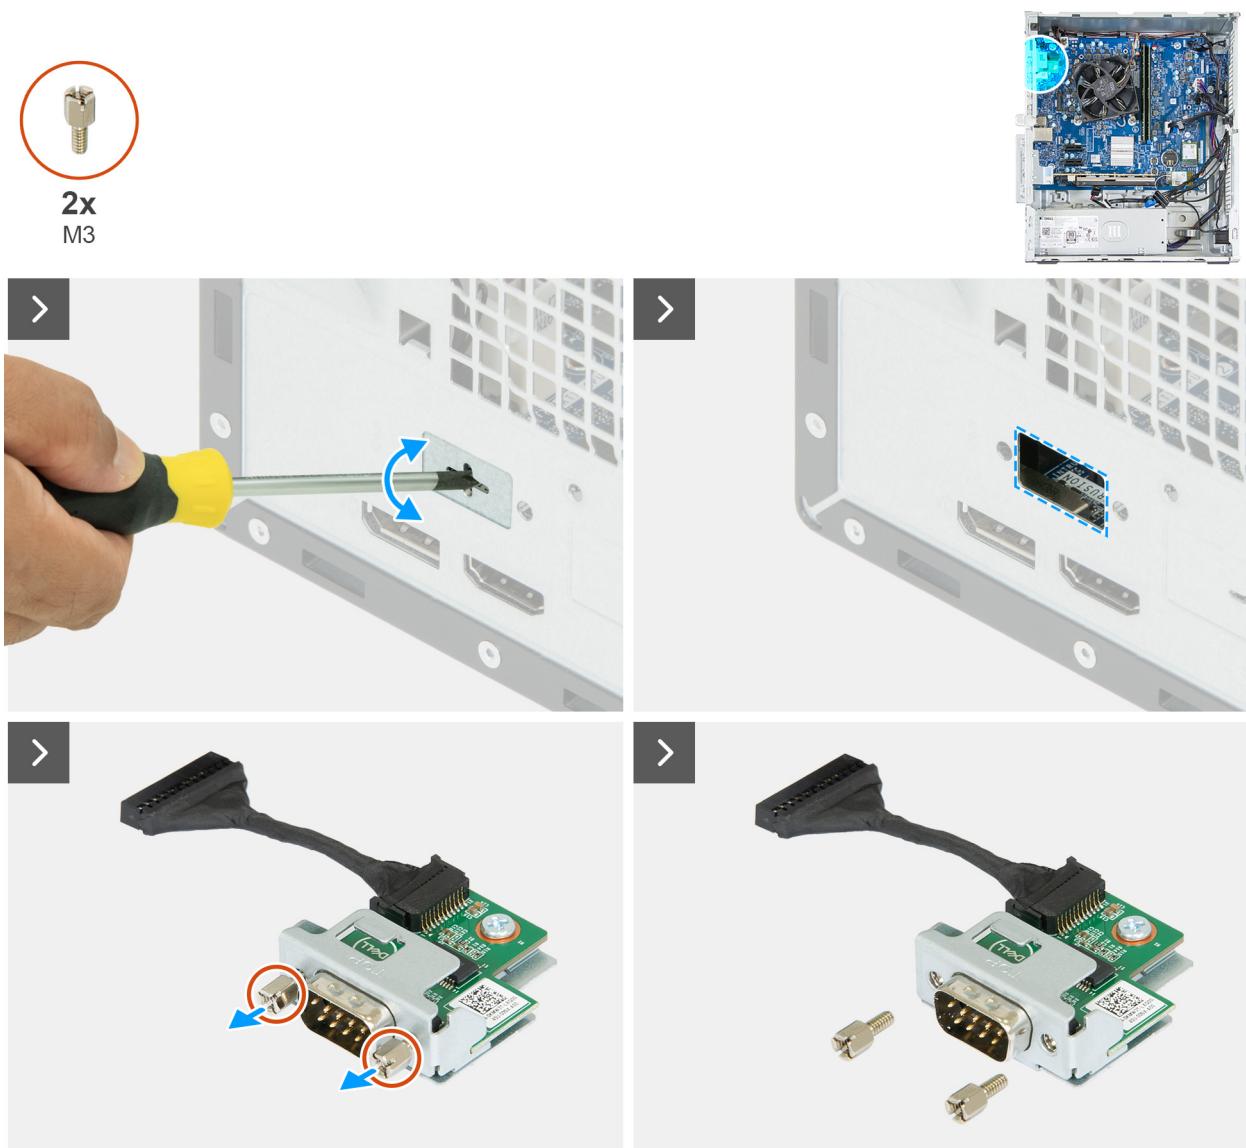

**Figure 42. Installing the serial-port module**

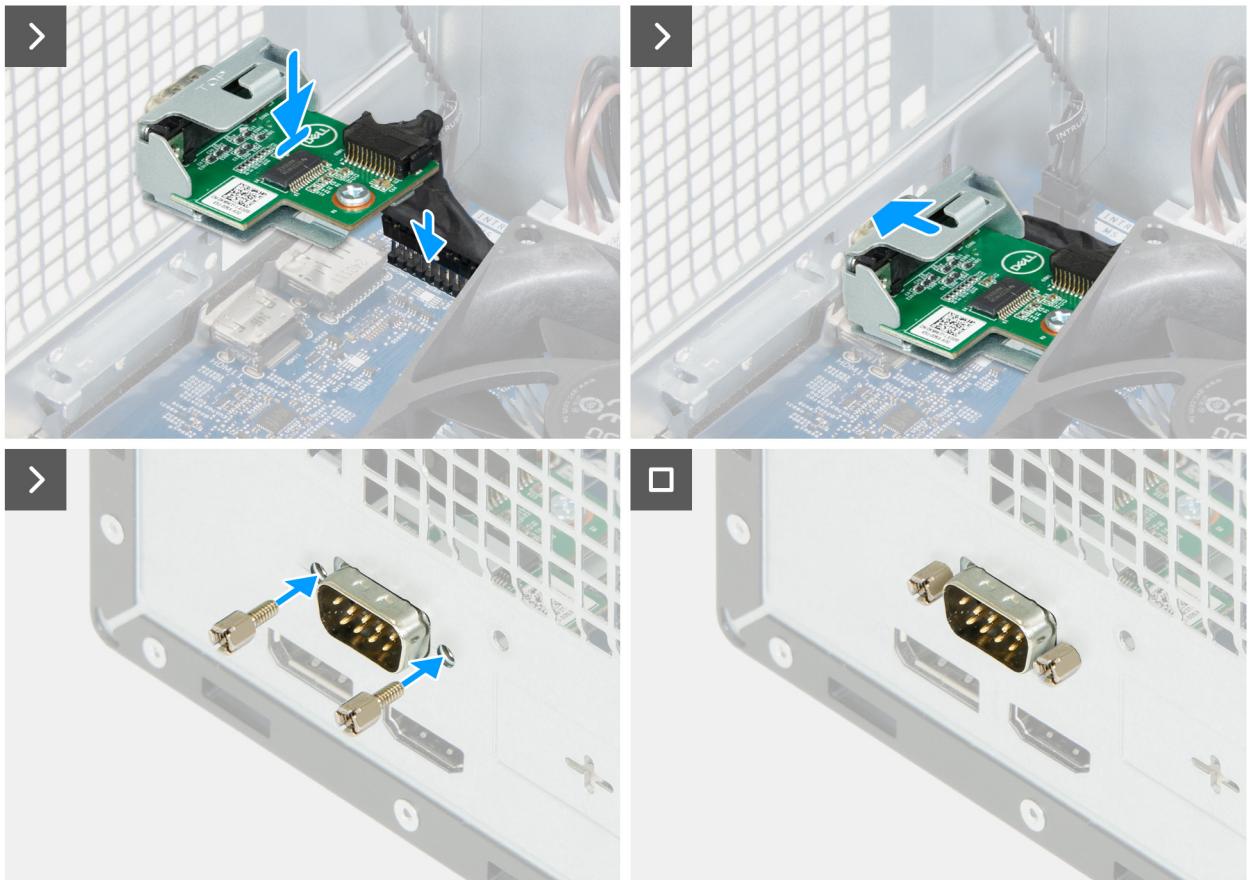

**Figure 43. Installing the serial-port module**

### Steps

1. Using a screw driver, push against the serial-port cover until it comes off.
2. Remove the two screws (M3) on the serial-port module.

**(i) NOTE:** Steps 1 and 2 are only applicable if you are installing the serial-port module on a computer that did not previously have it installed.

3. Suspend the serial-port module over the system board.
4. Connect the serial-port module cable to its connector (KB MS SERIAL) on the system board.
5. Insert the serial-port module into its slot on the chassis.
6. Replace the two screws (M3) to secure the serial-port module to the chassis.

### Next steps

1. Install the [fan](#).
2. Install the [drive bay](#), if applicable.
3. Install the [front cover](#).
4. Install the [left-side cover](#).
5. Follow the procedure in [After working inside your computer](#).

# Removing and installing Field Replaceable Units (FRUs)

The replaceable components in this chapter are Field Replaceable Units (FRUs).

 **CAUTION:** The information in this removing and installing FRUs section is intended for authorized service technicians only.

 **CAUTION:** To avoid any potential damage to the component or loss of data, Dell Technologies recommends that an authorized service technician replaces the Field Replaceable Units (FRUs).

 **CAUTION:** Your warranty does not cover damages that may occur during FRU repairs that are not authorized by Dell Technologies.

 **NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

## Antenna modules

### Removing the antenna modules


 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [left-side cover](#).
3. Remove the [front cover](#).
4. Remove the [wireless card](#).

#### About this task

The following image indicates the location of the antenna modules and provides a visual representation of the removal procedure.

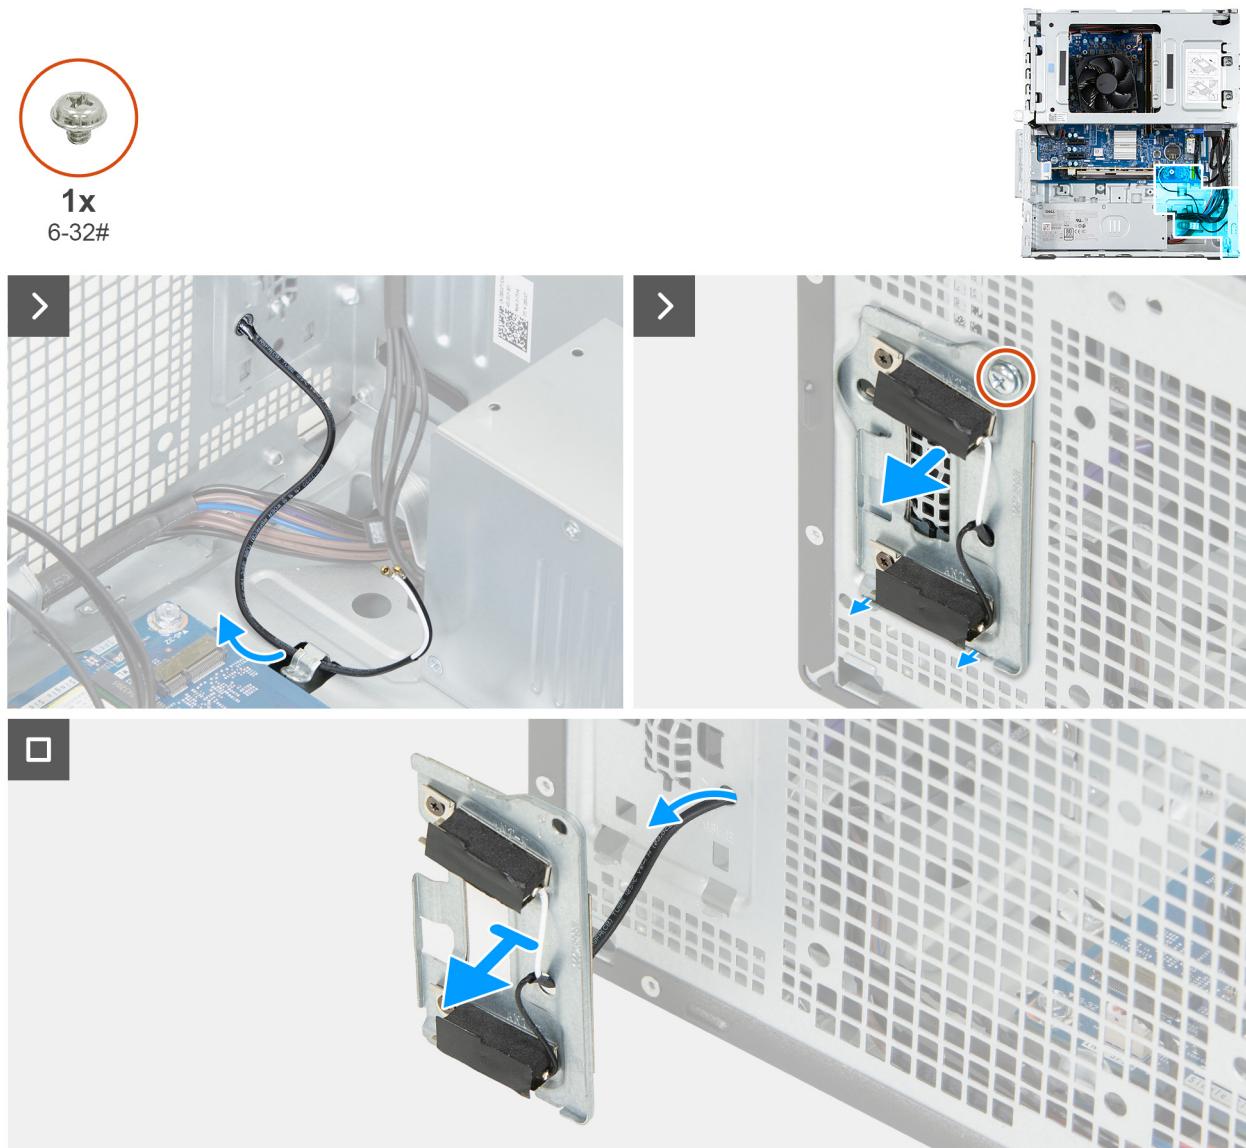

**Figure 44. Removing the antenna modules**

#### Steps

1. Remove the antenna cables from the routing guide on the chassis.
2. Remove the screw (6-32#) that secures the antenna modules to the chassis.
3. Thread the antenna cables through the slot on the chassis.
4. Lift the antenna modules along with its cables off the chassis.

## Installing the antenna modules

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

#### Prerequisites


If you are replacing a component, remove the existing component before performing the installation process.

#### About this task

The following image indicates the location of the antenna modules and provides a visual representation of the installation procedure.



1x  
6-32#

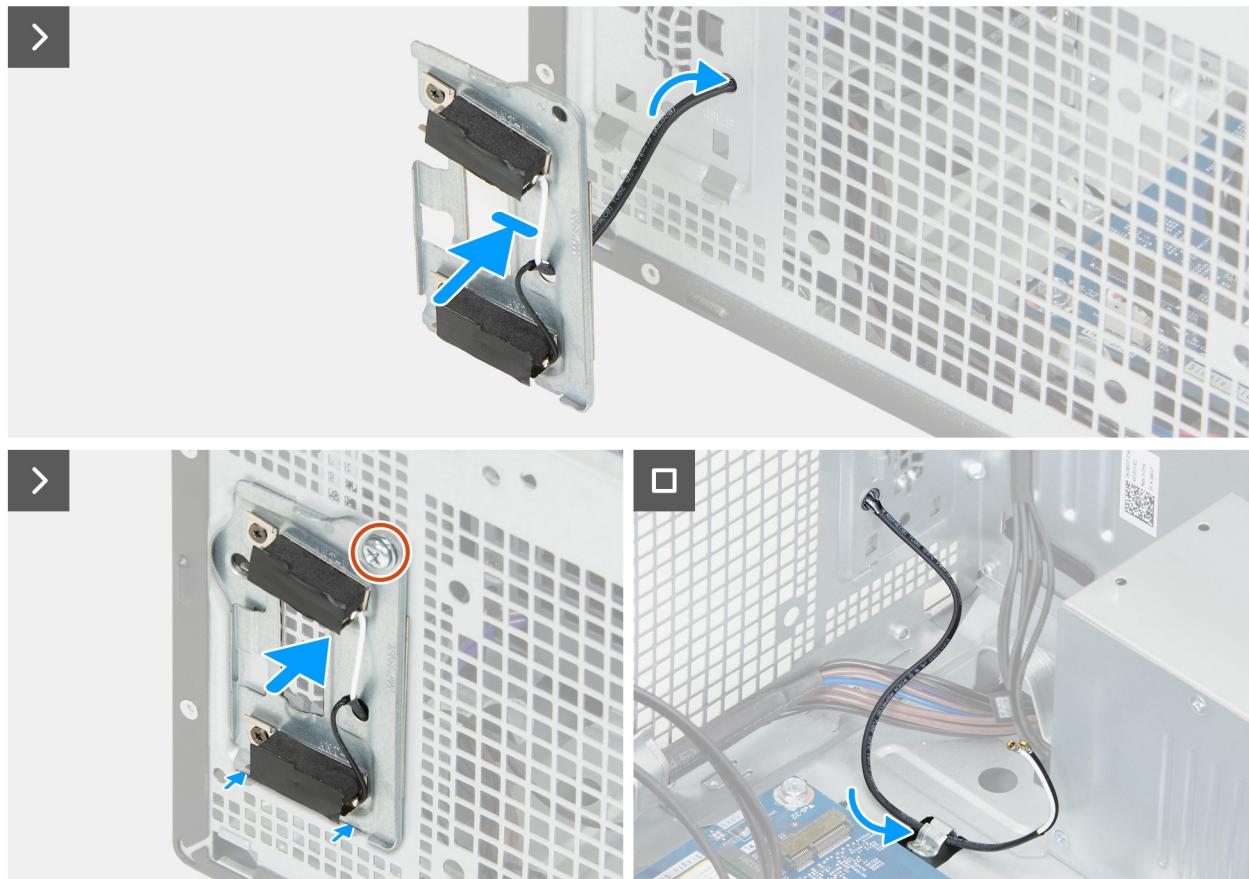

**Figure 45. Installing the antenna modules**

#### Steps

1. Thread the antenna cables through the slot on the chassis.
2. Place the antenna modules on the chassis.
3. Align the screw hole on the antenna modules with the screw hole on the chassis.
4. Replace the captive screw (6-32#) that secures the antenna modules to the chassis.
5. Route the antenna cables through the routing guide on the chassis.

#### Next steps

1. Install the [wireless card](#).
2. Install the [front cover](#).
3. Install the [left-side cover](#).
4. Follow the procedure in [After working inside your computer](#).

# Power-supply unit

## Removing the power-supply unit

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

### Prerequisites


1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [left-side cover](#).
3. Remove the [front cover](#).
4. Remove the [drive bay](#), if applicable.
5. Remove the [wireless card](#).

### About this task


The following images indicate the location of the power-supply unit and provide a visual representation of the removal procedure.



3x  
6-32#

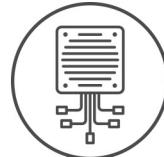

**Figure 46. Removing the power-supply unit**

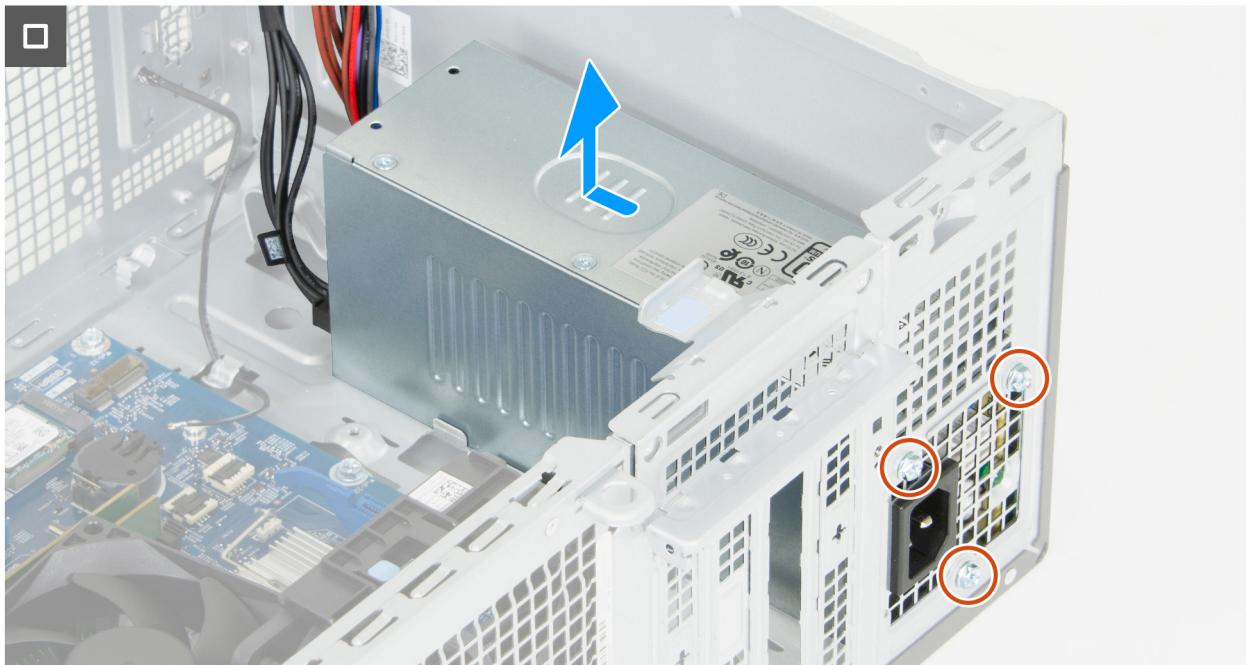

**Figure 47. Removing the power-supply unit**

#### Steps

1. Press the securing clip and disconnect the processor-power cable from its connector (ATX CPU1) on the system board.
2. Remove the processor-power cable from the routing guides on the chassis.
3. Press the securing clip and disconnect the system-board power cable from its connector (ATX SYS) on the system board.
4. Remove the system-board power cable and the processor-power cables from the routing guide on the chassis.
5. Remove the three screws (6-32#) that secure the power-supply unit to the chassis.
6. Slide and lift the power-supply unit off the chassis.

## Installing the power-supply unit

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

#### Prerequisites



If you are replacing a component, remove the existing component before performing the installation process.

#### About this task

The following images indicate the location of the power-supply unit and provide a visual representation of the installation procedure.



**3x**  
6-32#

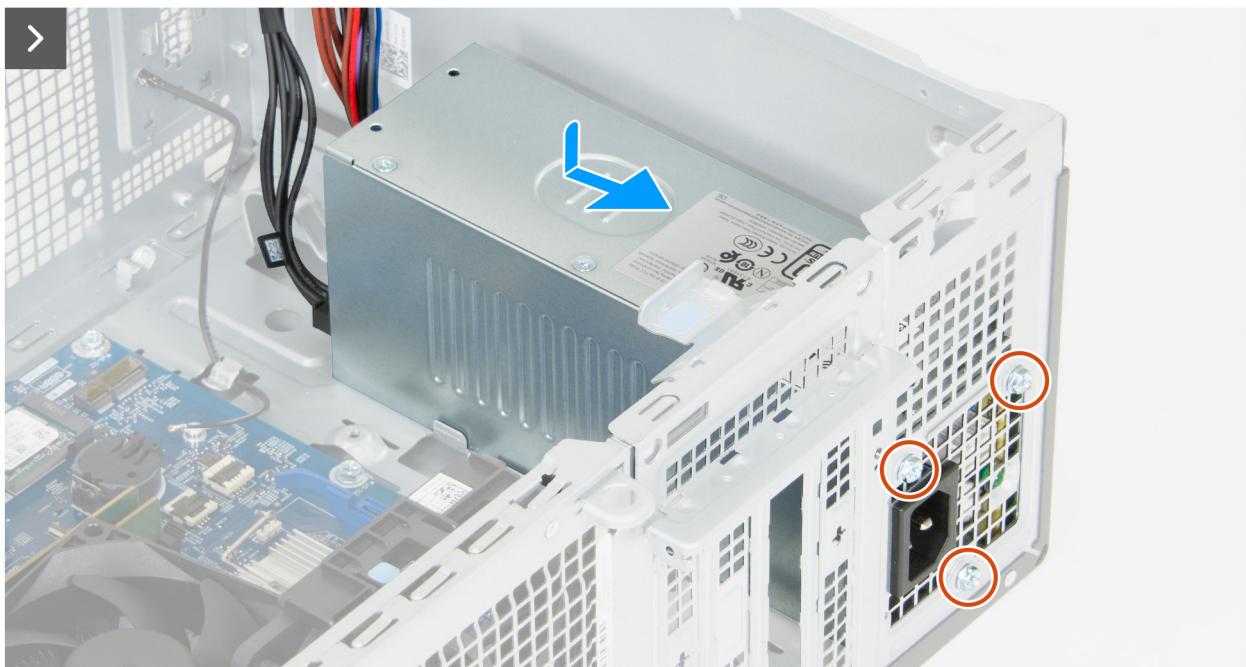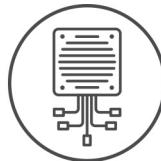

**Figure 48. Installing the power-supply unit**



**Figure 49. Installing the power-supply unit**

### Steps

1. Place and slide the tabs on the power-supply unit into the latches on the chassis.
2. Align the screw holes on the power-supply unit to the screw holes on the chassis.
3. Replace the three screws (6-32#) that secure the power-supply unit to the chassis.
4. Route the system-board power cable and the processor-power cable through the routing guide on the chassis.
5. Connect the system-board power cable to its connector (ATX SYS) on the system board.
6. Route the processor-power cable through the routing guides on the chassis.
7. Connect the processor-power cable to its connector (ATX CPU1) on the system board.

### Next steps

1. Install the [wireless card](#).
2. Install the [drive bay](#), if applicable.
3. Install the [front cover](#).
4. Install the [left-side cover](#).
5. Follow the procedure in [After working inside your computer](#).

# Processor fan and heat-sink assembly

## Removing the processor fan and heat-sink assembly

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

### Prerequisites


1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [left-side cover](#).
3. Remove the [drive bay](#), if applicable.

### About this task

 **WARNING:** The heat sink may become hot during normal operation. Allow sufficient time for the heat sink to cool before you touch it.

 **CAUTION:** For maximum cooling of the processor, do not touch the heat-transfer areas on the heat sink. The oils in your skin can reduce the heat-transfer capability of the thermal grease.

The following image indicates the location of the processor fan and heat-sink assembly and provides a visual representation of the removal procedure.

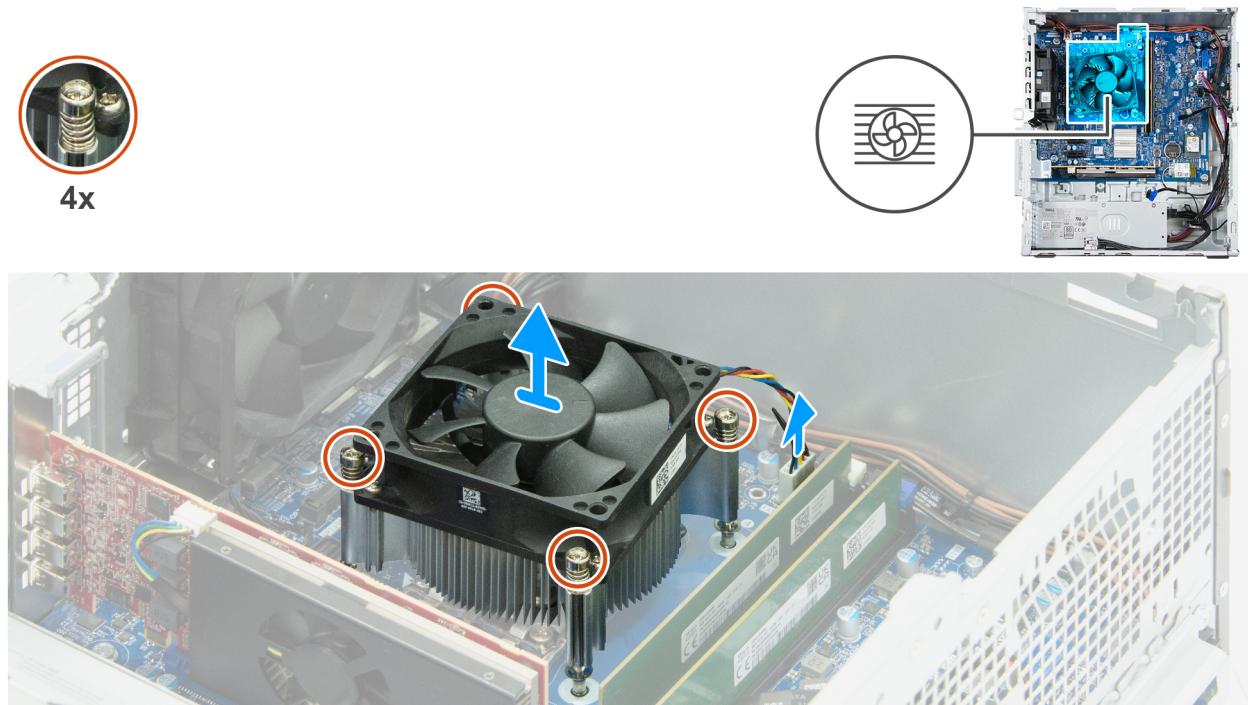

**Figure 50. Removing the processor fan and heat-sink assembly**

### Steps

1. Disconnect the fan cable from its connector (FAN CPU) on the system board.
2. In a reverse sequential order (4>3>2>1) loosen the four captive screws (M3) that secure the processor fan and heat-sink assembly to the system board.
3. Lift the processor fan and heat-sink assembly from the system board.

# Installing the processor fan and heat-sink assembly

**CAUTION:** The information in this installation section is intended for authorized service technicians only.


## Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

## About this task

**NOTE:** When installing this component, use the thermal grease that is provided in the kit to ensure optimal thermal conductivity.

The following image indicates the location of the processor fan and heat-sink assembly and provides a visual representation of the installation procedure.

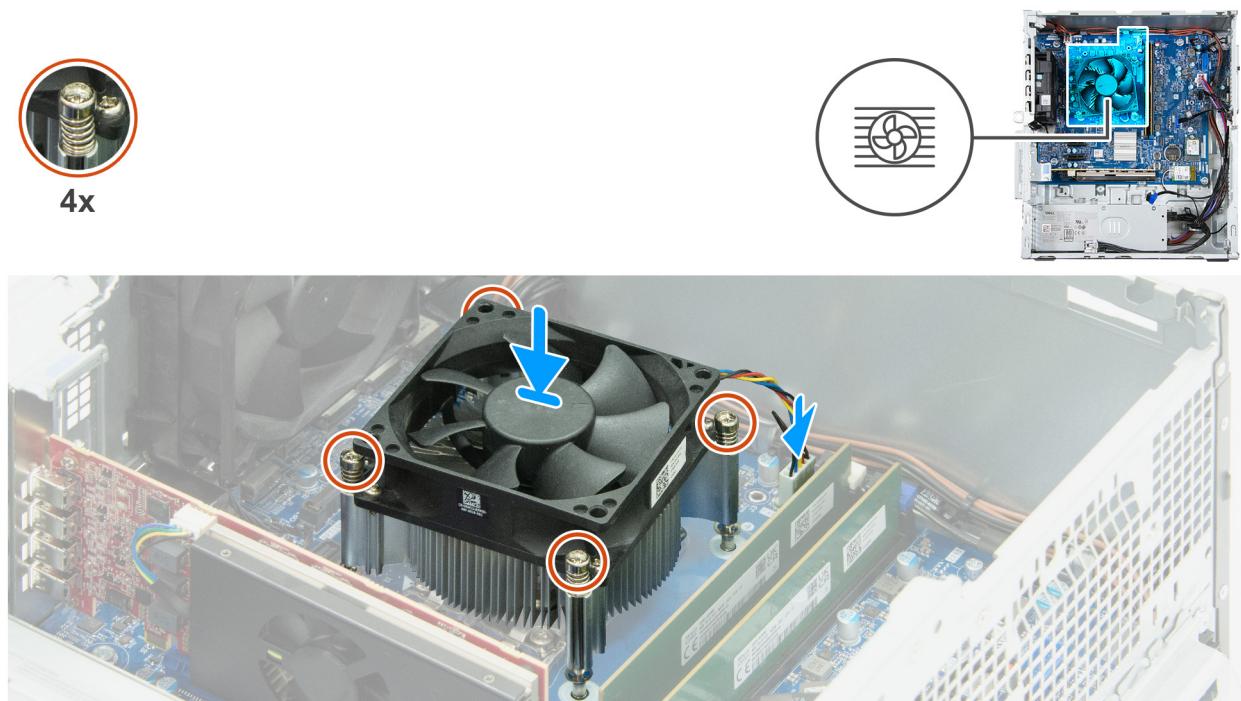

**Figure 51. Installing the processor fan and heat-sink assembly**

## Steps

1. Gently place the processor fan and heat-sink assembly on the processor.
2. Align the screw holes on the processor fan and heat-sink assembly with the screw holes on the system board.
3. In sequential order (1>2>3>4) tighten the four captive screws that secure the processor fan and heat-sink assembly to the system board.
4. Connect the fan cable to its connector (FAN CPU) on the system board.

## Next steps

1. Install the [drive bay](#), if applicable.
2. Install the [left-side cover](#).
3. Follow the procedure in [After working inside your computer](#).

# Processor

## Removing the processor

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

### Prerequisites


1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [left-side cover](#).
3. Remove the [drive bay](#), if applicable.
4. Remove the [processor fan and heat-sink assembly](#).

### About this task

 **WARNING:** The processor may become hot during normal operation. Allow sufficient time for the processor to cool before you touch it.

 **CAUTION:** For maximum cooling of the processor, do not touch the heat-transfer areas on the processor. The oils in your skin can reduce the heat-transfer capability of the thermal grease.

The following image indicates the location of the processor and provides a visual representation of the removal procedure.

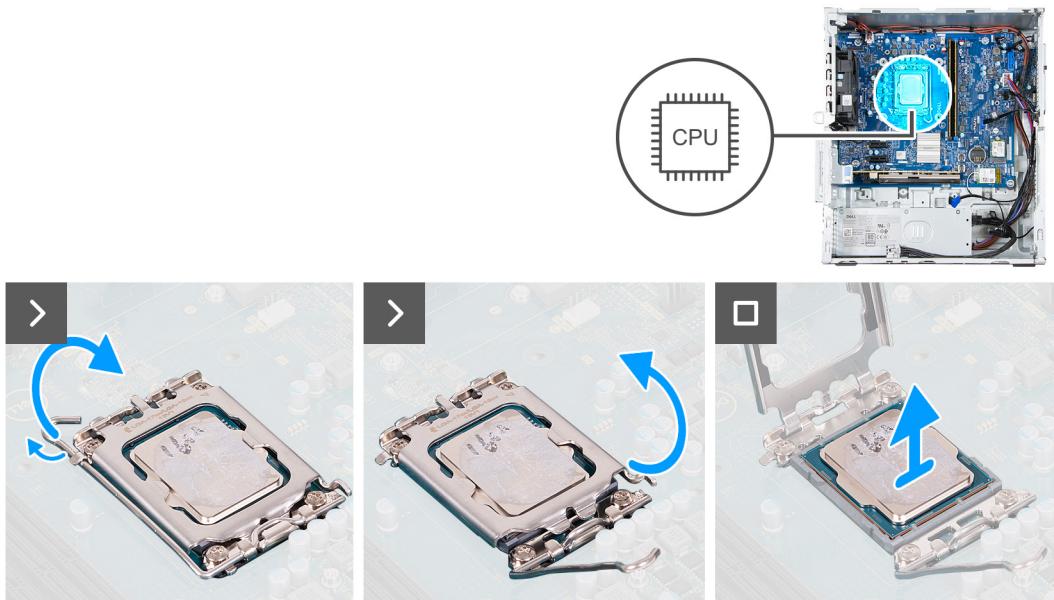

**Figure 52. Removing the processor**

### Steps

1. Press the release lever down and then push it away from the processor to release it from the securing tab.
2. Extend the release lever completely.
3. Flip open the processor cover.

 **CAUTION:** When removing the processor, do not touch any of the pins inside the socket or allow any objects to fall on the pins in the socket.

4. Gently lift the processor from the processor socket (CPU).

# Installing the processor


**CAUTION:** The information in this installation section is intended for authorized service technicians only.

## Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

## About this task

The following image indicates the location of the processor and provides a visual representation of the installation procedure.

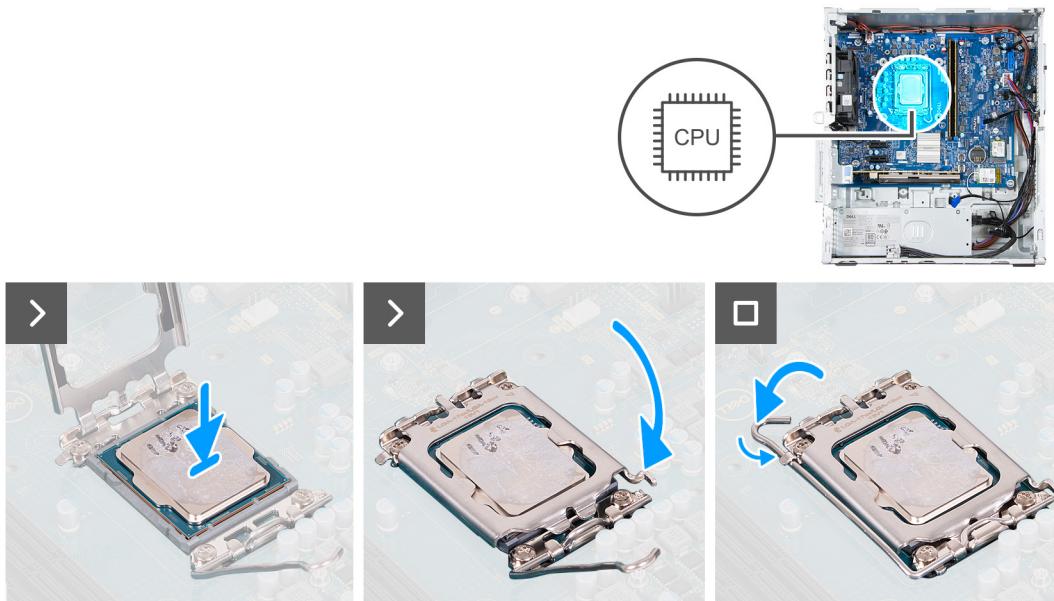

**Figure 53. Installing the processor**

## Steps

1. Ensure that the release lever and the processor cover are fully extended in the open position.  
**NOTE:** The pin 1 corner of the processor has a triangle that aligns with the triangle on the pin 1 corner on the processor socket. When the processor is properly seated, all four corners are aligned at the same height. If one or more corners of the processor are higher than the others, the processor is not seated properly.
2. Align the notches on the processor with the tabs on the processor socket and place the processor in the processor socket (CPU).  
**CAUTION:** Ensure the tabs on the processor cover are placed under the notch of the release lever.
3. When the processor is fully seated in the socket, pivot the release-lever down and place it under the tab on the processor cover.

## Next steps

1. Install the [processor fan and heat-sink assembly](#).
2. Install the [drive bay](#), if applicable.
3. Install the [left-side cover](#).
4. Follow the procedure in [After working inside your computer](#).

# System board

## Removing the system board

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.


### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [left-side cover](#).
3. Remove the [coin-cell battery cover](#).
4. Remove the [coin-cell battery](#).
5. Remove the [front cover](#).
6. Remove the [memory](#).
7. Remove the [M.2 2230 solid-state drive](#).
8. Remove the [wireless card](#).
9. Remove the [graphics card](#).
10. Remove the [drive bay](#), if applicable.
11. Remove the [fan](#).
12. Remove the [serial-port module](#), if applicable.
13. Remove the [processor fan and heat-sink assembly](#).
14. Remove the [processor](#).

### About this task

 **NOTE:** The Service Tag information of your computer is stored in the system board. You must enter the Service Tag in the BIOS setup program after you replace the system board.

 **NOTE:** Replacing the system board removes any changes that you have made to the BIOS using the BIOS setup program. You must make the appropriate changes again after you replace the system board.

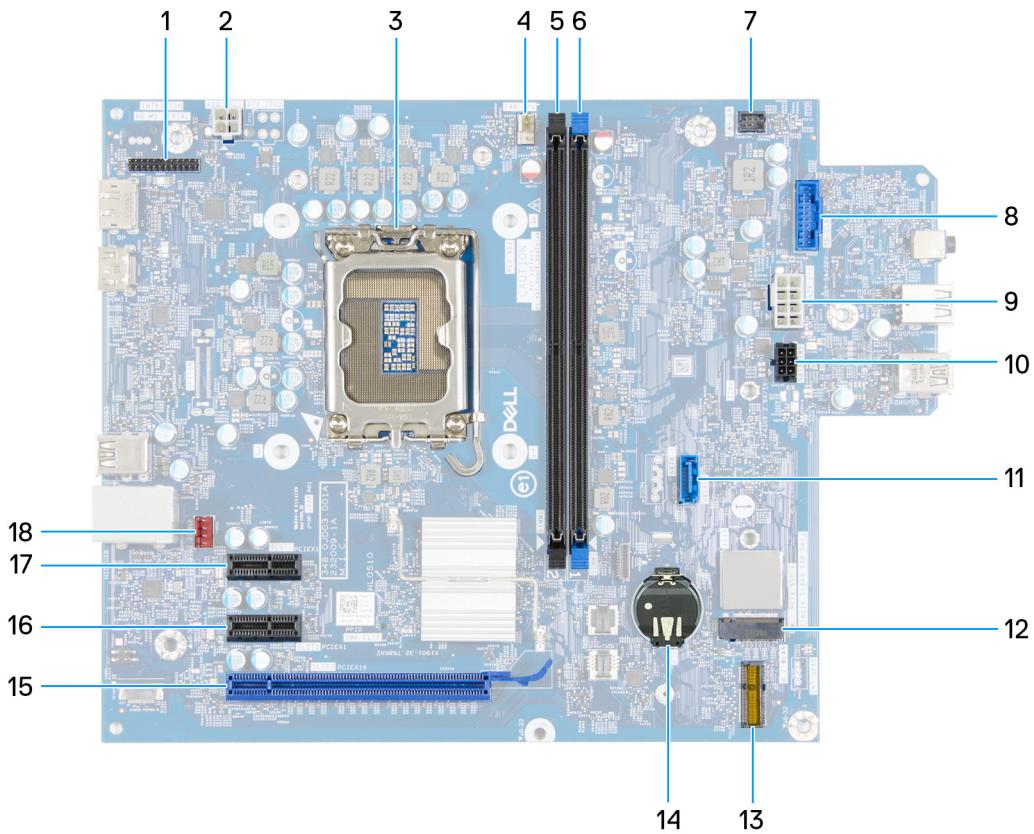

**Figure 54. System board callouts**

1. Serial-port module (KB MS SERIAL)
2. Processor-power cable (ATX CPU1)
3. Processor socket (CPU)
4. Processor-fan and heat-sink assembly cable (FAN CPU)
5. Memory slot (DIMM2)
6. Memory slot (DIMM1)
7. Power-button cable (PWR SW)
8. Media-card connector (SD CARD)
9. System-board power cable (ATX SYS)
10. Hard-drive power cable (SATA PWR)
11. Hard-drive data cable (SATA - 3)
12. Solid-state drive slot (M.2 PCIe SSD - 0)
13. Wireless-card slot (M.2 WLAN)
14. Coin-cell battery socket (RTC)
15. PCIe x16 slot (SLOT 3)
16. PCIe x1 slot (SLOT 2)
17. PCIe x1 slot (SLOT 1)
18. Fan cable (FAN SYS2)

The following images indicate the location of the system board and provide a visual representation of the removal procedure.

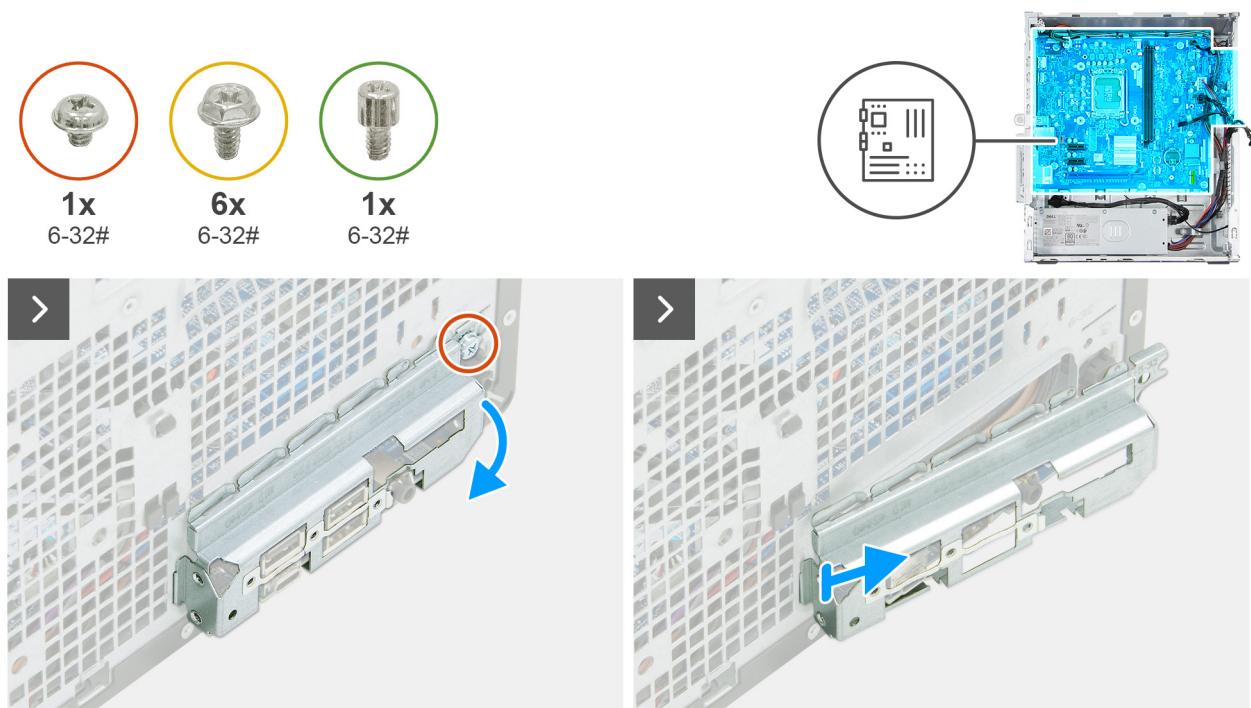


Figure 55. Removing the system board



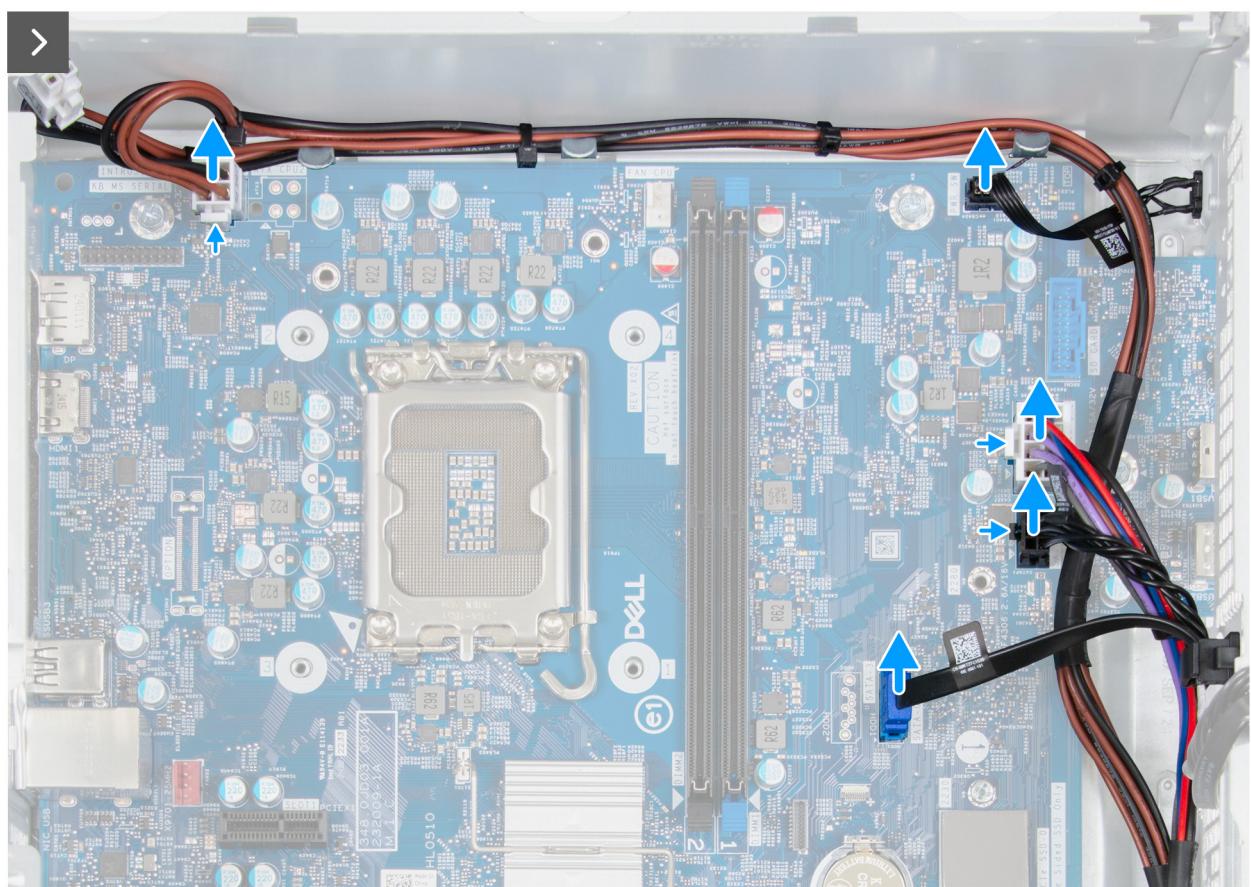


Figure 56. Removing the system board

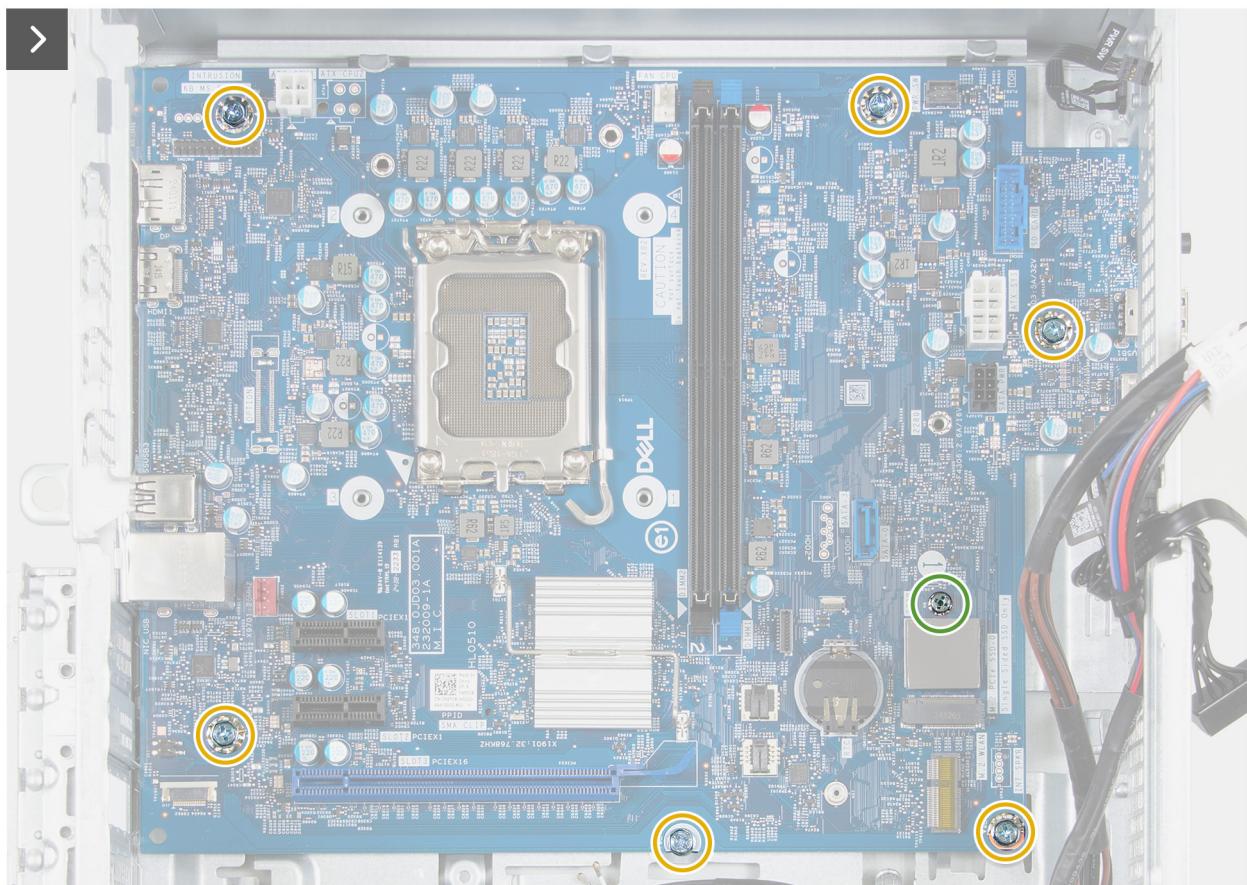

**Figure 57. Removing the system board**

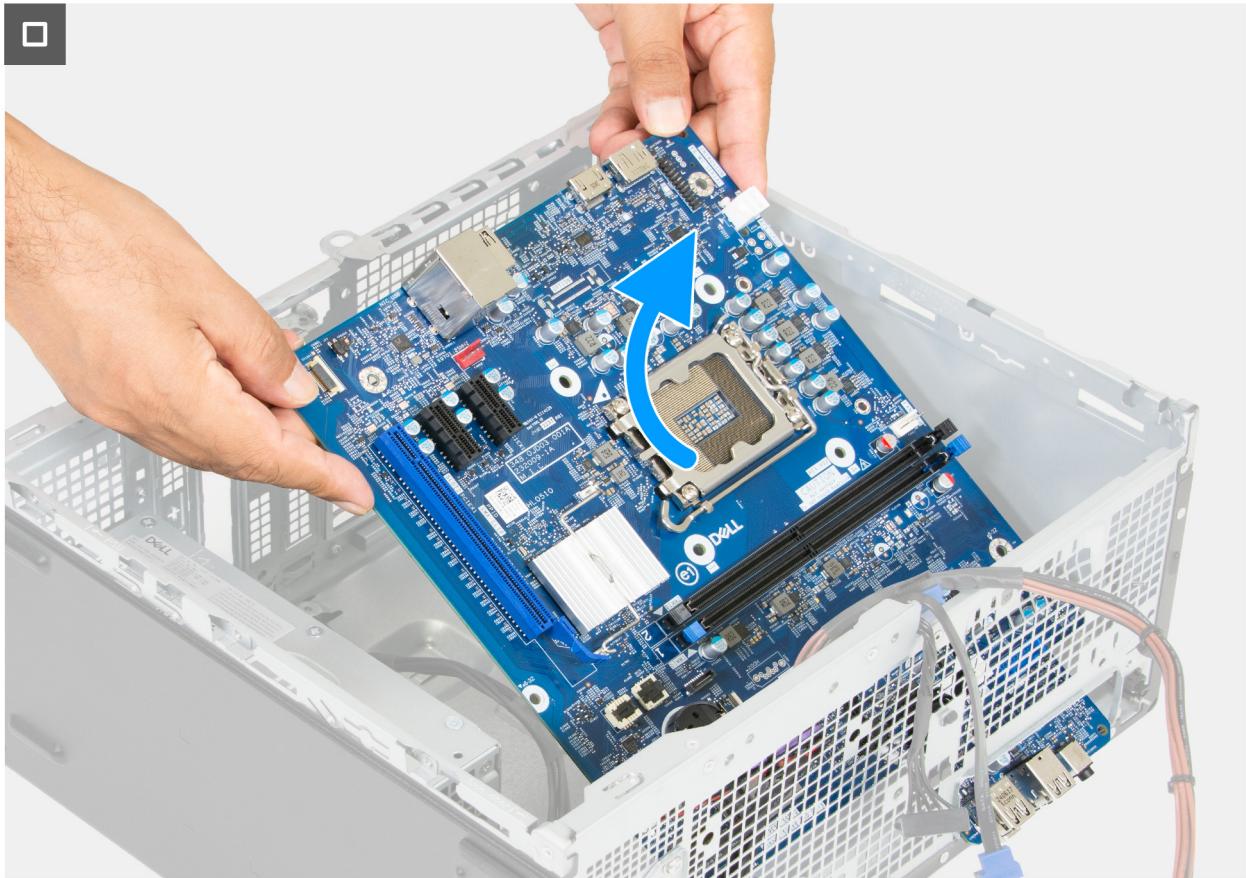

**Figure 58. Removing the system board**

#### Steps

1. Remove the screw (6-32#) that secures the front I/O-bracket to the chassis.
2. Remove and lift the front I/O-bracket from the chassis.
3. Press the securing clips and disconnect the processor-power cable from its connectors (ATX CPU1) on the system board.
4. Remove the processor-power cable from the routing guides on the chassis.
5. Disconnect the power-button cable from its connector (PWR SW) on the system board.
6. Press the securing clip and disconnect the system-board power cable from its connector (ATX SYS) on the system board.
7. Press the securing clip and disconnect the hard-drive power cable from its connector (SATA PWR) on the system board.
8. Disconnect the hard-drive data cable from its connector (SATA - 3) on the system board.
9. Remove the solid-state drive screw mount (6-32#) that secures the system board to the chassis.
10. Remove the six screws (6-32#) that secure the system board to the chassis.
11. Lift the system board at an angle and remove it from the chassis.


## Installing the system board

**CAUTION:** The information in this installation section is intended for authorized service technicians only.

#### Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.



## About this task

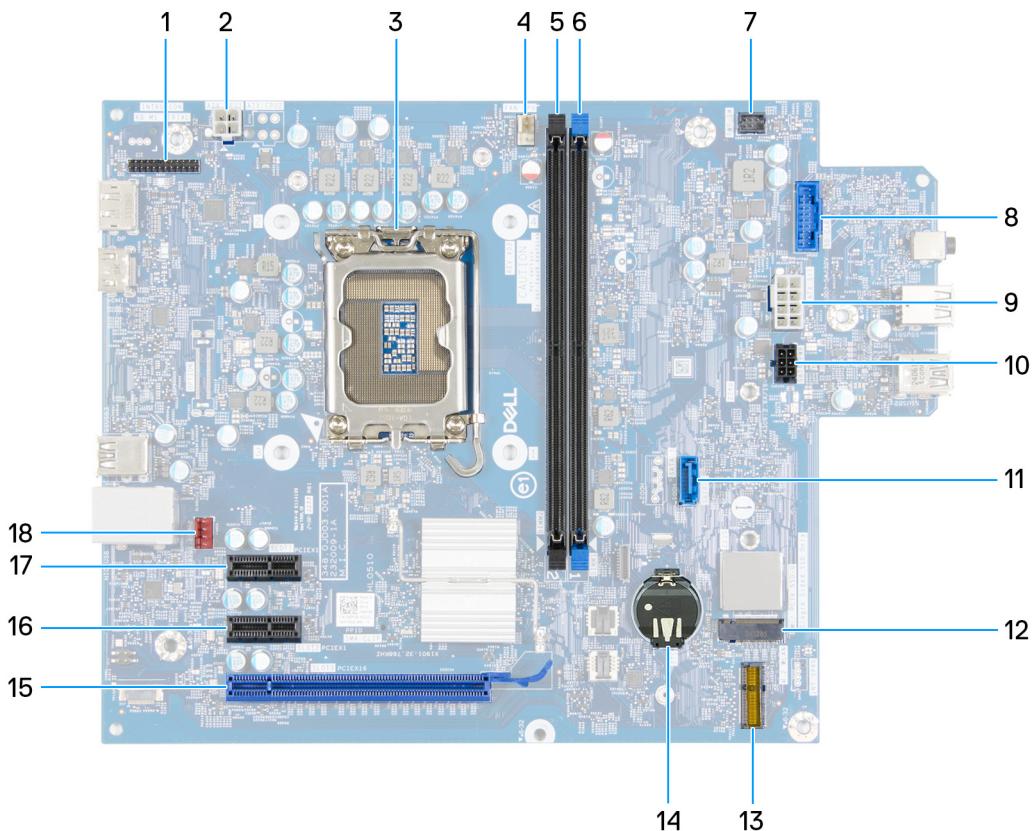


**Figure 59. System board callouts**

1. Serial-port module (KB MS SERIAL)
2. Processor-power cable (ATX CPU1)
3. Processor socket (CPU)
4. Processor-fan and heat-sink assembly cable (FAN CPU)
5. Memory slot (DIMM2)
6. Memory slot (DIMM1)
7. Power-button cable (PWR SW)
8. Media-card connector (SD CARD)
9. System-board power cable (ATX SYS)
10. Hard-drive power cable (SATA PWR)
11. Hard-drive data cable (SATA - 3)
12. Solid-state drive slot (M.2 PCIe SSD - 0)
13. Wireless-card slot (M.2 WLAN)
14. Coin-cell battery socket (RTC)
15. PCIe x16 slot (SLOT 3)
16. PCIe x1 slot (SLOT 2)
17. PCIe x1 slot (SLOT 1)
18. Fan cable (FAN SYS2)


The following images indicate the location of the system board and provide a visual representation of the installation procedure.

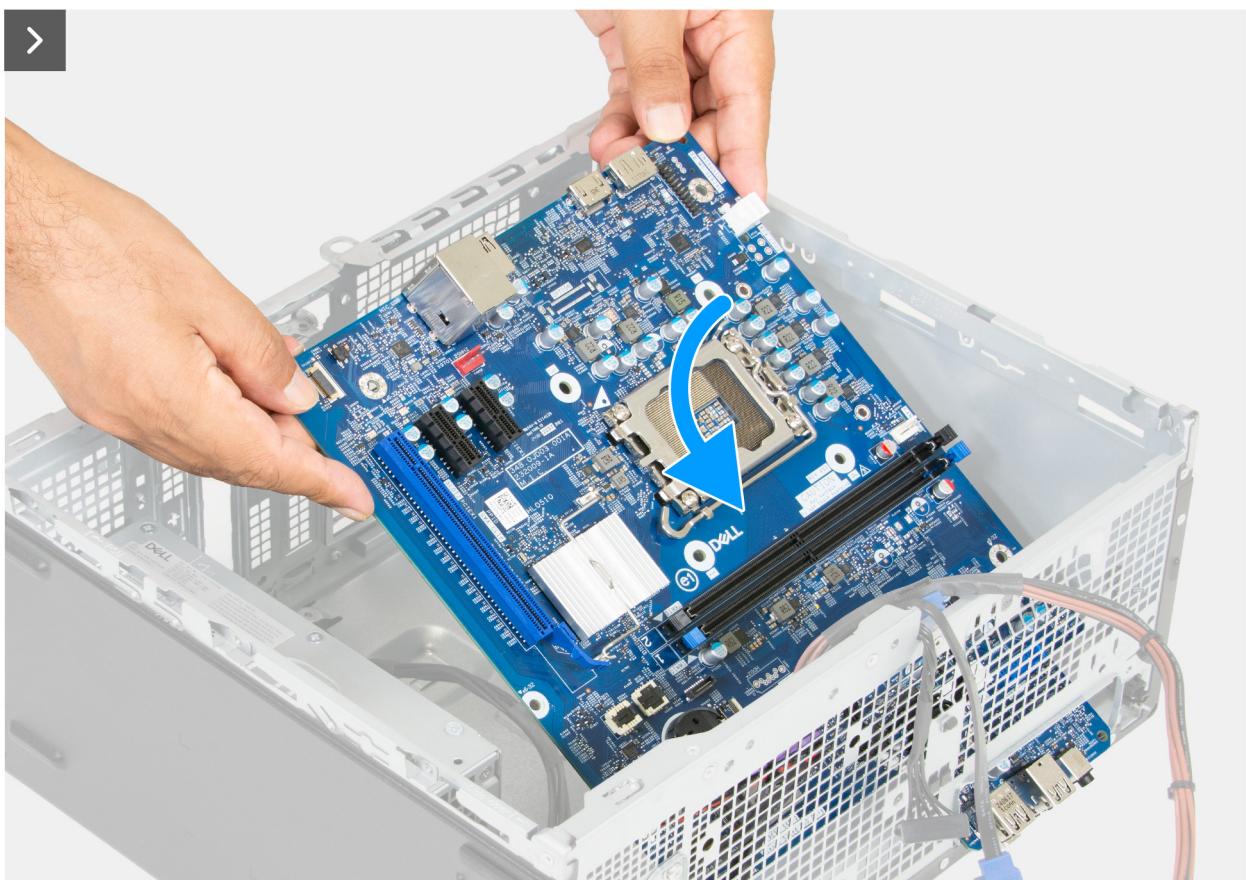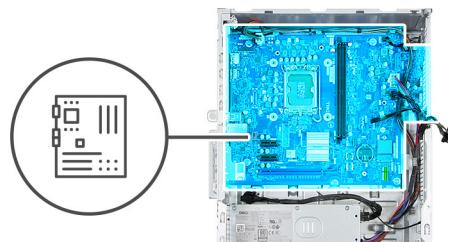


**Figure 60. Installing the system board**

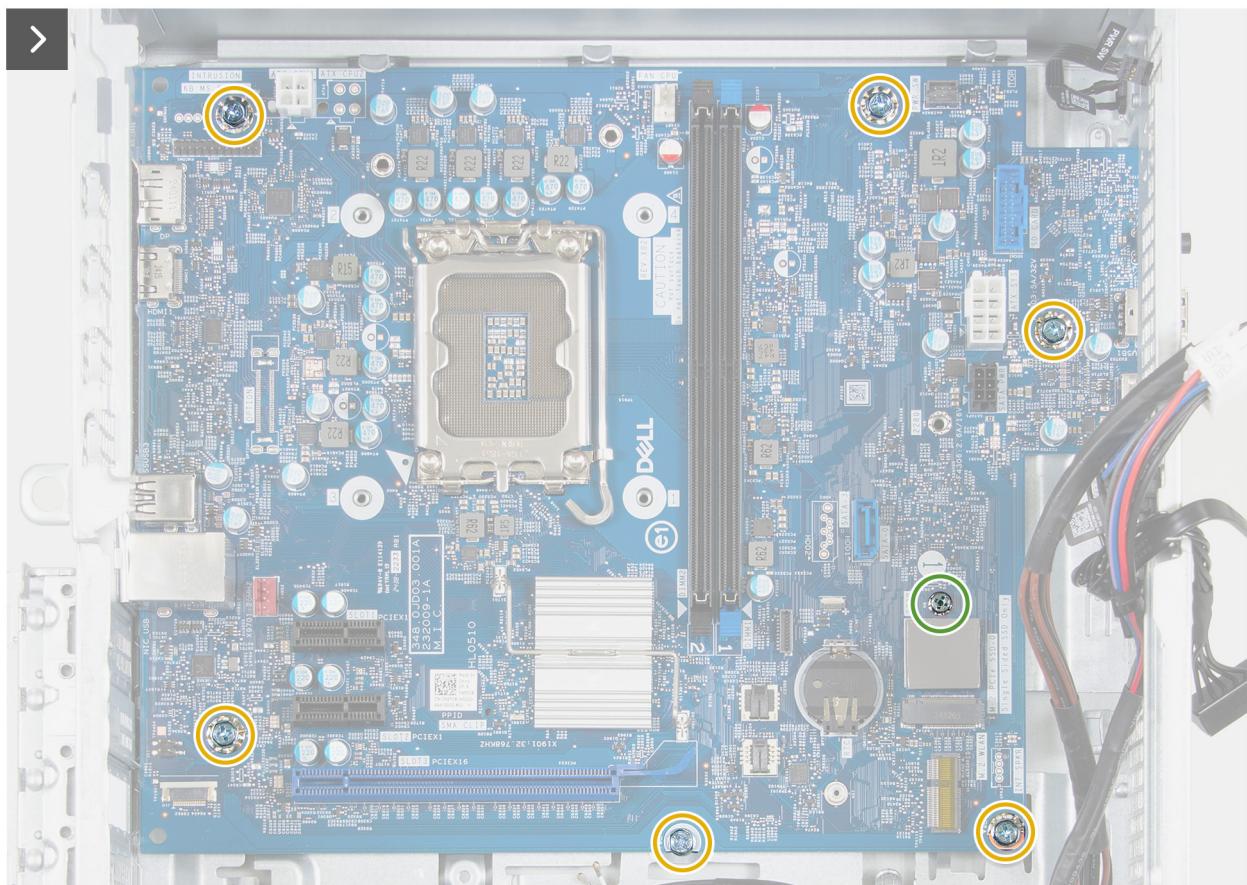

**Figure 61. Installing the system board**

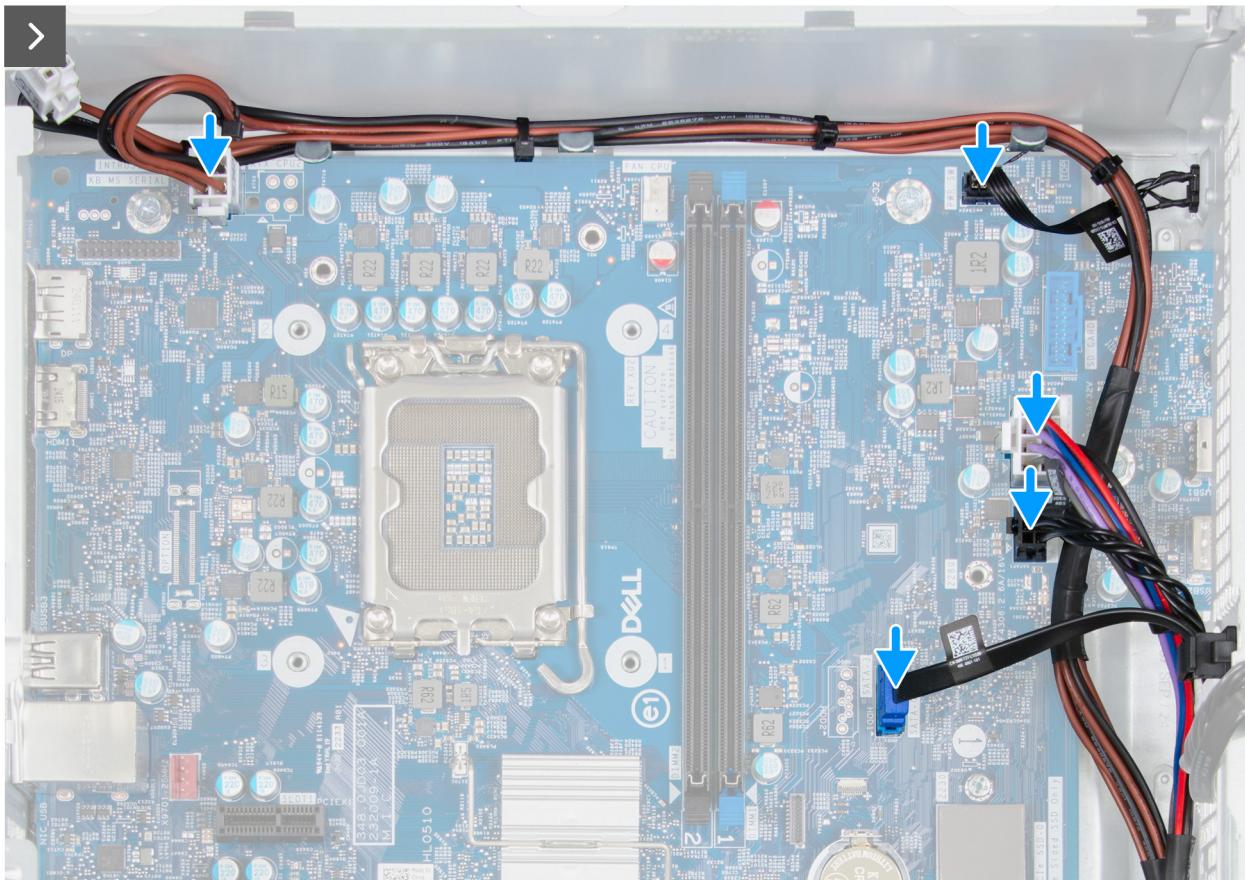

**Figure 62. Installing the system board**

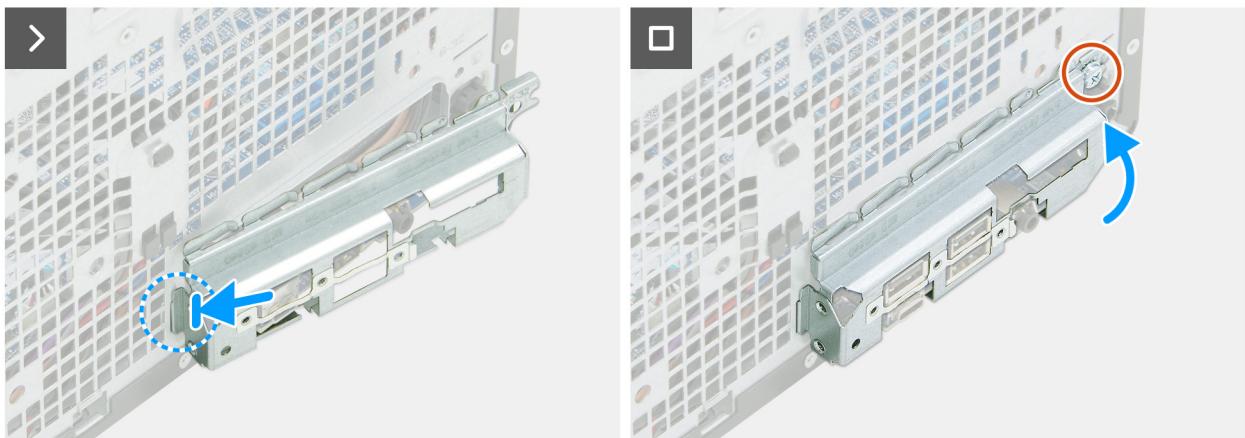

**Figure 63. Installing the system board**

## Steps

1. Slide the front I/O-ports on the system board into the front I/O-slots on the chassis.
2. Align the screw holes on the system board with the screw holes on the chassis.
3. Replace the six screws (6-32#) that secure the system board to the chassis.
4. Replace the solid-state drive screw mount (6-32#) that secures the system board to the chassis.
5. Connect the hard-drive data cable to its connector (SATA - 3) on the system board.
6. Connect the hard-drive power cable to its connector (SATA PWR) on the system board.
7. Connect the system-board power cable to its connector (ATX SYS) on the system board.
8. Connect the power-button cable to its connector (PWR SW) on the system board.

9. Route the processor-power cable through the routing guides on the chassis.
10. Connect the processor-power cable to its connectors (ATX CPU1) on the system board.
11. Place and align the slots on the front I/O-bracket to the I/O ports on the system board.
12. Align the screw hole on the front I/O-bracket to the screw hole on the chassis.
13. Replace the screw (6-32#) that secures the front I/O-bracket to the chassis.

#### **Next steps**

1. Install the [processor](#).
2. Install the [processor fan and heat-sink assembly](#).
3. Install the [serial-port module](#), if applicable.
4. Install the [fan](#).
5. Install the [drive bay](#), if applicable.
6. Install the [graphics card](#).
7. Install the [wireless card](#).
8. Install the [M.2 2230 solid-state drive](#).
9. Install the [memory](#).
10. Install the [front cover](#).
11. Install the [coin-cell battery](#).
12. Install the [coin-cell battery cover](#).
13. Install the [left-side cover](#).
14. Follow the procedure in [After working inside your computer](#).

## Software

This chapter details the supported operating systems along with instructions on how to install the drivers.

### Operating system

Your Dell Pro Tower Essential QVT1260 supports the following operating systems:

- Windows 11 Home
- Windows 11 Pro
- Windows 11 Home National Education
- Windows 11 Pro National Education

### Drivers and downloads

When troubleshooting, downloading, or installing drivers, it is recommended that you read the Dell Knowledge Base article [Drivers and Downloads FAQs](#).

# BIOS Setup

 **CAUTION:** Certain changes can make your computer work incorrectly. Before you change the settings in BIOS Setup, it is recommended that you note down the original settings for future reference.

 **NOTE:** Depending on the computer and the installed devices, the options that are listed in this section may differ.

Use BIOS Setup for the following purposes:

- Get information about the hardware installed in your computer, such as the amount of RAM and the capacity of the storage device.
- Change the system configuration information.
- Set or change user-selectable options such as the user password, enabling or disabling base devices, and configuring hard drive settings.

## Entering BIOS Setup program

### About this task

Turn on (or restart) your computer and press F2 immediately.

## Navigation keys

 **NOTE:** For most of the BIOS Setup options, changes that you make are recorded but do not take effect until you restart the computer.

**Table 21. Navigation keys**

Keys	Navigation
Up arrow	Moves to the previous field.
Down arrow	Moves to the next field.
Enter	Selects a value in the selected field (if applicable) or follows the link in the field.
Spacebar	Expands or collapses a drop-down list, if applicable.
Tab	Moves to the next focus area.
Esc	Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restart the computer.

## One time boot menu

To access the **one time boot menu**, turn on your computer, and then press F2 immediately.

 **NOTE:** If your computer fails to enter the boot menu, restart the computer and press F2 immediately.

The one-time boot menu displays the devices that you can boot from, and also displays the option to start diagnostics. The boot menu options are:

- Removable Drive (if available)

- STXXXX Drive (if available)

**(i) NOTE:** XXX denotes the SATA drive number.

- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

**(i) NOTE:** Choosing **Diagnostics**, will display the **ePSA diagnostics** screen.

The **one time boot menu** also displays the option to access the System Setup screen.

## F12 One Time Boot menu

To enter the One Time Boot menu, turn on or restart your computer, and then press F12 immediately.

**(i) NOTE:** If you are unable to enter the One Time Boot menu, repeat the above action.

The One Time Boot menu displays the devices that you can boot from and also display the options to start diagnostics. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive (if available)

**(i) NOTE:** XXX denotes the SATA drive number.

- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

The One Time Boot menu screen also displays the option to access BIOS Setup.

## BIOS Setup options

**(i) NOTE:** Depending on your computer and its installed devices, the items that are listed in this section may or may not be displayed.

**Table 22. BIOS Setup options—Overview menu**

<b>Overview</b>	
Dell Pro Tower Essential QVT1260	
BIOS Version	Displays the BIOS version number.
Service Tag	Displays the Service Tag of the computer.
Asset Tag	Displays the Asset Tag of the computer.
Manufacture Date	Displays the manufacture date of the computer.
Ownership Date	Displays the ownership date of the computer.
Express Service Code	Displays the Express Service Code of the computer.
Ownership Tag	Displays the Ownership Tag of the computer.
<b>Processor Information</b>	
Processor Type	Displays the processor type.
Maximum Clock Speed	Displays the maximum processor clock speed.
Core Count	Displays the number of cores on the processor.

**Table 22. BIOS Setup options—Overview menu (continued)**

<b>Overview</b>	
Processor ID	Displays the processor identification code.
Processor L2 Cache	Displays the processor L2 cache size.
Processor L3 Cache	Displays the processor L3 cache size.
Microcode Version	Displays the microcode version.
Intel Hyper-Threading Capable	Displays whether the processor is Hyper-Threading (HT) capable.
Intel vPro Technology	Displays whether Intel vPro technology is used.
<b>Memory Information</b>	
Memory Installed	Displays the total memory installed on the computer.
Memory Available	Displays the total memory available on the computer.
Memory Speed	Displays the memory speed.
Memory Technology	Displays the technology that is used for the memory.
DIMM 1 Size	Displays the memory size of the memory installed in DIMM 1.
DIMM 2 Size	Displays the memory size of the memory installed in DIMM 2.
<b>Devices Information</b>	
Video Controller	Displays the type of video controller available on the computer.
Video Memory	Displays the video memory information of the computer.
Wi-Fi Device	Displays the wireless device information of the computer.
Native Resolution	Displays the native resolution of the computer.
Video BIOS Version	Displays the video BIOS version of the computer.
Audio Controller	Displays the audio controller information of the computer.
Bluetooth Device	Displays the Bluetooth device information of the computer.
LOM MAC Address	Displays the MAC address of the LOM.
Slot 1	Displays the card installed in PCIe slot 1.
Slot 2	Displays the card installed in PCIe slot 2.
Slot 3	Displays the card installed in PCIe slot 3.

**Table 23. BIOS Setup options—Boot Configuration menu**

<b>Boot Configuration</b>	
<b>Boot Sequence</b>	Displays the boot sequence and sets the order the BIOS searches for boot devices when finding an operating system to boot. Add, delete, or prioritize boot devices in the list for boot operation.
Enable PXE Boot Priority	When <b>Enabled</b> , if a PXE boot option is detected it will be added to the top of the <b>Boot Sequence</b> .  When set to <b>Forced</b> any PXE boot option will be on top of the <b>Boot Sequence</b> and any external PXE boot option(s) will have higher than any internal PXE boot option(s). OS installation will not change PXE boot option priority.
Extended IPV4 PXE Boot Timeout	Enter the Extended IPV4 PXE Boot Timeout value only if the IPV4 PXE boot fails with standard timeouts.
Force PXE On Next Boot	Click the checkbox to enable the Force PXE feature on the next boot.

**Table 23. BIOS Setup options—Boot Configuration menu (continued)**

<b>Boot Configuration</b>	
Secure Digital (SD) Card Boot	Click the checkbox to enable the Secure Digital (SD) Card Boot.
<b>Secure Boot</b>	Secure Boot is a method of guaranteeing the integrity of the boot path by performing additional validation of the operating system and PCI add-in cards. The computer stops booting to the operating system when a component is not authenticated during the boot process. Secure Boot can be enabled in BIOS setup or using management interfaces like Dell Command Configure, but can only be disabled from BIOS setup.
Enable Secure Boot	Enables the computer to boot using only validated boot software. By default, the <b>Enable Secure Boot</b> option is enabled. For additional security, Dell Technologies recommends keeping the <b>Secure Boot</b> option enabled to ensure that the UEFI firmware validates the operating system during the boot process. <b>NOTE:</b> For Secure Boot to be enabled, the computer is required to be in UEFI boot mode and the Enable Legacy Option ROMs option is required to be turned off.
Secure Boot Mode	Enables or disables the Secure Boot operation mode. By default, the <b>Deployed Mode</b> is selected. <b>NOTE:</b> <b>Deployed Mode</b> should be selected for normal operation of Secure Boot.
<b>Expert Key Management</b>	Enables or disables the ability to modify the keys in the PK, KEK, db, and dbx security key databases to be modified.
Enable Custom Mode	By default, the <b>Enable Custom Mode</b> option is disabled.
Custom Mode Key Management	Selects the custom values for expert key management. By default, the <b>PK</b> option is selected.

**Table 24. BIOS Setup options—Integrated Devices menu**

<b>Integrated Devices</b>	
<b>Date/Time</b>	
Date	Sets the computer date in MM/DD/YYYY format. Changes to the date format take effect immediately.
Time	Sets the computer time in HH/MM/SS 24-hour format. You can switch between a 12-hour and 24-hour clock. Changes to the time format take effect immediately.
<b>Audio</b>	
Enable Audio	Enables all integrated audio controller. By default, all the options are enabled.
Enable Microphone	Enables the microphone. By default, the <b>Enable Microphone</b> option is enabled. <b>NOTE:</b> Depending on the configuration ordered, the microphone setup option may not be available.
<b>Serial Port</b>	Set the serial port address. You can avoid resource conflicts between devices by disabling or remapping the address of the port. <b>NOTE:</b> The system may allocate resources even if it is set to <b>Disabled</b> .

**Table 24. BIOS Setup options—Integrated Devices menu (continued)**

<b>Integrated Devices</b>	
<b>USB Configuration</b>	
Enable Front USB Ports	Enables the front external USB ports. By default, the <b>Enable Front External USB Ports</b> option is enabled.
Enable Rear USB Ports	Enables the rear external USB ports. By default, the <b>Enable Rear External USB Ports</b> option is enabled.
Enable USB Boot Support	Enables booting from USB mass storage devices that are connected to external USB ports. By default, the <b>Enable USB Boot Support</b> option is enabled.
Front USB configuration	Click each checkbox to enable each individual USB port option.
Rear USB configuration	Click each checkbox to enable each individual USB port option.

**Table 25. BIOS Setup options—Storage menu**

<b>Storage</b>	
<b>SATA/NVMe Operation</b>	
SATA/NVMe Operation	Sets the operating mode of the integrated SATA hard drive controller. By default, the <b>AHCI/NVMe</b> option is selected. The storage device is configured for AHCI/NVMe mode.
<b>Storage Interface</b>	
Port Enablement	Select onboard drives to enable. By default, all storage options are enabled.
<b>SMART Reporting</b>	
Enable SMART reporting	Enables Self-Monitoring Analysis and Reporting Technology to enable the BIOS to receive analytical information from integrated storage devices and send notifications during startup about storage device errors and possible future failure of the storage device.
<b>Drive Information</b>	
<b>Enable MediaCard</b>	Turn on or off all media cards, or enable or disable the media card in read-only state. By default, Secure Digital (SD) Card is selected.

**Table 26. BIOS Setup options—Display menu**

<b>Display</b>	
Primary Display	Determines which video controller will become the primary display when there are multiple controllers available. When a specific device is selected display output is only available from ports located on that selected device.
Full Screen Logo	This option will display a full screen logo if your image matches the screen resolution.

**Table 27. BIOS Setup options—Connection menu**

<b>Connection</b>	
<b>Network Controller Configuration</b>	
Integrated NIC	Controls the on-board LAN controller.

**Table 27. BIOS Setup options—Connection menu (continued)**

Connection	
<b>Wireless Device Enable</b>	
WLAN	Enables or disables the internal WLAN device. By default, the <b>WLAN</b> option enabled.
Bluetooth	Enables or disables the internal Bluetooth device. By default, the <b>Bluetooth</b> option enabled.
<b>Enable UEFI Network Stack</b>	Enables or disables the UEFI Network Stack and controls the onboard LAN Controller. By default, the <b>Enable UEFI Network Stack</b> option is enabled.
<b>HTTP(s) Boot Feature</b>	
HTTP(s) Boot	Enables or disables HTTP(s) Boot Feature. Default: ON
HTTP(s) Boot Modes	This platform has HTTP(s) Boot capabilities. When HTTP(s) Boot is enabled or <b>ON</b> the following boot modes are available. <b>Auto Mode:</b> HTTP(s) Boot automatically extracts Boot URL from the Dynamic Host Configuration Protocol(DHCP) <b>Manual Mode:</b> HTTP(s) Boot reads Boot URL provided by the user. Provisioning of the Certificate is required to connect to HTTP Boot server. <b>Upload:</b> Upload a new Certificate. <b>Delete:</b> Delete the existing Certificate.

**Table 28. BIOS Setup options—Power menu**

Power	
<b>Thermal Management</b>	
AC Recovery	Enables or disables cooling of fan and manages processor heat to adjust the computer performance, noise, and temperature. By default, the <b>Optimized</b> option is selected. Standard setting for balanced performance, noise, and temperature.
<b>USB Wake Support</b>	
Enable USB Wake Support	When enabled, a USB device such as a mouse or keyboard can wake the computer from Standby, Hibernate, and Power Off. By default, the <b>Enable USB Wake Support</b> option is enabled.
<b>AC Behavior</b>	
ASPM	Set the behavior of your computer when power is restored after an unexpected loss of power. Configures the Active State Power Management (ASPM) level. Default: Auto. There is handshaking between the device and PCI Express hub to determine the best ASPM mode supported by the device.
<b>Block Sleep</b>	
	Enables or disables the computer from entering Sleep (S3) mode in the operating system. By default, the <b>Block Sleep</b> option is disabled.

**Table 28. BIOS Setup options—Power menu (continued)**

Power	
	<p><b>NOTE:</b> When enabled, the computer does not go to Sleep, Intel Rapid Start is disabled automatically, and the operating system power option is blank if it was set to Sleep.</p>
<b>Deep Sleep Control</b>	<p>Determines how aggressive the computer is at conserving power while in Shutdown or Hibernate state.</p> <p>This feature must be disabled to enable <b>Wake From USB keyboard and mouse</b> to work in the Shutdown or Hibernate state.</p>

**Table 29. BIOS Setup options—Security menu**

Security	
<b>Trusted Platform Module (TPM) 2.0 security</b>	<p>The Trusted Platform Module (TPM) provides various cryptographic services which serve as the cornerstone for many platform security technologies. Trusted Platform Module (TPM) is a security device that stores computer-generated keys for encryption and features such as BitLocker, Virtual Secure Mode, remote Attestation.</p> <p>By default, the <b>Trusted Platform Module (TPM)</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping <b>Trusted Platform Module (TPM)</b> enabled to allow these security technologies to fully function.</p> <p><b>NOTE:</b> The options that are listed apply to computers with a discrete <b>Trusted Platform Module (TPM)</b> chip.</p>
TPM 2.0 Security On	<p>Allows you to enable or disable TPM.</p> <p>By default, the <b>TPM On</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping <b>TPM On</b> enabled to allow these security technologies to fully function.</p>
Attestation Enable	<p>The <b>Attestation Enable</b> option controls the endorsement hierarchy of TPM. Disabling the <b>Attestation Enable</b> option prevents TPM from being used to digitally sign certificates.</p> <p>By default, the <b>Attestation Enable</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Attestation Enable</b> option enabled.</p> <p><b>NOTE:</b> When disabled, this feature may cause compatibility issues or loss of functionality in some operating systems.</p>
Key Storage Enable	<p>The <b>Key Storage Enable</b> option controls the storage hierarchy of TPM, which is used to store digital keys. Disabling the <b>Key Storage Enable</b> option restricts the ability of TPM to store owner's data.</p> <p>By default, the <b>Key Storage Enable</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Key Storage Enable</b> option enabled.</p> <p><b>NOTE:</b> When disabled, this feature may cause compatibility issues or loss of functionality in some operating systems.</p>
Clear	<p>When enabled, the <b>Clear</b> option clears information that is stored in the TPM after exiting the computer's BIOS. This option returns to the disabled state when the computer restarts.</p> <p>By default, the <b>Clear</b> option is disabled.</p>

**Table 29. BIOS Setup options—Security menu (continued)**

<b>Security</b>	
	Dell Technologies recommends enabling the <b>Clear</b> option only when TPM data is required to be cleared.
Physical Presence Interface (PPI) Bypass for Clear Commands	By default, the <b>PPI Bypass for Clear Commands</b> option is disabled. For additional security, Dell Technologies recommends keeping the <b>PPI Bypass for Clear Commands</b> option disabled.
<b>Data Wipe on Next Boot</b>	
Start Data Wipe	<p>Data Wipe is a secure wipe operation that deletes information from a storage device.</p> <p><b>CAUTION:</b> The secure Data Wipe operation deletes information in a way that it cannot be reconstructed.</p> <p>Commands such as delete and format in the operating system may remove files from showing up in the file system. However, they can be reconstructed through forensic means as they are still represented on the physical media. Data Wipe prevents this reconstruction and the data can no longer be recovered.</p> <p>When enabled, the data wipe option provides prompts to wipe any storage devices that are connected to the computer on the next boot.</p> <p>By default, the <b>Start Data Wipe</b> option is disabled.</p>
Absolute	<p>Absolute Software provides various cyber security solutions, some requiring software preloaded on Dell computers and integrated into the BIOS. To use these features, you must enable the Absolute BIOS setting and contact Absolute for configuration and activation.</p> <p>By default, the <b>Absolute</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Absolute</b> option enabled.</p> <p><b>NOTE:</b> When the Absolute features are activated, the Absolute integration cannot be disabled from the BIOS setup screen.</p>
UEFI Boot Path Security	<p>Enables or disables the computer to prompt the user to enter the Administrator password (if set) when booting to a UEFI boot path device from the F12 boot menu.</p> <p>By default, the <b>Always Except Internal HDD</b> option is enabled.</p>
<b>Authenticated BIOS Interface</b>	
Enable Authenticated BIOS Interface	<p>Allows the administrator to control access to BIOS configuration through an authenticated interface. When enabled, this option ensures that BIOS configuration changes are secured by authentication.</p> <p>By default, the <b>Enable Authenticated BIOS Interface</b> option is disabled.</p>
Clear Certificate Store	<p>Allows the administrator to delete all certificates stored in the Key Management System (KMS). When enabled, this option will remove all certificates, which may be necessary for security purposes or if the certificates have expired or are no longer valid.</p> <p>By default, the <b>Clear Certificate Store</b> option is disabled.</p>
Legacy Manageability Interface Access	Allows the platform administrator to control access via the Legacy Manageability Interface.
<b>Firmware Device Tamper Detection</b>	
	Allows you to control the firmware device tamper detection feature. This feature notifies the user when the firmware device is tampered. When enabled, a screen warning messages are displayed on the computer and a tamper detection event is logged in the BIOS Events log. The computer fails to reboot until the event is cleared.

**Table 29. BIOS Setup options—Security menu (continued)**

Security
<p>By default, the <b>Firmware Device Tamper Detection</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Firmware Device Tamper Detection</b> option enabled.</p>

**Table 30. BIOS Setup options—Passwords menu**

Passwords
<p><b>Admin Password</b></p> <p>The Administrator Password prevents unauthorized access to the BIOS Setup options. Once the administrator password is set, the BIOS setup options can only be modified after providing the correct password.</p> <p>The following rules and dependencies apply to the Administrator Password -</p> <ul style="list-style-type: none"><li>• The administrator password cannot be set if computer and/or internal storage passwords are previously set.</li><li>• The administrator password can be used in place of the computer and/or internal storage passwords.</li><li>• When set, the administrator password must be provided during a firmware update.</li><li>• Clearing the administrator password also clears the computer password (if set).</li></ul> <p>Dell Technologies recommends using an administrator password to prevent unauthorized changes to BIOS setup options.</p>
<p><b>System Password</b></p> <p>The System Password prevents the computer from booting to an operating system without entering the correct password.</p> <p>The following rules and dependencies apply when the System Password is used -</p> <ul style="list-style-type: none"><li>• The computer shuts down when idle for approximately 10 minutes at the computer password prompt.</li><li>• The computer shuts down after three incorrect attempts to enter the computer password.</li><li>• The computer shuts down when the <b>Esc</b> key is pressed at the System Password prompt.</li><li>• The computer password is not prompted when the computer resumes from standby mode.</li></ul> <p>Dell Technologies recommends using the computer password in situations where it is likely that a computer may be lost or stolen.</p>
<p><b>Storage device Password</b></p> <p><b>NOTE:</b> The device shown here will vary depending on the storage devices installed on your computer.</p> <p>The storage device password can be set to prevent unauthorized access of the data stored on the device. The computer prompts for the storage device password during boot in order to unlock the drive. A password-secured storage device stays locked even when removed from the computer or placed into another computer. It prevents an attacker from accessing data on the device without authorization.</p> <p>The following rules and dependencies apply when the Storage Device Password is used -</p> <ul style="list-style-type: none"><li>• The storage device password option cannot be accessed when the device is disabled in the BIOS setup.</li><li>• The computer shuts down when idle for approximately 10 minutes at the storage device password prompt.</li><li>• The computer shuts down after three incorrect attempts to enter the storage device password and treats the device as not available.</li><li>• The storage device does not accept password unlock attempts after five incorrect attempts to enter the hard drive password from the BIOS Setup. The storage device password must be reset for the new password unlock attempts.</li></ul>

**Table 30. BIOS Setup options—Passwords menu (continued)**

Passwords	<ul style="list-style-type: none"> <li>The computer treats the storage device as not available when the <b>Esc</b> key is pressed at the password prompt.</li> <li>The storage device password is not prompted when the computer resumes from standby mode. When it is unlocked by the user before the computer goes into standby mode, it remains unlocked after the computer resumes from standby mode.</li> <li>If the computer and storage device passwords are set to the same value, the device unlocks after the correct computer password is entered.</li> </ul> <p>Dell Technologies recommends using a storage device password to protect unauthorized data access.</p>
<b>Password Configuration</b>	<p><b>Upper Case Letter</b> When enabled, this field reinforces password must contain at least one upper case letter.</p> <p><b>Lower Case Letter</b> When enabled, this field reinforces password must contain at least one lower case letter.</p> <p><b>Digit</b> When enabled, this field reinforces password must contain at least one digit number.</p> <p><b>Special Character</b> When enabled, this field reinforces password must contain at least one special character.</p>
<b>Password Bypass</b>	<p>The <b>Password Bypass</b> option allows the computer to reboot from the operating system without entering the computer or hard drive password. If the computer has already booted to the operating system, it is presumed that the user has already entered the correct computer or hard drive password.</p> <p><b>NOTE:</b> This option does not remove the requirement to enter the password after shutting down.</p> <p>By default, the <b>Password Bypass</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Password Bypass</b> option enabled.</p>
<b>Password Changes</b>	<p>Allow Non-Admin Password Changes</p> <p>The <b>Allow Non-Admin Password Changes</b> option in BIOS setup allows an end user to set or change the computer or hard drive passwords without entering the administrator password. This gives an administrator control over the BIOS settings but enables an end user to provide their own password.</p> <p>By default, the <b>Allow Non-Admin Password Changes</b> option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Allow Non-Admin Password Changes</b> option disabled.</p> <p>Non-Admin Setup Changes</p> <p>The <b>Non-Admin Setup Changes</b> option allows an end user to configure the wireless devices without requiring the administrator password.</p> <p>By default, the <b>Non-Admin Setup Changes</b> option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Non-Admin Setup Changes</b> option disabled.</p> <p><b>Admin Setup Lockout</b></p> <p>The <b>Admin Setup Lockout</b> option prevents an end user from even viewing the BIOS setup configuration without first entering the administrator password (if set).</p> <p>By default, the <b>Admin Setup Lockout</b> option is disabled.</p>

**Table 30. BIOS Setup options—Passwords menu (continued)**

Passwords	For additional security, Dell Technologies recommends keeping the <b>Admin Setup Lockout</b> option disabled.
<b>Recovery Password</b>	The Recovery Password can be used when a system owner forgets the administrator, system, or hard drive password. You can get an unlock code from Dell Support over the phone after verifying ownership details. The unlock code overrides and removes the existing password. <b>NOTE:</b> When a hard drive password is overridden using this method, the data on the hard drive is erased if secure erase was enabled when setting the password.
<b>Master Password Lockout</b>	Enable Master Password Lockout The Master Password Lockout setting allows you to disable the Recovery Password feature. If the computer, administrator, or hard drive password is forgotten, the computer becomes unusable. <b>NOTE:</b> When the owner password is set, the Master Password Lockout option is not available. <b>NOTE:</b> When an internal hard drive password is set, it must first be cleared before Master Password Lockout can be changed. By default, the <b>Enable Master Password Lockout</b> option is disabled. Dell does not recommend enabling the <b>Master Password Lockout</b> unless you have implemented your own password recovery computer.
Allow Non-Admin PSID Revert	The <b>Allow Non-Admin PSID Revert</b> option allows a user to clear the hard drive password without entering the BIOS Admin Password. When an Admin Password is set, the ability to enter the PSID is protected by requiring authentication with the Admin Password. If this option is enabled, any user can clear the drive without entering the Admin Password. By default, the <b>Enable Allow Non-Admin PSID Revert</b> option is disabled.

**Table 31. BIOS Setup options—Update, Recovery menu**

Update, Recovery	
<b>BIOS Recovery from Hard Drive</b>	Enables or disables the user to recover from certain corrupted BIOS conditions from a recovery file on the user primary hard drive or an external USB key. By default, the <b>BIOS Recovery from Hard Drive</b> option is enabled. <b>NOTE:</b> BIOS Recovery from Hard Drive is not available for self-encrypting drives (SED). <b>NOTE:</b> BIOS recovery is designed to fix the main BIOS block and cannot work if the Boot Block is damaged. In addition, this feature cannot work in the event of EC corruption, ME corruption, or a hardware issue. The recovery image must exist on an unencrypted partition on the drive.
<b>BIOS Downgrade</b>	Allow BIOS Downgrade Controls flashing of the computer firmware to previous revisions. By default, the <b>Allow BIOS Downgrade</b> option is enabled.
<b>SupportAssist OS Recovery</b>	Enables or disables the boot flow for SupportAssist OS Recovery tool in the event of certain computer errors. By default, the <b>SupportAssist OS Recovery</b> option is enabled.
<b>BIOSConnect</b>	Enables or disables cloud Service operating system recovery if the main operating system fails to boot with the number of failures equal to or greater than the

**Table 31. BIOS Setup options—Update, Recovery menu (continued)**

Update, Recovery	value specified by the Auto OS Recovery Threshold setup option and local Service operating system does not boot or is not installed. By default, the <b>BIOSConnect</b> option is enabled.
Dell Auto OS Recovery Threshold	Allows you to control the automatic boot flow for SupportAssist System Resolution Console and for Dell OS Recovery Tool. By default, the <b>Dell Auto OS Recovery Threshold</b> value is set to 2.

**Table 32. BIOS Setup options—System Management menu**

System Management	
<b>Service Tag</b>	Displays the Service Tag of the computer.
<b>Asset Tag</b>	Creates a computer Asset Tag that can be used by an IT administrator to uniquely identify a particular computer. <b>NOTE:</b> Once set in BIOS, the Asset Tag cannot be changed.
<b>Wake on LAN</b>	Enables or disables the computer to turn on by a special LAN signal. By default, the <b>Wake on LAN</b> option is disabled.
<b>Auto On Time</b>	Enable to set the computer to turn on automatically every day or on a preselected date and time. This option can be configured only if the Auto On Time is set to Everyday, Weekdays, or Selected Days. By default, the <b>Auto On Time</b> option is disabled.
<b>SERR Messages</b>	Enable SERR Messages.
<b>First Power On Date</b>	Set the Ownership date.
<b>Diagnostics</b>	
OS Agent Requests	Enables Dell OS Agents to set schedule on-board diagnostics on a subsequent boot.
<b>Power-on-Self-Test Automatic Recovery</b>	Enables Power-on-Self-Test Automatic Recovery to enable BIOS recovery if the computer becomes unresponsive before completing the BIOS Power-on-Self-Test.

**Table 33. BIOS Setup options—Keyboard menu**

Keyboard	
<b>Enable Numlock LED</b>	Enables or disables Numlock LED when the computer boots.

**Table 34. BIOS Setup options—Pre-boot Behavior menu**

Preboot Behavior	
<b>Warnings and Errors</b>	Enables or disables the action to be taken when a warning or error is encountered. By default, the <b>Prompt on Warnings and Errors</b> option is selected. <b>NOTE:</b> Errors deemed critical to the operation of the computer hardware stop the functioning of the computer.
<b>Extend BIOS POST Time</b>	Sets the BIOS POST (Power-On Self-Test) load time. By default, the <b>0 seconds</b> option is selected.

**Table 35. BIOS Setup options—Virtualization menu**

<b>Virtualization Support</b>	
<b>DMA Protection</b>	
Enable Pre-Boot DMA Support	Allows you to control the Pre-Boot DMA protection for both internal and external ports. This option does not directly enable DMA protection in the operating system. <b>NOTE:</b> This option is not available when the virtualization setting for IOMMU is disabled (VT-d/AMD Vi). By default, the <b>Enable Pre-Boot DMA Support</b> option is enabled. For additional security, Dell Technologies recommends keeping the <b>Enable Pre-Boot DMA Support</b> option enabled. <b>NOTE:</b> This option is provided only for compatibility purposes, since some older hardware is not DMA capable.
Enable OS Kernel DMA Support	Allows you to control the Kernel DMA protection for both internal and external ports. This option does not directly enable DMA protection in the operating system. For operating systems that support DMA protection, this setting indicates to the operating system that the BIOS supports the feature. <b>NOTE:</b> This option is not available when the virtualization setting for IOMMU is disabled (VT-d/AMD Vi). By default, the <b>Enable OS Kernel DMA Support</b> option is enabled. <b>NOTE:</b> This option is provided only for compatibility purposes, since some older hardware is not DMA capable.
Internal Port DMA Compatibility Mode	When enabled, the BIOS will notify the OS that the Internal ports are not DMA capable.

**Table 36. BIOS Setup options—Performance menu**

<b>Performance</b>	
<b>Intel SpeedStep</b>	
Enable Intel SpeedStep Technology	Enables the computer to dynamically adjust processor voltage and core frequency, decreasing average power consumption and heat production. By default, the <b>Enable Intel SpeedStep Technology</b> option is enabled. <b>NOTE:</b> To view this option, enable <b>Service</b> options.
<b>PCIeResizable Base Address Register (BAR)</b>	
Enable PCIe Resizable Base Address Register (BAR)	Enables or disables PCIe Resizable Base Address Register (BAR) support.

**Table 37. BIOS Setup options—System Logs menu**

<b>System Logs</b>	
<b>BIOS Event Log</b>	
Clear BIOS Event Log	Allows you to select option to keep or clear BIOS events logs. By default, the <b>Keep Log</b> option is selected.
<b>Power Event Log</b>	
Clear Power Event Log	Allows you to select option to keep or clear power events logs. By default, the <b>Keep Log</b> option is selected.

# Updating the BIOS

## Updating the BIOS in Windows

### About this task

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the BitLocker key is not recognized the next time you reboot the computer. You will then be prompted to enter the recovery key to proceed, and the computer displays a prompt for the recovery key on each reboot. Failure to provide the recovery key can result in data loss or an operating system reinstall. For more information, refer [Updating the BIOS on Dell systems with BitLocker enabled](#).

 **CAUTION:** Do not turn off the computer during the BIOS flash update process. The computer may not boot if you turn off your computer.

### Steps

1. Go to [Dell Support Site](#).
2. Go to **Identify your product or ask support**. In the box, enter the product identifier, model, service request or describe what you are looking for, and then click **Search**.

 **NOTE:** If you do not have the Service Tag, click **Detect This PC**. The site automatically detects your device, and you can then click **Explore Product Support** to go to the support page for your device. You can also use the product ID or manually browse for your computer model.
3. Click **Drivers & Downloads**.
4. Select the operating system installed on your computer.
5. In the **Category** drop-down list, select **BIOS**.
6. Select the latest version of BIOS, and click **Download** to download the BIOS file for your computer.
7. After the download is complete, navigate to the folder where the BIOS update file has been saved.
8. Double-click the BIOS update file and follow the on-screen instructions.  
For more information, search [Dell Support Site](#).

## Updating the BIOS in Linux and Ubuntu

To update the system BIOS on a computer that is installed with Linux or Ubuntu, see [How to Update the Dell BIOS in the Ubuntu or Linux Environment](#) at [Dell Support Site](#).

## Updating the BIOS using the USB drive in Windows

### About this task

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the BitLocker key is not recognized the next time you reboot the computer. You will then be prompted to enter the recovery key to proceed, and the computer displays a prompt for the recovery key on each reboot. Failure to provide the recovery key can result in data loss or an operating system reinstall. For more information, refer [Updating the BIOS on Dell systems with BitLocker enabled](#).

 **CAUTION:** Do not turn off the computer during the BIOS flash update process. The computer may not boot if you turn off your computer.

### Steps

1. Go to [Dell Support Site](#).
2. Go to **Identify your product or ask support**. In the box, enter the product identifier, model, service request or describe what you are looking for, and then click **Search**.

**i** **NOTE:** If you do not have the Service Tag, click **Detect This PC**. The site automatically detects your device, and you can then click **Explore Product Support** to go to the support page for your device. You can also use the product ID or manually browse for your computer model.

3. Click **Drivers & Downloads**.
4. Select the operating system installed on your computer.
5. In the **Category** drop-down list, select **BIOS**.
6. Select the latest version of BIOS, and click **Download** to download the BIOS file for your computer.
7. Create a bootable USB drive. For more information, search [Dell Support Site](#).
8. Copy the BIOS setup program file to the bootable USB drive.
9. Connect the bootable USB drive to the computer that needs the BIOS update.
10. Restart the computer and press **F12**.
11. Select the USB drive from the **One Time Boot Menu**.
12. Type the BIOS setup program filename and press **Enter**.  
The **BIOS Update Utility** appears.
13. Follow the on-screen instructions to complete the BIOS update.

## Updating the BIOS from the One-Time boot menu

To update the BIOS from the One-Time boot menu, see [Updating the BIOS from the One Time Boot Menu](#) at [Dell Support Site](#)..

## System and setup password

**⚠ CAUTION:** The password features provide a basic level of security for the data on your computer.

**⚠ CAUTION:** Ensure that your computer is locked when it is not in use. Anyone can access the data that is stored on your computer, when left unattended.

**Table 38. System and setup password**

Password type	Description
System password	Password that you must enter to boot to your operating system.
Setup password	Password that you must enter to access and change the BIOS settings of your computer.

You can create a system password and a setup password to secure your computer.

**i** **NOTE:** The System and setup password feature is disabled by default.

## Assigning a System Setup password

### Prerequisites

You can assign a new System or Admin Password only when the status is set to **Not Set**. To enter BIOS System Setup, press F2 immediately after a power-on or reboot.

### Steps

1. To enter the **System Setup**, press **F2** immediately after a power-on or reboot.
2. In the **System BIOS** or **System Setup** screen, select **Security** and press Enter.  
The **Security** screen is displayed.
3. Select **System/Admin Password** and create a password in the **Enter the new password** field.  
Use the following guidelines to create the system password:

- Password can be up to 32 characters.
- Password must contain at least one special character: "(! # \$ % & ' \* + , - . / ; < = > ? @ [ \ ] ^ \_ ` { | } )"
- The password can contain numbers from 0 to 9.
- The password can contain alphabets A to Z and a to z.

4. Type the system password that you entered earlier in the **Confirm new password** field and click **OK**.
5. Press Y to save the changes.  
The computer restarts.

## Deleting or changing an existing system password or setup password

### Prerequisites

Ensure that the **Password Status** is Unlocked in the System Setup before attempting to delete or change the existing system password and/or setup password. You cannot delete or change an existing system password or setup password if the **Password Status** is Locked. To enter the System Setup, press F2 immediately after a power-on or reboot.

### Steps

1. To enter the **System Setup**, press **F2** immediately after a power-on or reboot.
2. In the **System BIOS** or **System Setup** screen, select **System Security** and press Enter.  
The **System Security** screen is displayed.
3. In the **System Security** screen, verify that the **Password Status** is Unlocked.
4. Select **System Password**. Update or delete the existing system password, and press Enter or Tab.
5. Select **Setup Password**. Update or delete the existing setup password, and press Enter or Tab.

 **NOTE:** If you change the system password and/or setup password, reenter the new password when prompted. If you delete the system password and/or setup password, confirm the deletion when prompted.

6. Press Esc. A message prompts you to save the changes.
7. Press Y to save the changes and exit from **System Setup**.  
The computer restarts.

## Clearing CMOS settings

### About this task

 **CAUTION:** Clearing CMOS settings resets the BIOS settings on your computer.

### Steps

1. Remove the [left-side cover](#).
2. Remove the [coin-cell battery cover](#).
3. Remove the [coin-cell battery](#).
4. Wait for one minute.
5. Install the [coin-cell battery](#).
6. Install the [coin-cell battery cover](#).
7. Install the [left-side cover](#).

## Clearing system and setup passwords

### About this task

To clear the system or setup passwords, contact Dell technical support as described at [Contact Support](#).

 **NOTE:** For information about how to reset Windows or application passwords, see the documentation accompanying Windows or your application.

## Troubleshooting

### Dell SupportAssist Pre-boot System Performance Check diagnostics

#### About this task

SupportAssist diagnostics (also known as system diagnostics) performs a complete check of your hardware. The Dell SupportAssist Pre-boot System Performance Check diagnostics is embedded within the BIOS and launched by the BIOS internally. The embedded system diagnostics provides options for particular devices or device groups allowing you to:

- Run tests automatically or in an interactive mode.
- Repeat the tests.
- Display or save test results.
- Run thorough tests to add more options and obtain details about any failed devices.
- View status messages that inform you when the tests are completed successfully.
- View error messages that inform you of problems encountered during testing.

**(i) NOTE:** Some tests for specific devices require user interaction. Always ensure that you are present at the computer when the diagnostic tests are performed.

For more information, see [How to Run Dell Preboot Diagnostics and Hardware Tests on Your Dell Computer](#).

### Running the SupportAssist Pre-Boot System Performance Check

#### Steps

1. Turn on your computer.
2. As the computer boots, press the F12 key.
3. On the boot menu screen, select **Diagnostics**.  
The diagnostic quick test begins.  
**(i) NOTE:** For more information about running the SupportAssist Pre-Boot System Performance Check on a specific device, see [Dell Support Site](#).
4. If there are any issues, error codes are displayed.  
Note the error code and validation number and contact Dell.

### Power-Supply Unit Built-in Self-Test

Built-in Self-Test (BIST) helps determine if the power-supply unit is working. To run self-test diagnostics on the power-supply unit of a desktop or all-in-one computer, search in the Knowledge Base Resource at [Dell Support Site](#).

### System-diagnostic lights

This section lists the system-diagnostic lights of your Dell Pro Tower Essential QVT1260.

The following table shows different Service LED blinking patterns and associated problems. The diagnostic light codes consist of a two-digit number, and the digits are separated by a comma. The number stands for a blinking pattern; the first digit shows the number of blinks in amber color, and the second digit shows the number of blinks in white color. The Service LED blinks in the following manner:

- The Service LED blinks the number of times equal to the value of the first digit and turns off with a short pause.
- After that, the Service LED blinks the number of times equal to the value of the second digit.

- The Service LED turns off again with a longer pause.
- After the second pause, the blinking pattern will be repeated.

**Table 39. Diagnostic light codes**

Diagnostic light codes (Amber, White)	Problem description
1,1	TPM Detection Failure
1,2	Unrecoverable SPI Flash Failure
1,5	EC unable to program i-Fuse
1,6	Generic catch-all for ungraceful EC code flow errors
1,7	Non-RPMC Flash on Boot Guard fused system
1,8	Chipset “Catastrophic Error” signal has tripped
2,1	CPU configuration or CPU failure
2,2	System board: BIOS or Read-Only Memory (ROM) failure
2,3	No memory or Random-Access Memory (RAM) detected
2,4	Memory or Random-Access Memory (RAM) failure
2,5	Invalid memory installed
2,6	System board/Chipset Error
2,7	LCD failure SBIOS message
2,8	Display power-rail failure on the system board
3,1	CMOS battery failure
3,2	PCI of Video card/chip failure
3,3	Recovery image not found
3,4	Recovery image found but invalid
3,5	EC power-rail error
3,6	Flash corruption detected by SBIOS
3,7	Timeout waiting on ME to reply to HECI message
4,1	Memory DIMM power rail failure
4,2	CPU Power cable connection issue

## Recovering the operating system

When your computer is unable to boot to the operating system even after repeated attempts, it automatically starts Dell SupportAssist OS Recovery.

Dell SupportAssist OS Recovery is a stand-alone tool that is preinstalled on Dell computers running the Windows operating system. It consists of tools to diagnose and troubleshoot issues that may occur before your computer boots to the operating system. It enables you to diagnose hardware issues, repair your computer, back up your files, and restore your computer to its factory state.

You can also download it from the Dell Support website to troubleshoot and fix your computer when it fails to boot into the primary operating system due to software or hardware failures.

For more information about the Dell SupportAssist OS Recovery, see *Dell SupportAssist OS Recovery User's Guide at Serviceability Tools at the Dell Support Site*. Click **SupportAssist** and then click **SupportAssist OS Recovery**.

**i** **NOTE:** Windows 11 IoT Enterprise LTSC 2024 and Dell ThinOS 10 do not support Dell SupportAssist. For more information about recovering ThinOS 10, see [Recovery mode using R-Key](#).

## Real-Time Clock—RTC reset

The Real-Time Clock (RTC) reset function allows you or the service technician to recover the recently launched model Dell Pro and Pro Max computers from **No POST/No Boot/No Power** situations. You can initiate the RTC reset on the computer from a power-off state only if it is connected to AC power. Press and hold the power button for 25 seconds. The system RTC reset occurs after you release the power button.

**i** **NOTE:** If AC power is disconnected from the computer during the process or the power button is held longer than 40 seconds, the RTC reset process gets aborted.

The RTC reset will reset the BIOS to its default settings, disable Intel vPro, and reset the computer date and time. The following items are not affected by the RTC reset:

- Service Tag
- Asset Tag
- Ownership Tag
- Admin Password
- System Password
- Storage Password
- Key Databases
- System Logs

**i** **NOTE:** The IT administrator's vPro account and password on the computer will be unprovisioned. The computer must go through the setup and configuration process again to reconnect it to the vPro server.

The below items may or may not be reset based on your custom BIOS setting selections:

- Boot List
- Enable Legacy Option ROMs
- Secure Boot Enable
- Allow BIOS Downgrade

## Backup media and recovery options

It is recommended to create a recovery drive to troubleshoot and fix problems that may occur with Windows. Dell provides multiple options for recovering the Windows operating system on your Dell computer. For more information, see [Dell Windows Backup Media and Recovery Options](#).

## Network power cycle

### About this task

If your computer is unable to access the Internet due to network connectivity issues, reset your network devices by performing the following steps:

### Steps

1. Turn off the computer.
2. Turn off the modem.  
**i** **NOTE:** Some Internet service providers (ISPs) provide a modem and router combo device.
3. Turn off the wireless router.
4. Wait for 30 seconds.
5. Turn on the wireless router.
6. Turn on the modem.
7. Turn on the computer.

# Getting help and contacting Dell

## Self-help resources

You can get information and help on Dell products and services using these self-help resources:

**Table 40. Self-help resources**

Self-help resources	Resource location
Information about Dell products and services	<a href="#">Dell Site</a>
Contact Support	In Windows search, type <b>Contact Support</b> , and press <b>Enter</b> .
Online help for operating system	<a href="#">Windows Support Site</a> <a href="#">Linux Support Site</a>
Access top solutions, diagnostics, drivers and downloads, and learn more about your computer through videos, manuals, and documents.	Your Dell computer is uniquely identified using a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, enter the Service Tag or Express Service Code at <a href="#">Dell Support Site</a> .  For more information about how to find the Service Tag for your computer, see <a href="#">Locate the Service Tag on your computer</a> .
Dell knowledge base articles	<ol style="list-style-type: none"> <li>1. Go to <a href="#">Dell Support Site</a>.</li> <li>2. On the menu bar at the top of the Support page, select <b>Support &gt; Support Library</b>.</li> <li>3. In the Search field on the Support Library page, type the keyword, topic, or model number, and then click or tap the search icon to view the related articles.</li> </ol>

## Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see [Dell Support Site](#).

 **NOTE:** Availability of the services may vary depending on the country or region, and product.

 **NOTE:** If you do not have an active Internet connection, you can find contact information in your purchase invoice, packing slip, bill, or Dell product catalog.

## Revision history

Tracks all updates that are made to the document. It typically includes the date of change, version number, and a brief description of the modification. This log helps maintain transparency, accountability, and a clear timeline of progress.

**Table 41. Revision history**

Revision	Date	Description
A00	10-15-2025	Original publish date.